
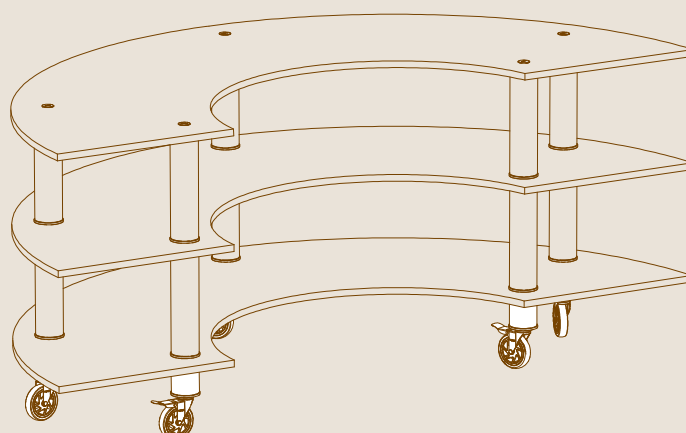


# Modular

SYSTEM

## CASTERS


ASSEMBLY INSTRUCTIONS

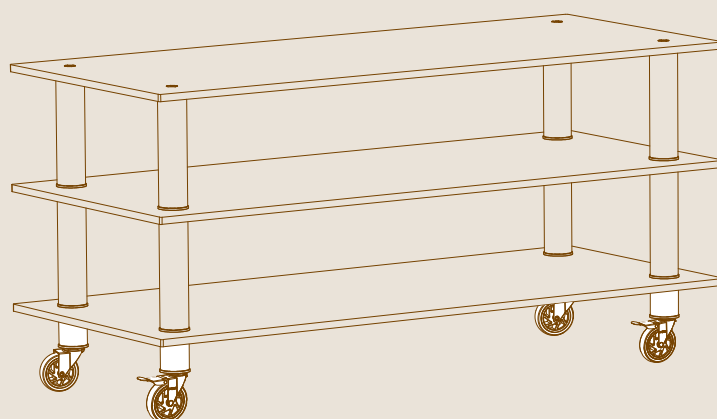


FITS LARGE, MEDIUM AND SMALL UNITS  
CLASSIC, STANDARD AND CREATIVE RANGES

# PARTS

## CLASSIC AND STANDARD RANGE

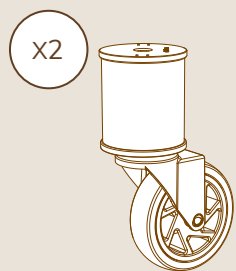


CASTERS

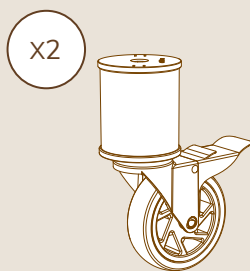


CASTERS WITH BRAKES

## CREATIVE RANGE

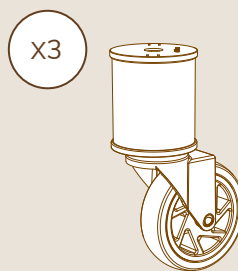


CASTERS

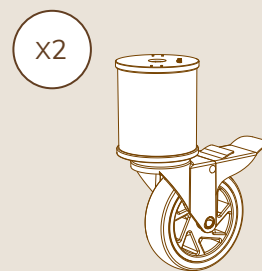

CASTERS WITH BRAKES


## ASSEMBLY

1

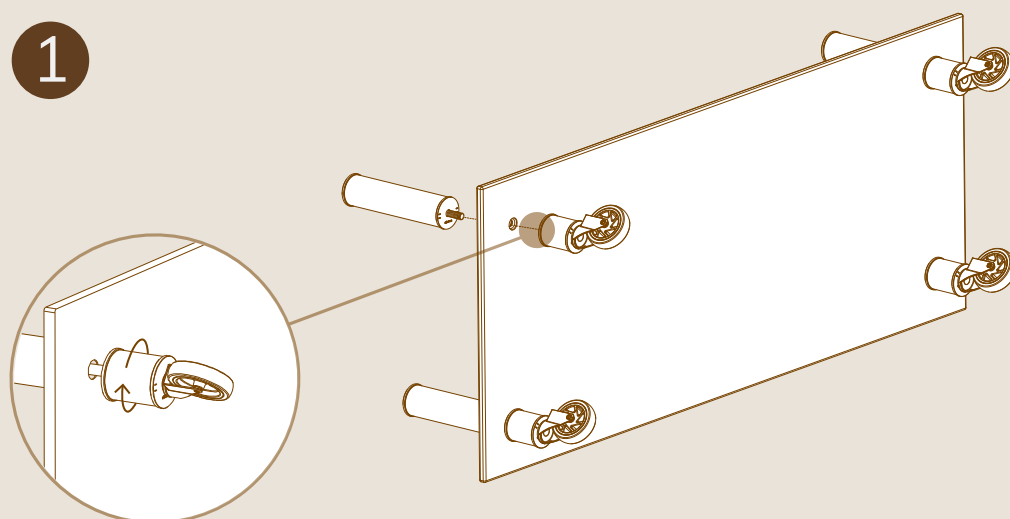

2

Flip over and continue building according to the requested station's instruction manual.

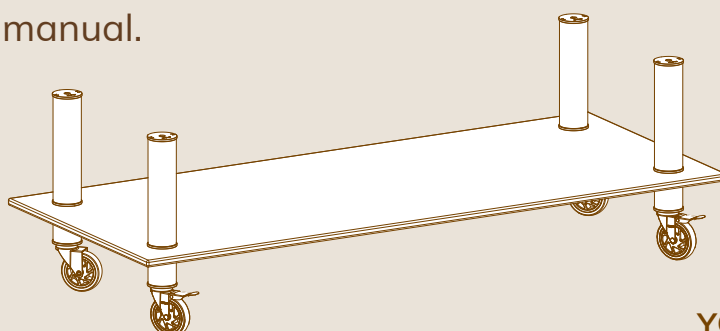

YOU DID IT, WAY TO GO!

### PLEASE NOTICE:

Maximum load capacity on Large Classic unit with casters:  
Static: 220lb | 100Kg Moving: 175lb | 80kg  
When transporting, recommended to empty unit.  
Do not use casters on back bars and multiply shelving units without a consultant.

