



Roll'n

 
SERVICE CART

ASSEMBLY INSTRUCTIONS




Parts

CONFIGURATION 1

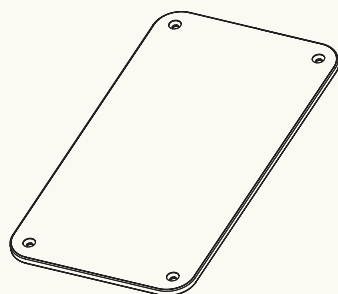


X3
BHP PANEL
L35.4" W20.8" | L90cm W53cm

 CONFIGURATION 2

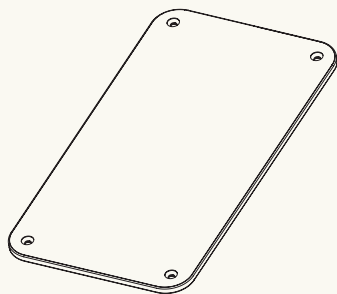

OR

 
+

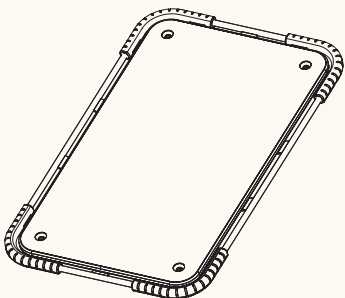

X2
BHP PANEL
L35.4" W20.8" | L90cm W53cm


X1
BHP PANEL WITH BUMPER SYSTEM
L38.5" W24" | L97.5cm W60.5cm

 HANDLE 1

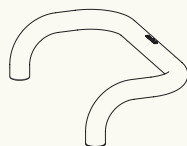




X1
GENUINE LEATHER HANDLE

 HANDLE 2

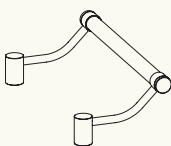


OR

   X1
STAINLESS STEEL HANDLE

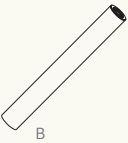
X1	X2	X2	X4	X4	X6	X2
						
ALLEN KEY FOR M16 SCREWS	M16 ALLEN SCREWS	SCREW CAPS	CASTERS WITH BRAKES	SERRATED LOCK WASHERS	SERVICE CART SEGMENTS 12" 30cm	

1

 
Start by turning one panel on its side.
Screw the segments tightly into the leather handle.
If your cart includes a stainless steel handle instead of a leather handle,
it should look like drawing 1.1.

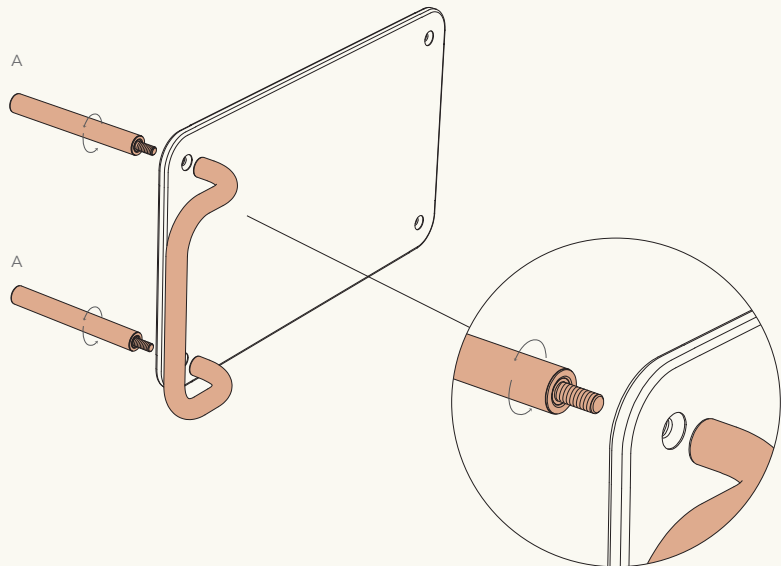

 1.1 Stainless steel handle

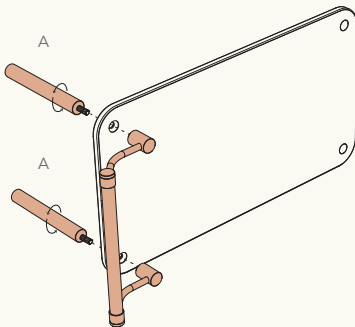

2

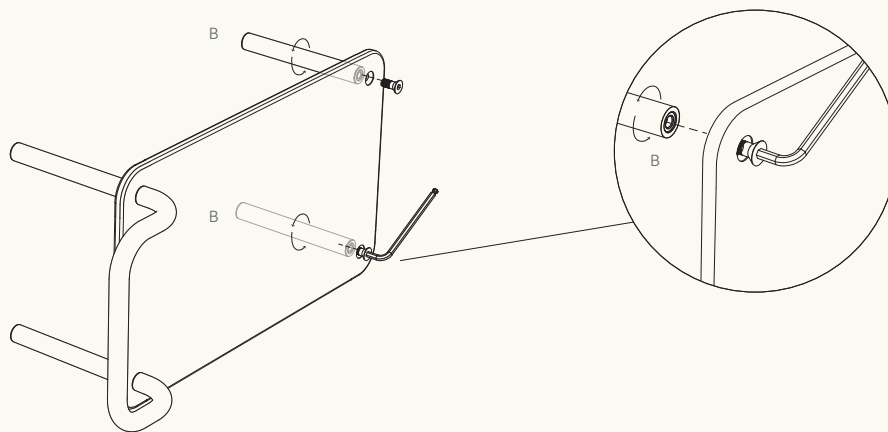


ALLEN KEY FOR
M16 SCREWS

3

Turn the cart upside down.

NOTICE: Make sure to tighten the segments as well as possible.

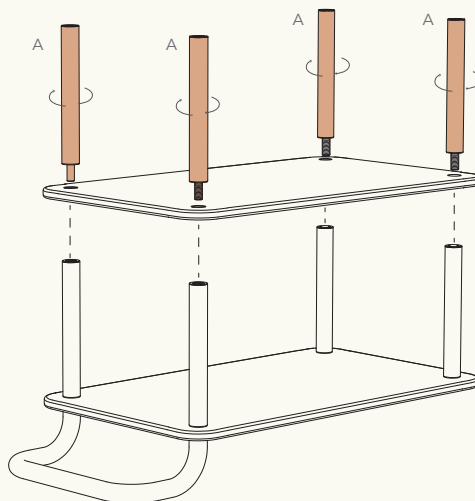



4

Lock the casters and place the lock washers on the screw holes.
Screw the new casters onto the cart as tightly as possible.


*If your cart includes a bumper system, it should look like drawing 4.1




X4
SERRATED
LOCK WASHERS

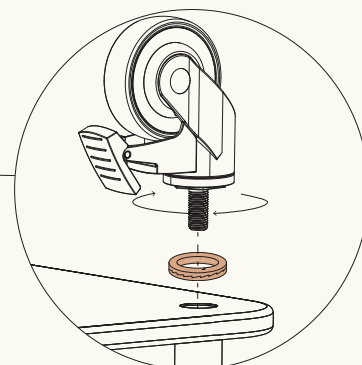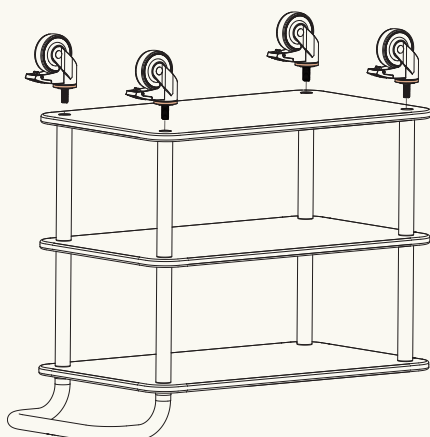

4.1 Bumper system - Position the BHP bumper system panel in the correct orientation, as shown in the drawing.

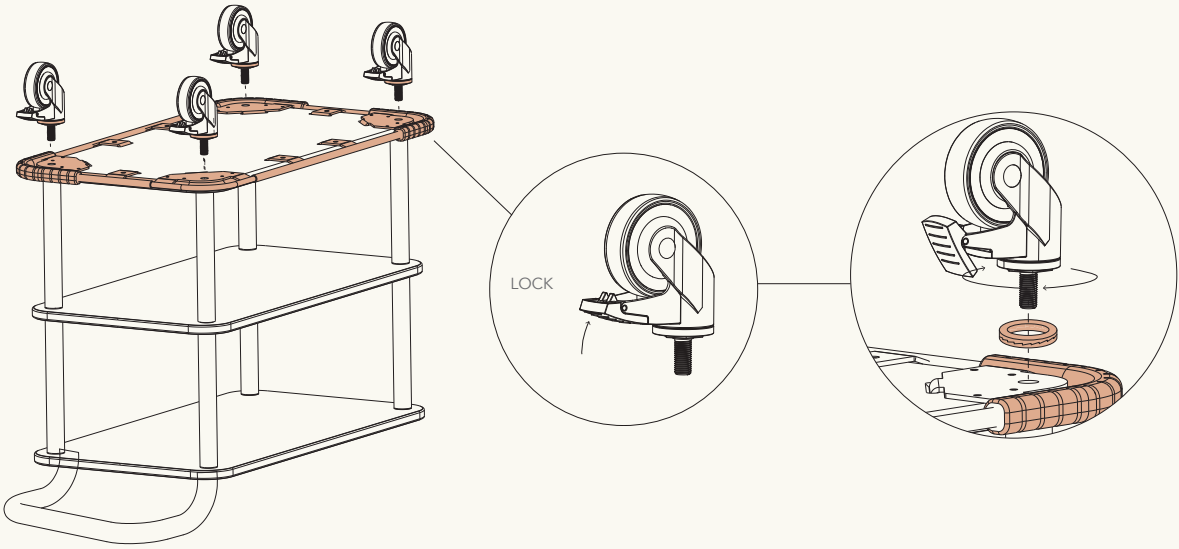

5

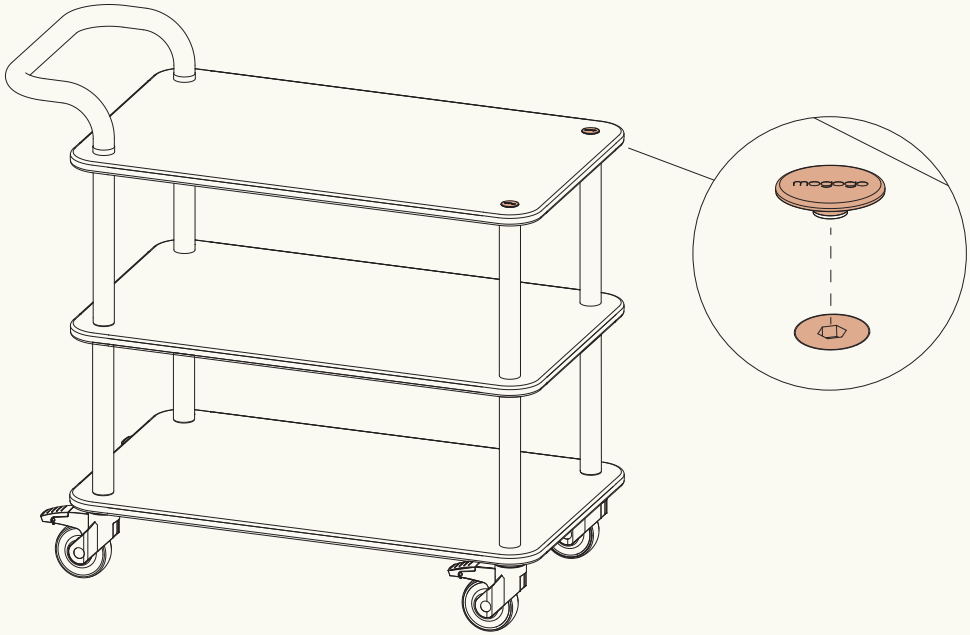

Great job,
you're good to go!