


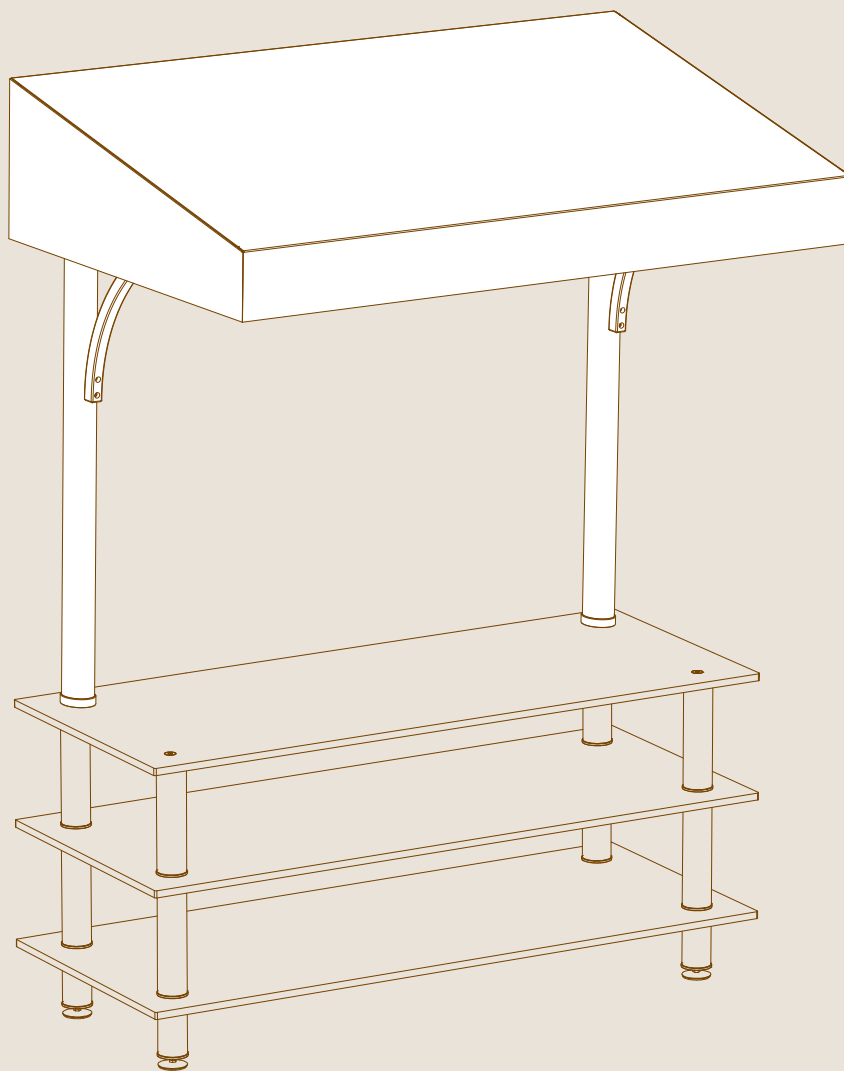

# Canopy


Assembly instructions




ITEM# CY001 / CY002

## SMART & SIMPLE


### Parts

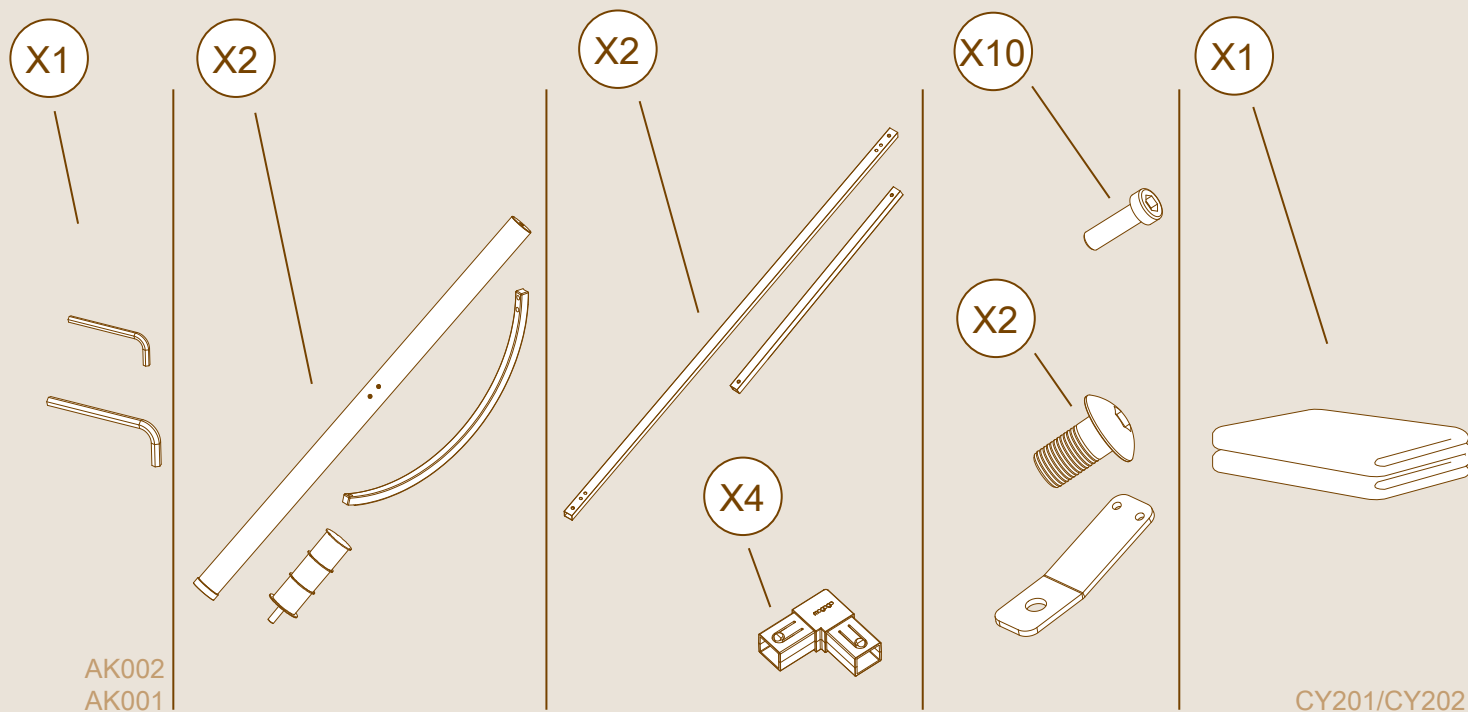


Assemble the frame by clicking the 4 plastic corners.

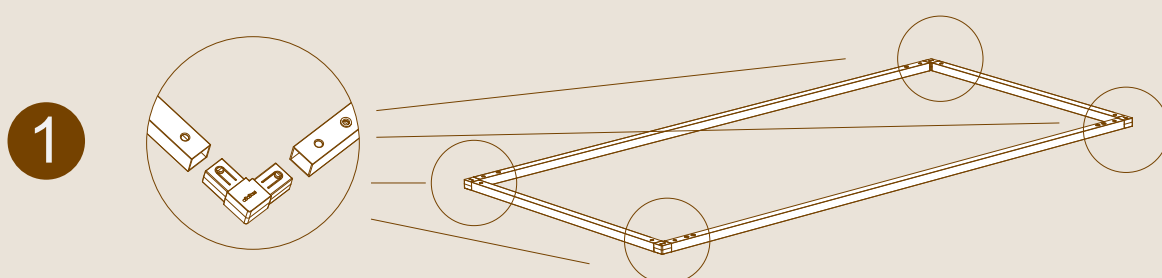

Attach the bamboo arch to the frame using the side with the single hole.

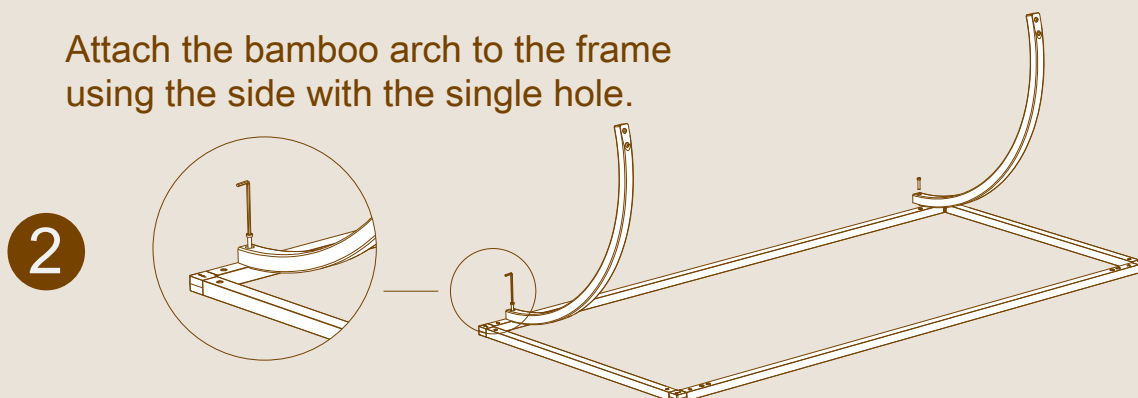


3

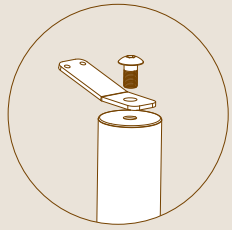



X2

Screw on the angled connector to the stainless steel poles, as shown here facing the opposite side of the holes in the pipe.


4

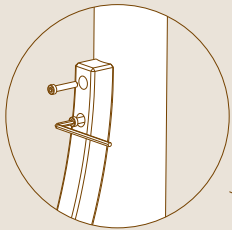

Attach the stainless steel pole to the frame and to the bamboo arch.

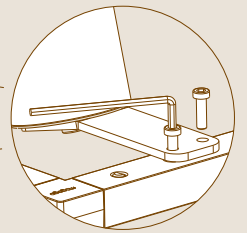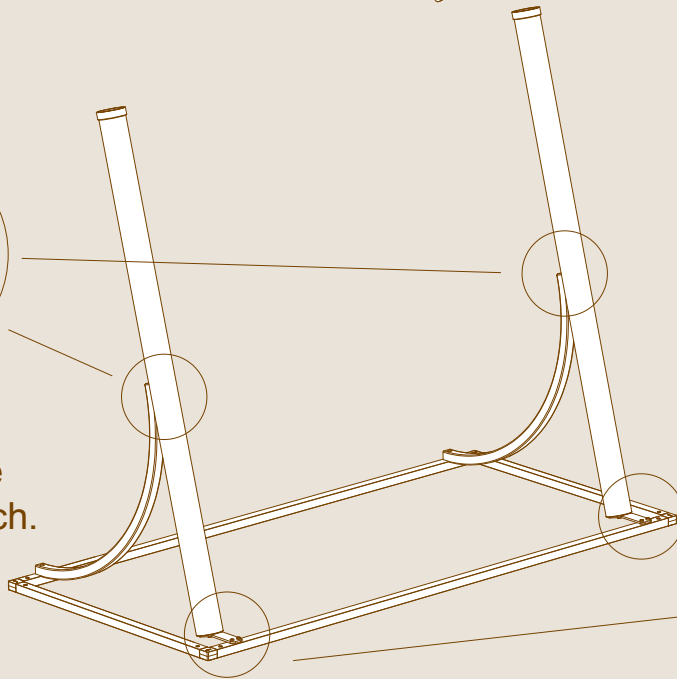


5

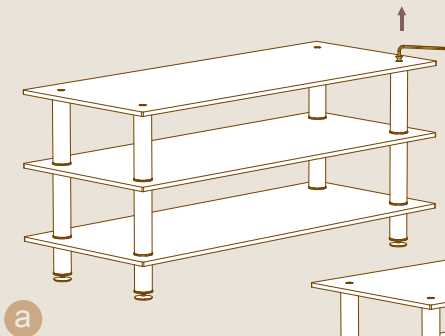


a

b

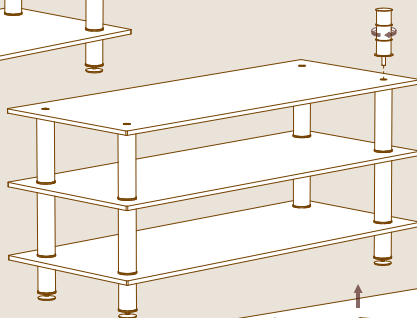


Attach the connectors AD001 to your 6' mogogo table.


c

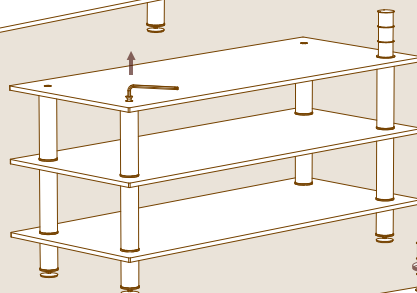

d

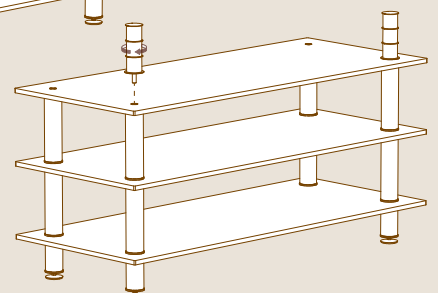

7

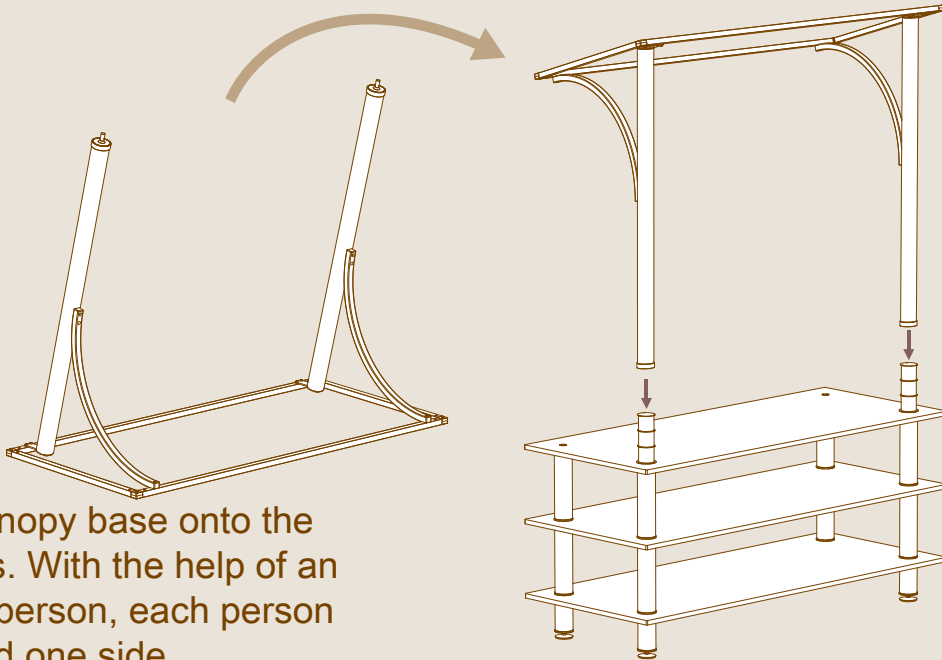

Flip the canopy base onto the connectors. With the help of an additional person, each person should hold one side.

8



Spread the fabric over the frame, starting with the side with the long stitches, on the highest corners of the frame.

9

