


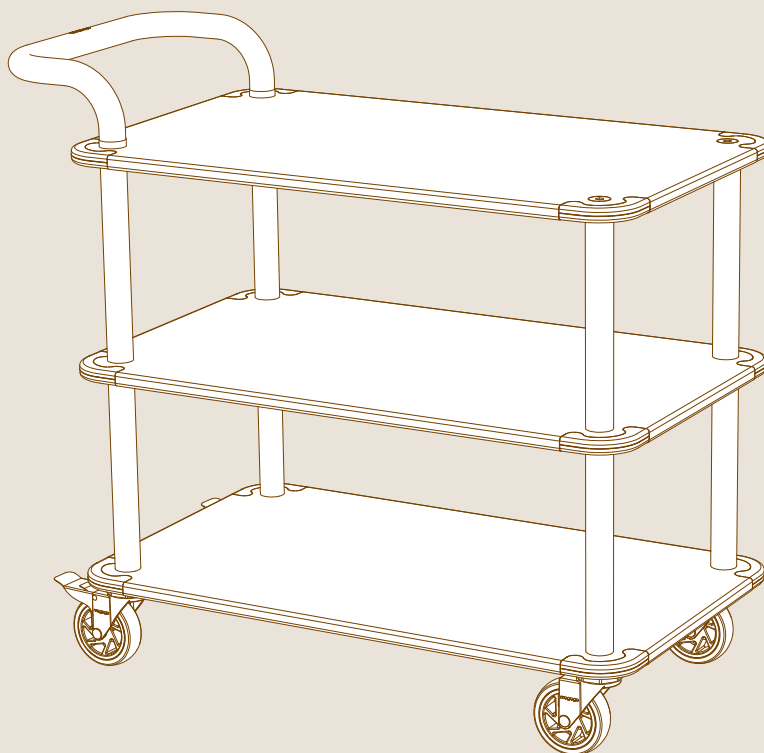


SERVICE CART

ASSEMBLY INSTRUCTIONS




PARTS

X1




ALLEN KEY FOR M16

X1




FLAT KEY

X2



M16 ALLEN SCREWS

X2



SCREW CAPS

X3




BAMBOO BASIC TOPS L35.4" W20.8" | L90cm W53cm

X1




BROWN SYNTHETIC LEATHER HANDLE

X6




SERVICE CART SEGMENTS 12" | 30cm

X2




SERVICE CART SEGMENTS 12" | 30cm

X2



CASTERS


X2




CASTERS WITH BRAKES

ASSEMBLY


1 Disassemble legs into segments.

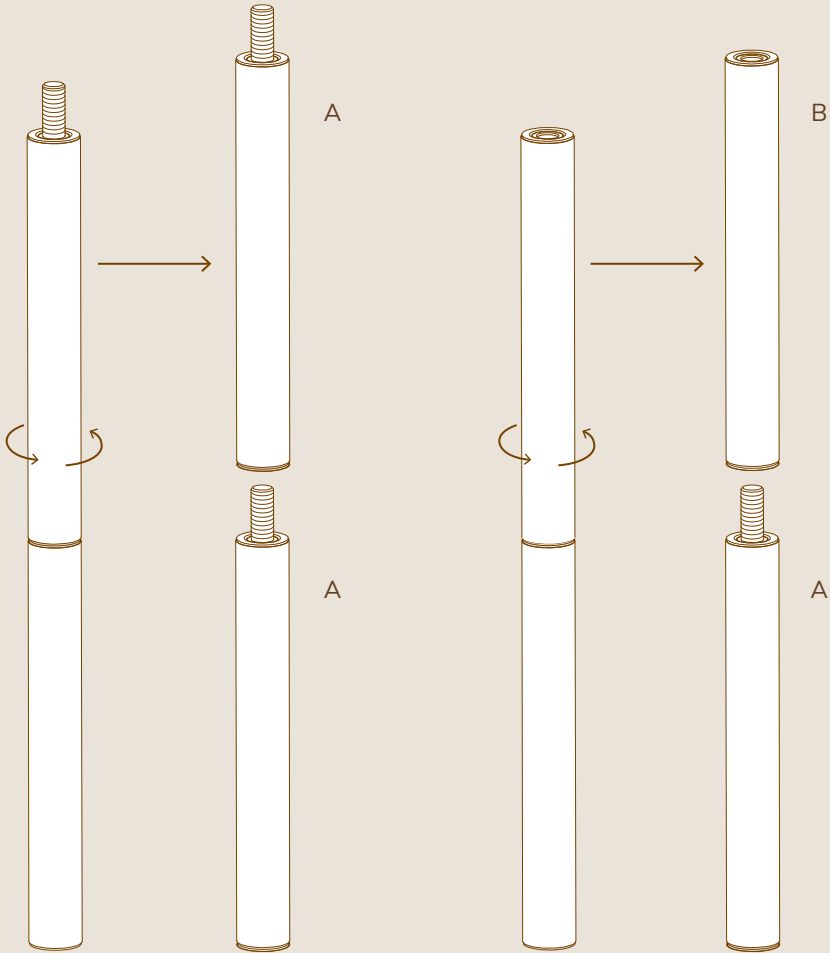

2 Start by turning one panel on its side.

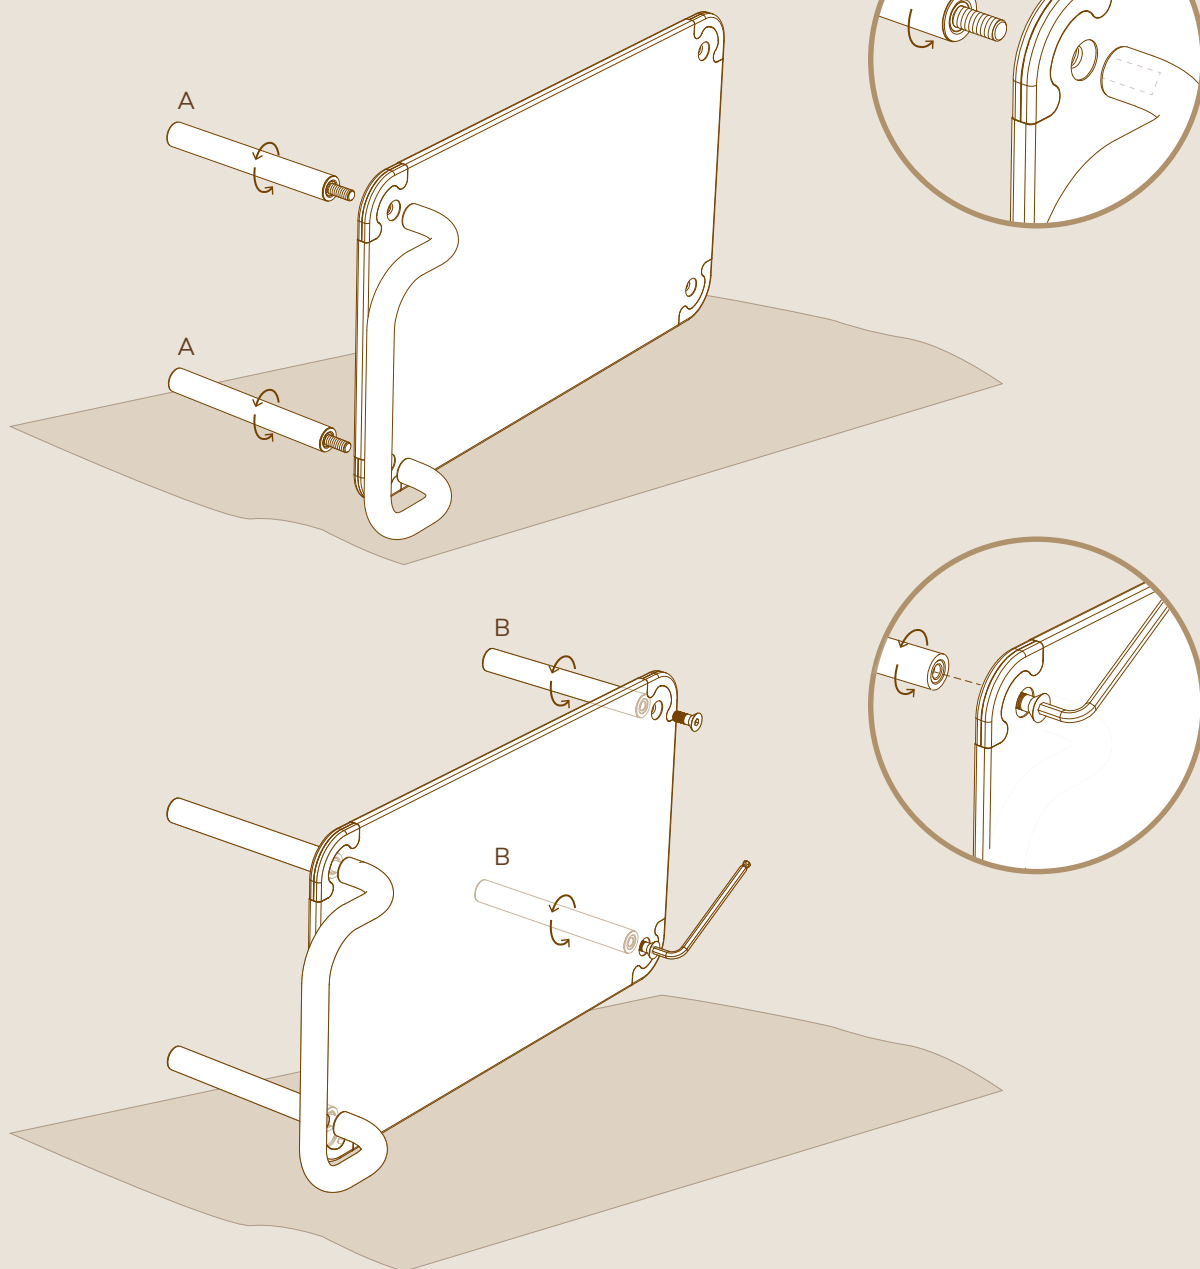


3 Turn the panel all the way over.

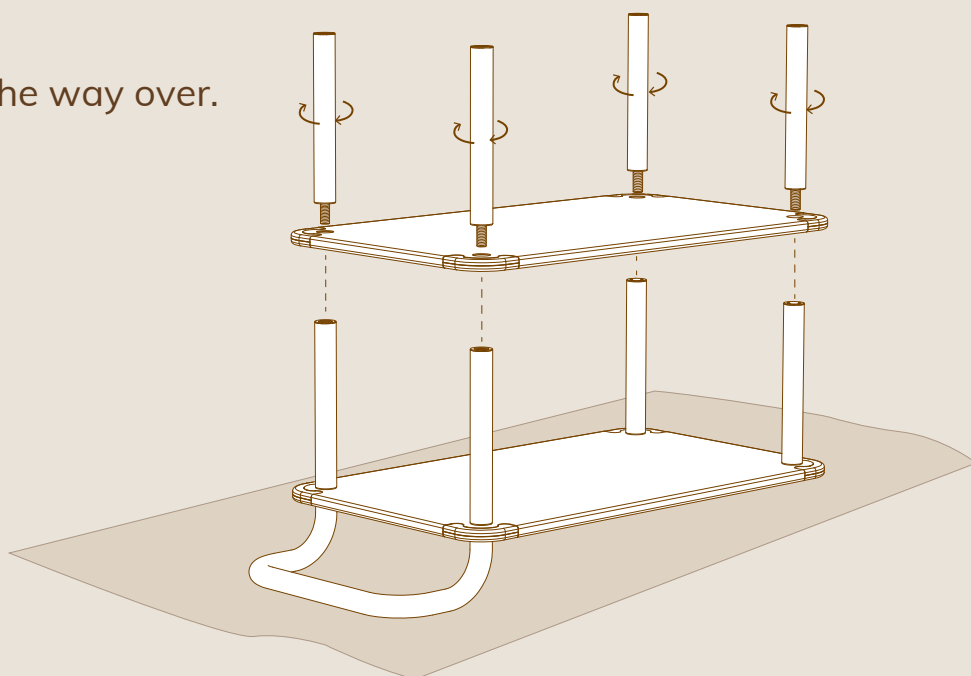


4

Screw the casters on and tighten using the flat key.
Casters with brakes should be aligned to the handle.

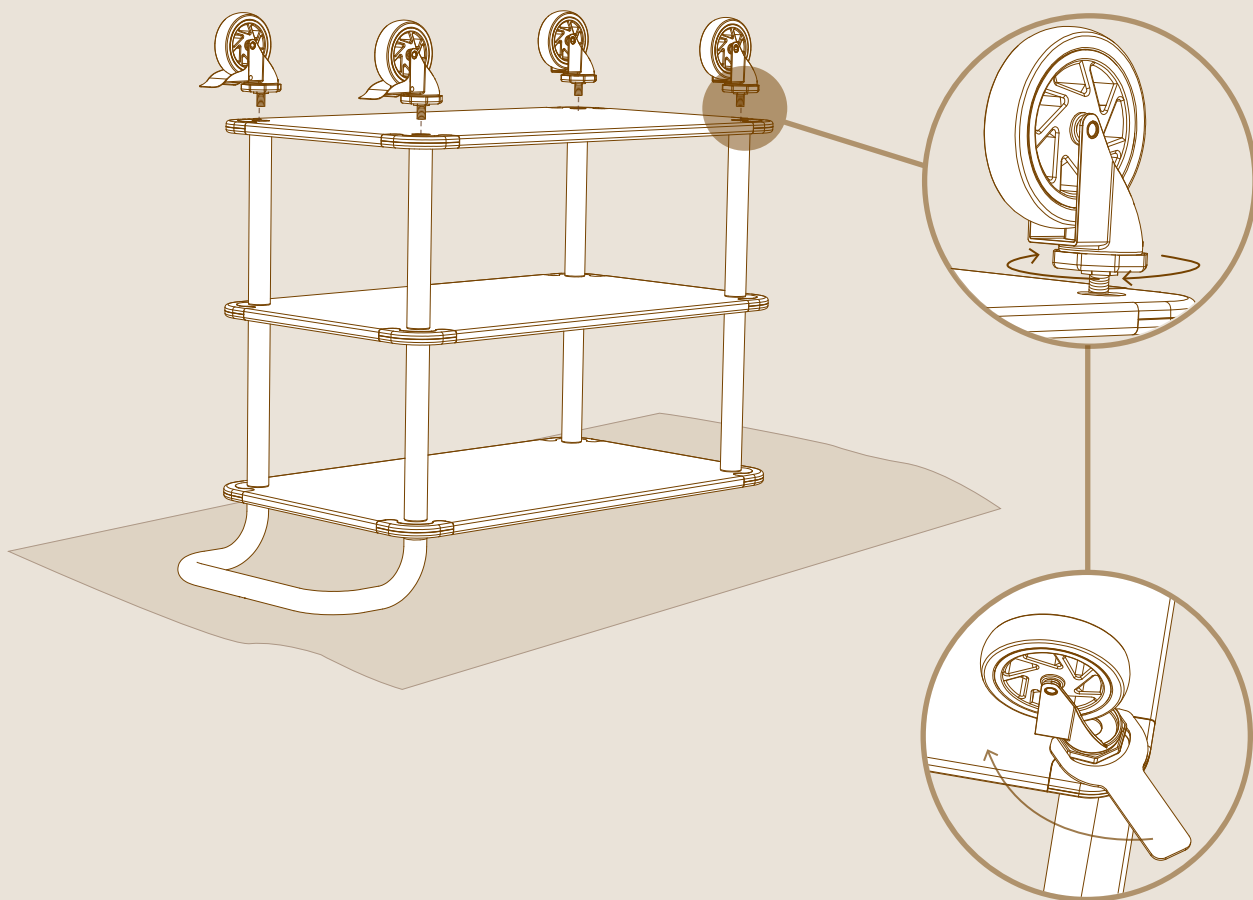

5

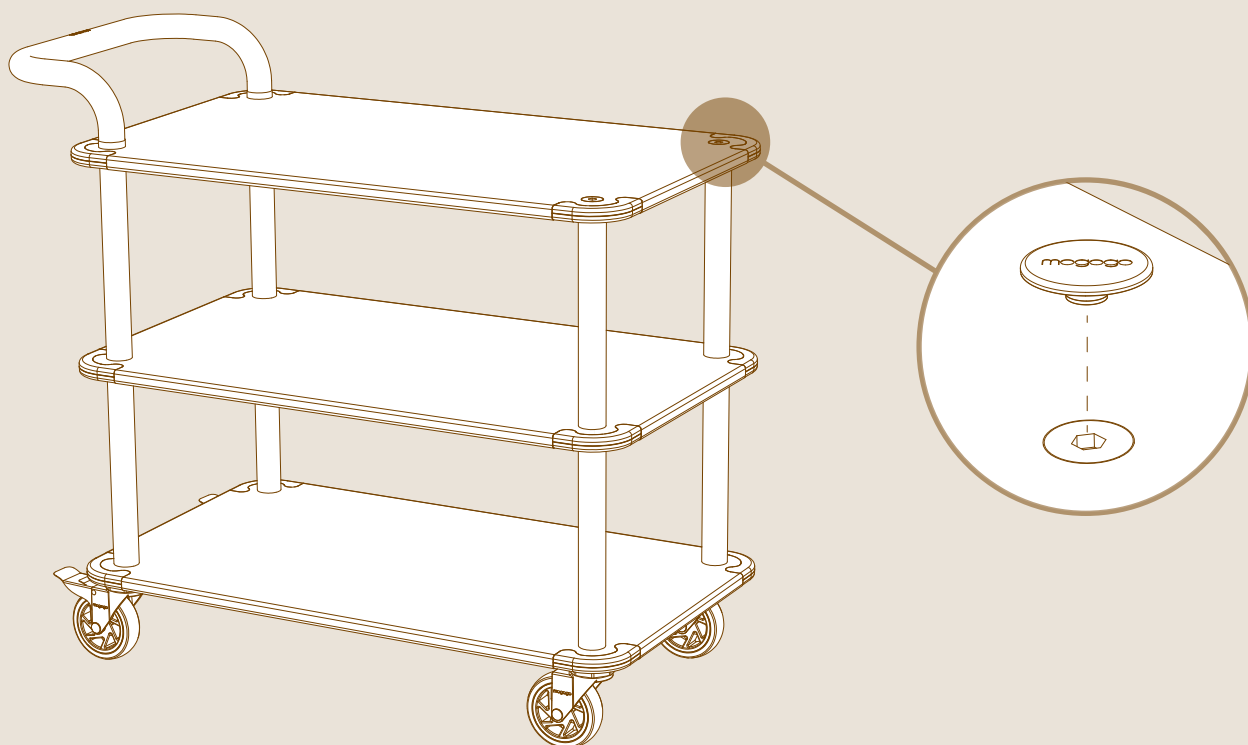

GREAT JOB, YOUR GOOD TO GO!