


mogogo
BUFFET SOLUTIONS

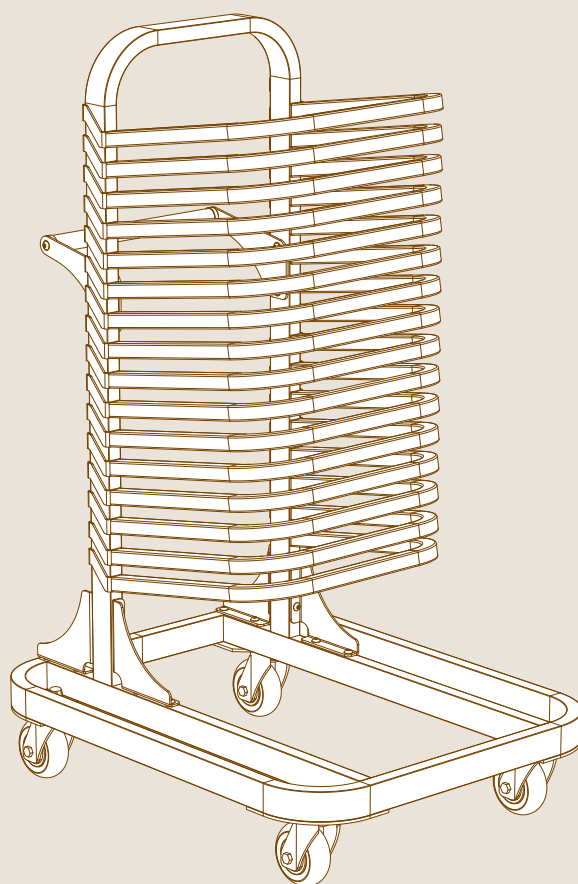







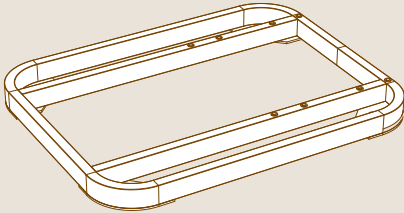



UTILITY

COLLECTION

CLIX ROUND \ SQUARE TOP TRANSFER AND STORAGE CART

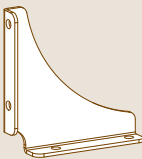


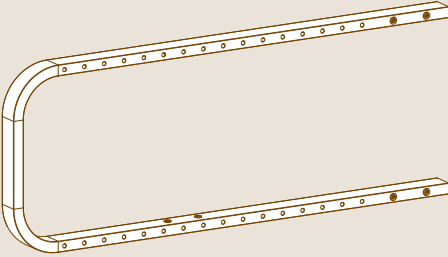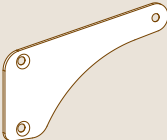PARTS

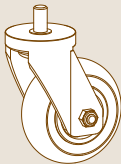
<div>X1</div>  <div>ALLEN KEY FOR M10 SCREWS</div>	<div>X16</div>  <div>TRAY FRAME FOR TOPS</div>	<div>X4</div>  <div>FRAME ANGLES</div>	<div>X1</div>  <div>FLAT KEY</div>
<div>X22</div>  <div>ROUND CAP M10 SCREWS</div>	<div>X1</div>  <div>VERTICAL FRAME</div>	<div>X2</div>  <div>HANDLE SUPPORTS</div>	
<div>X4</div>  <div>SCREW NUTS</div>	<div>X1</div>  <div>HORIZONTAL FRAME</div>	<div>X1</div>  <div>HANDLE</div>	
<div>X4</div>  <div>SCREW CAPS</div>		<div>X4</div>  <div>CASTERS</div>	

ASSEMBLY


1

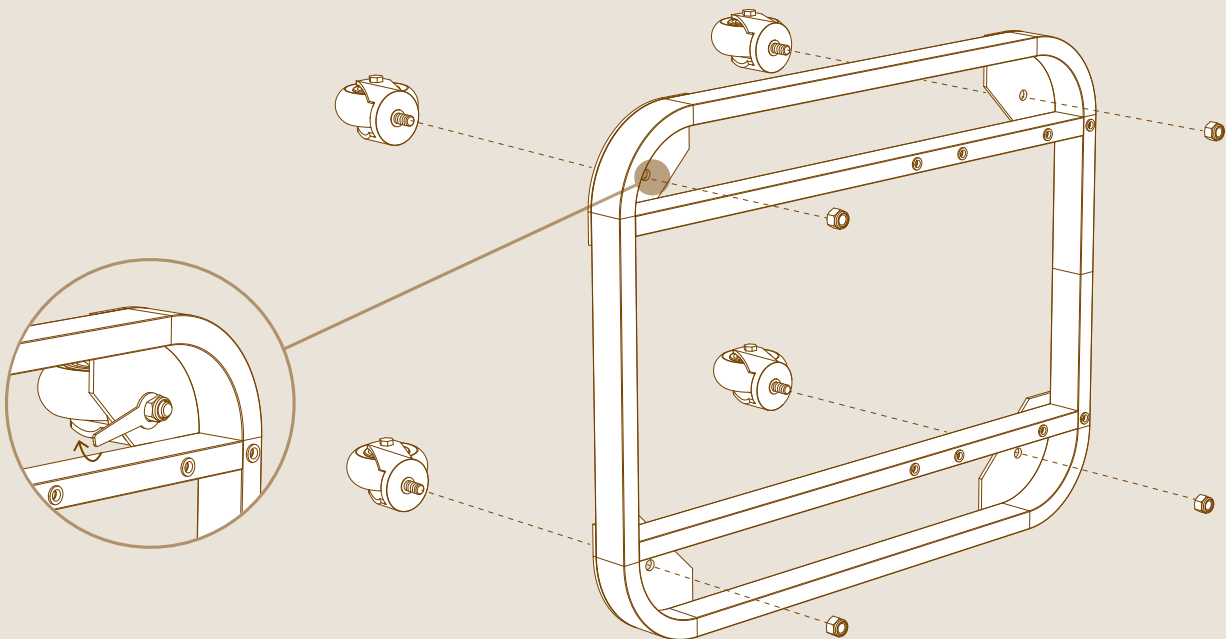

- 2 Keep frame angle screws loose.

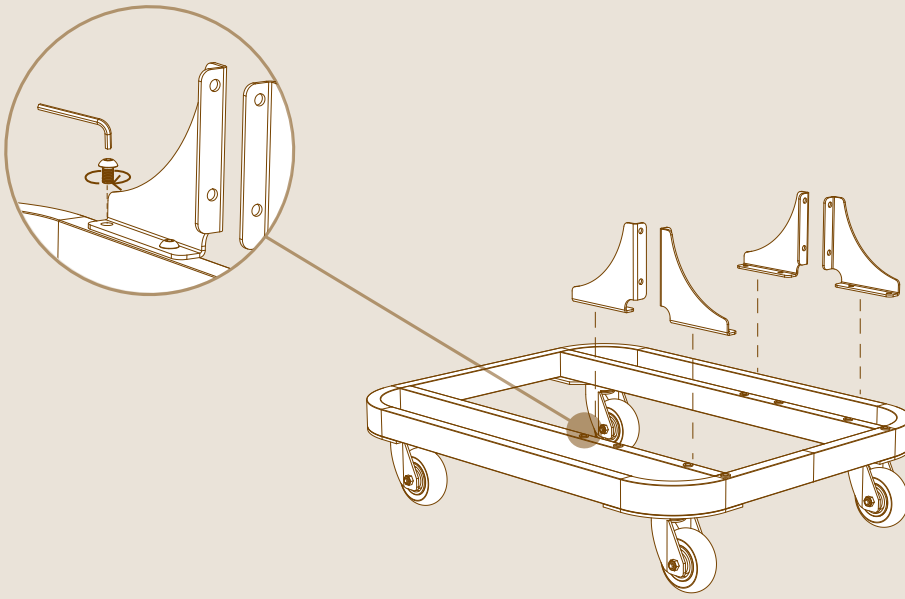


- 3 Make sure the holes on the vertical frame are facing the correct side according to the image. Adjust the 4 frame angles to the vertical frame.

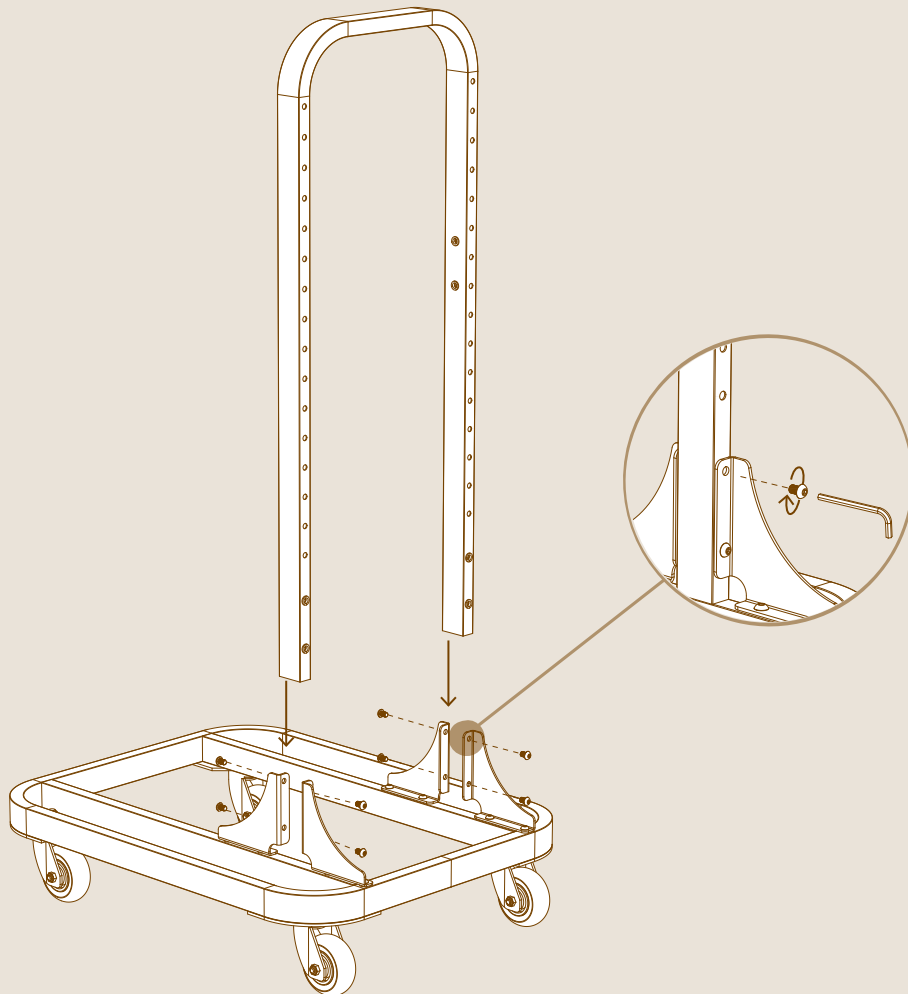


- 4 Tighten all screws.

5

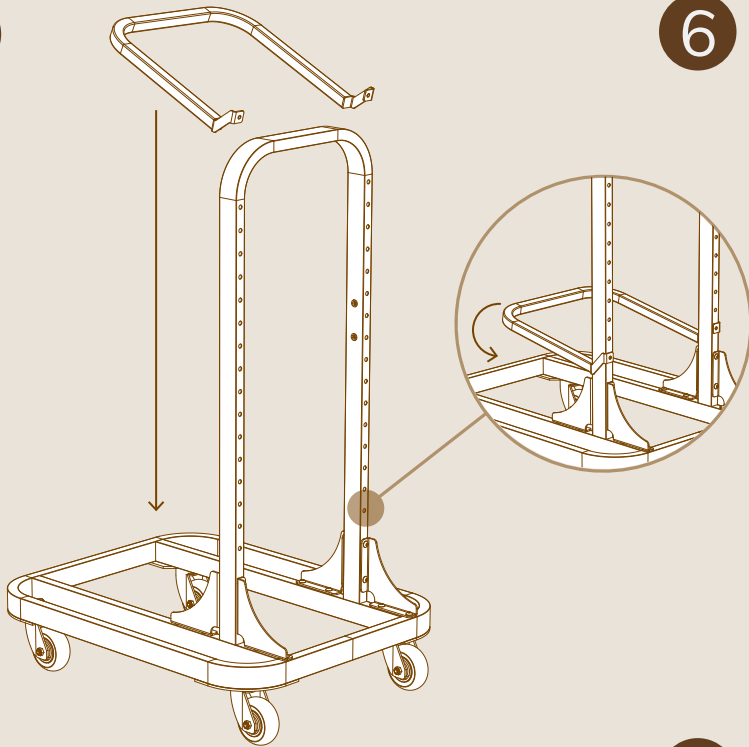


6


Repeat step 5 for all 16 tray frames.

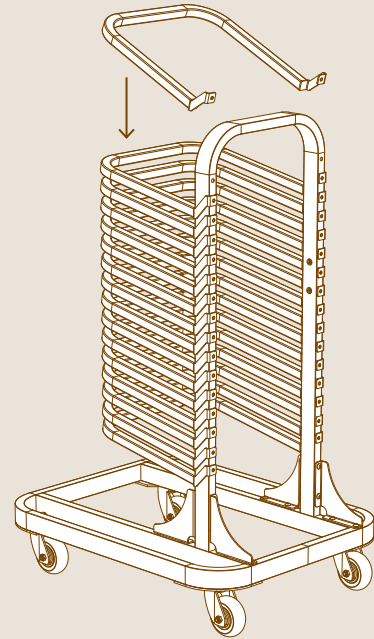

7

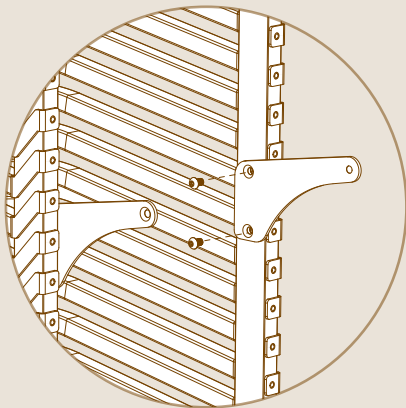


8

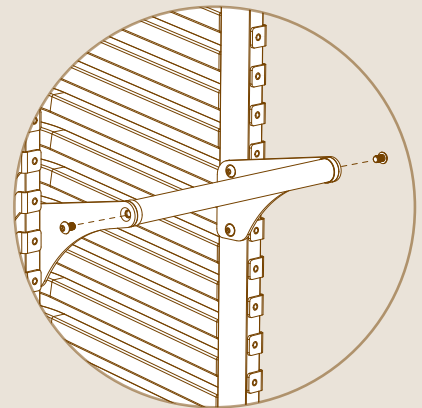

9

Add screw caps on caster screws.

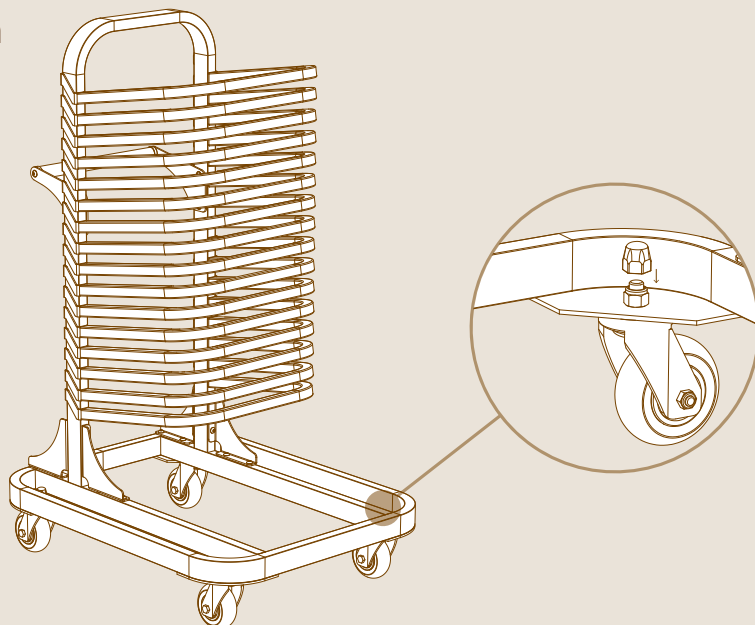

GREAT JOB, YOUR GOOD TO GO!