


V·Shield  
SYSTEM

ACRYLIC END PANELS  
FOR WIDE | NARROW SHIELD  
ASSEMBLY INSTRUCTIONS

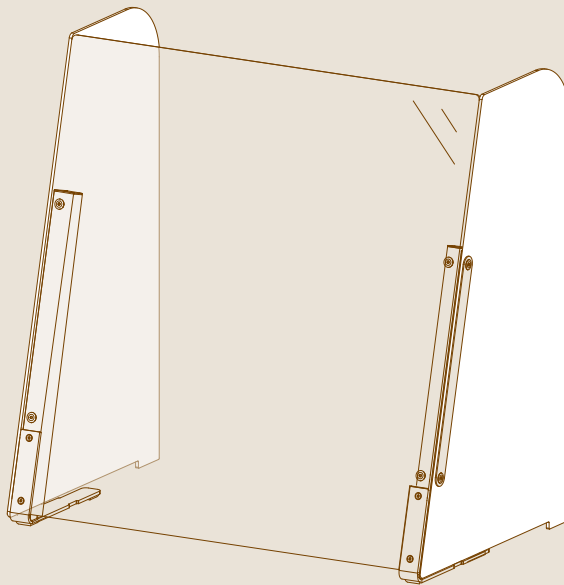

**ATTENTION!**



Clean acrylic panels with warm water and mild soap and rinse thoroughly with water. Dry with soft cloth to prevent water spots. You can also clean and polish with cleaners made specifically for acrylic, like Novus #1 or Brilliantize.



Dry with a soft sponge to prevent water spots.

- ✗ Never use abrasive or highly alkaline cleansers.
- ✗ Never scrape with razor blades or other sharp instruments.
- ✗ Never use benzene, acetone, or carbon tetrachloride.
- ✗ Never use cleaners such as Windex or 409.

# PARTS

X4



SCREWS

X2




END PANELS  
L35.7" W22" | L90.8cm W56.6cm

X2



PRESSURE DECREASE STRIP

X1




ALLEN KEY FOR M6

# ASSEMBLY


1

Unscrew two side screws using a flat head screwdriver.  
Unscrew guide screw if it is assembled.

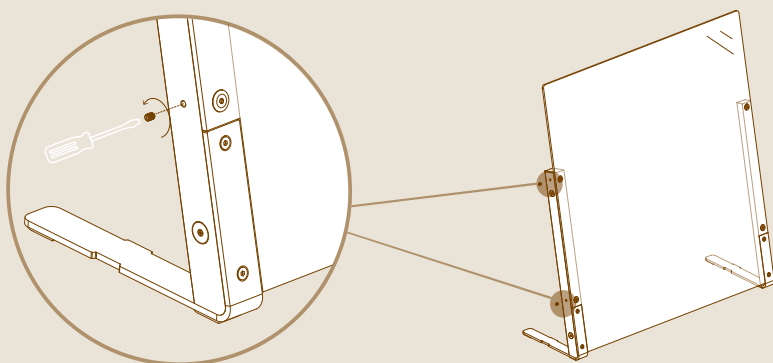

2

Place the end panel and tighten gently.  
Perform the same process on the other side.

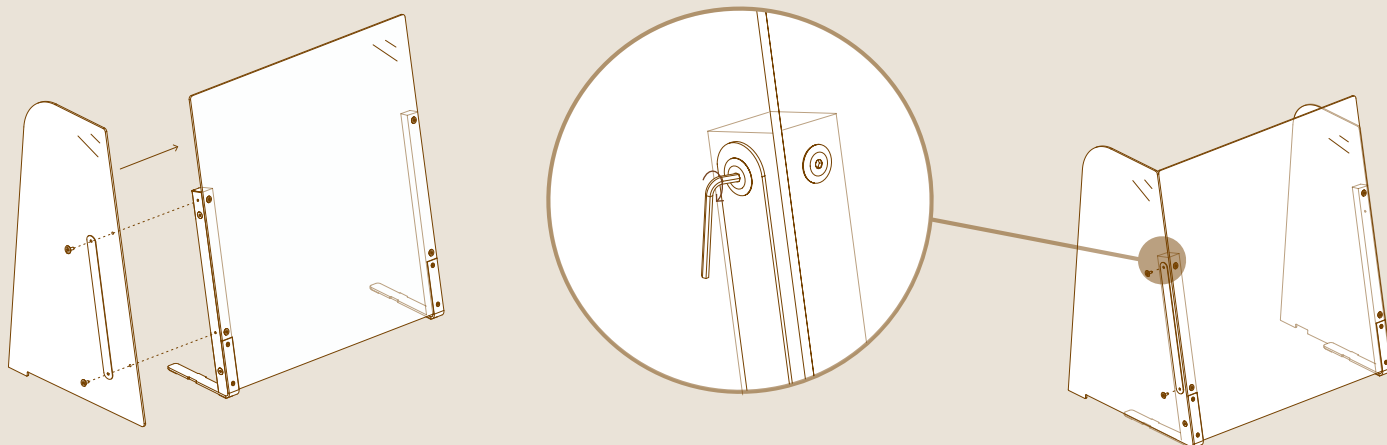

**GREAT JOB, YOUR GOOD TO GO!**

CATALOG# S-ASV-PR-73-01