
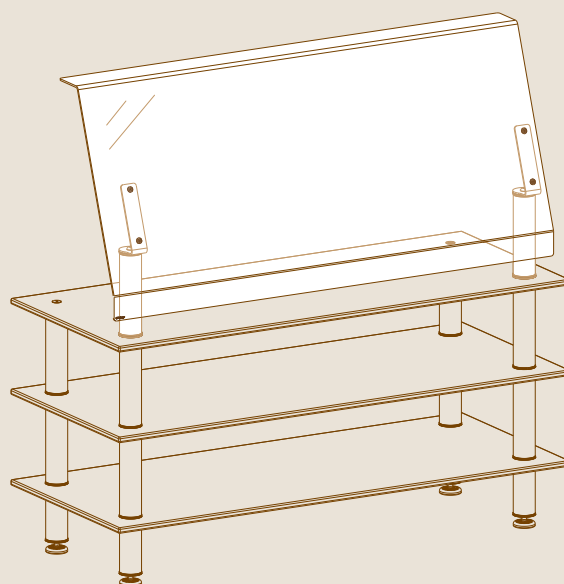


Modular

SYSTEM


HIGH PROFILE ACRYLIC SNEEZE GUARD

ASSEMBLY INSTRUCTIONS

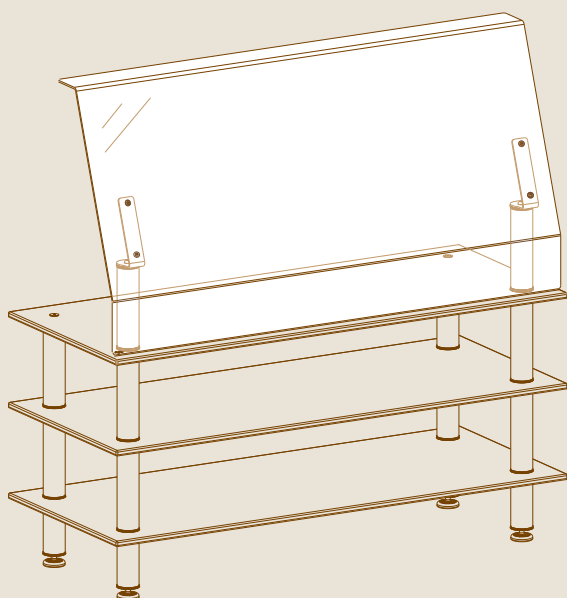


PARTS

X1




ALLEN KEY FOR M6

X1




ALLEN KEY FOR M16

X4




FLAT CAP M6
ALLEN SCREWS

X2



ROUND CAP M16
ALLEN SCREWS


X1

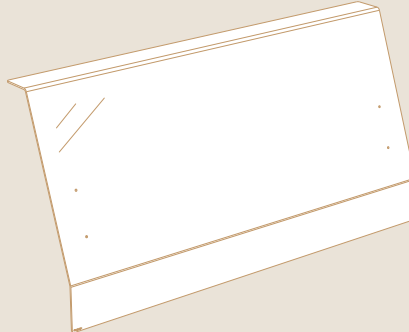

HIGH PROFILE FULL ACRYLIC SNEEZE GUARD


OR

X4

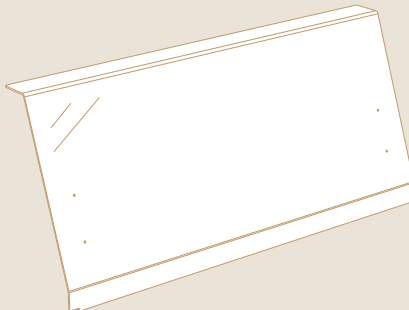


HIGH PROFILE ACRYLIC SNEEZE GUARD WITH OPENING

X2




CONNECTORS

X2



12" | 30cm SEGMENTS

X4




SPACERS

ASSEMBLY


1

Use round cap M6 Allen screws.
Do not over tighten the screws.

- 2 Unscrew flat head screws and replace with the segment



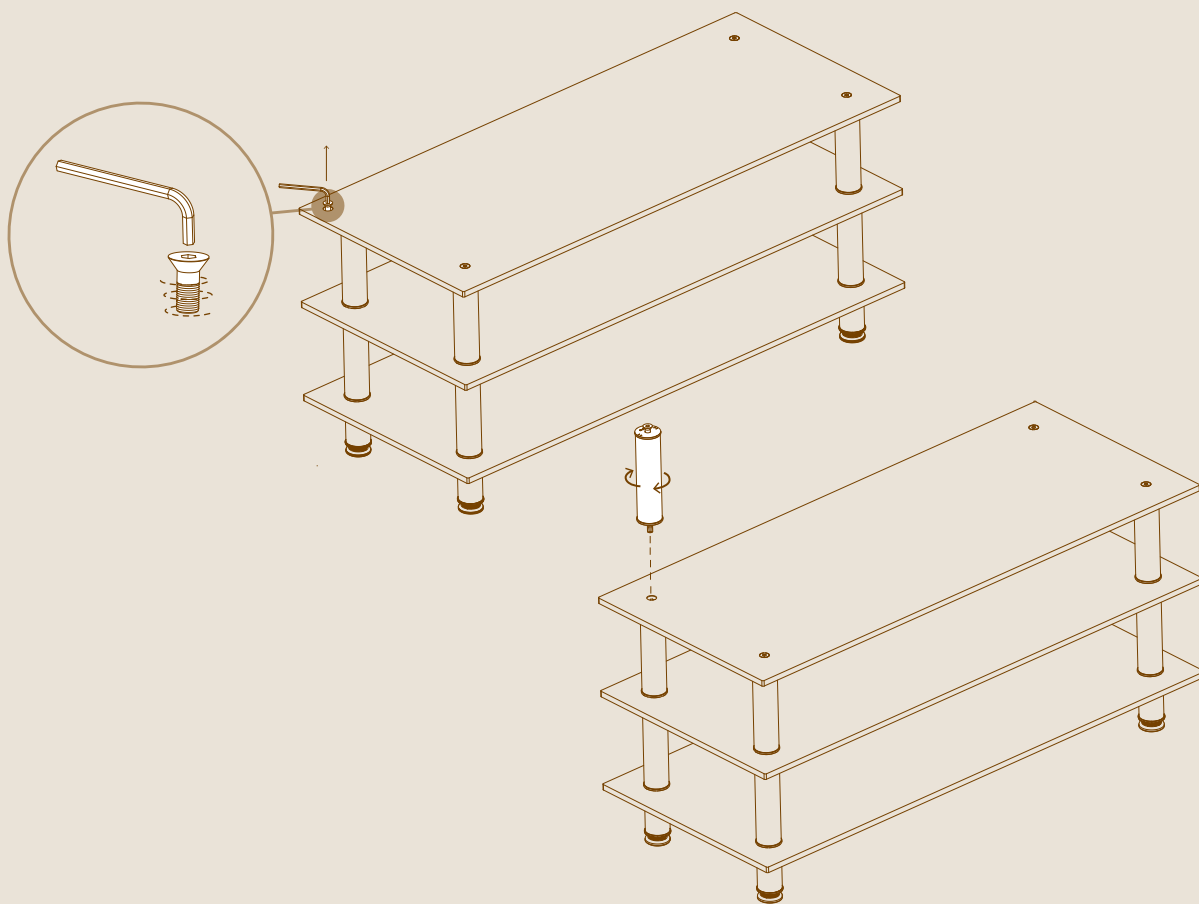


- 3 repeat step 2 for other side

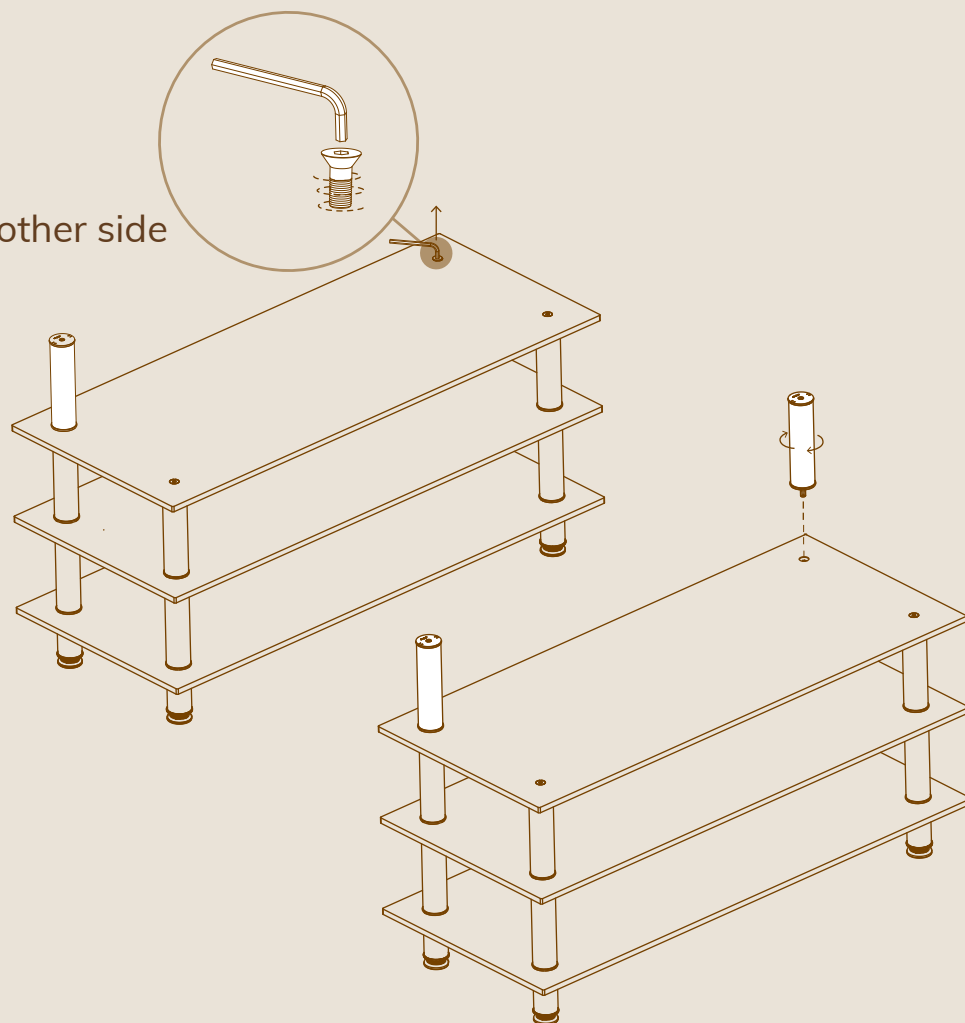


4

Place the sneeze guard on top of the segment.

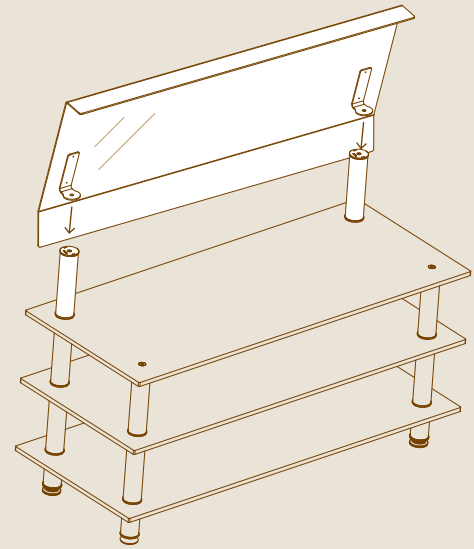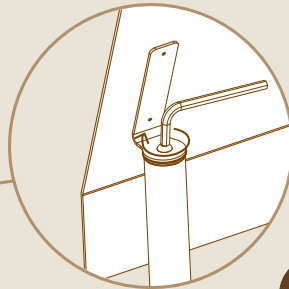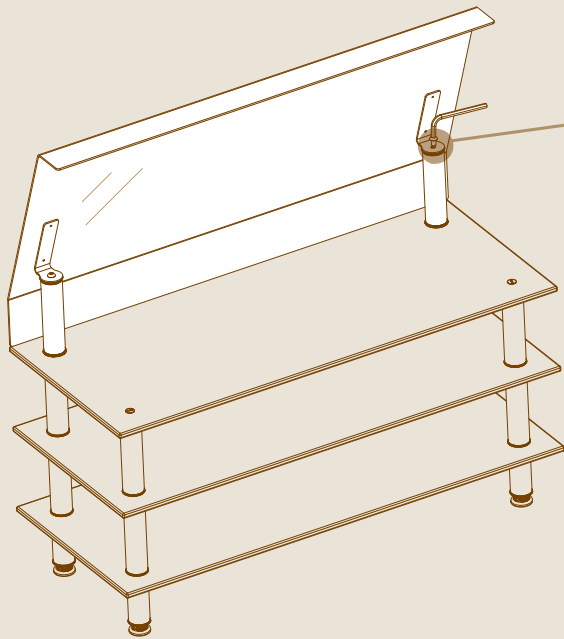

5

Use the round cap M16 Allen screws supplied, to attach the connectors to the segments.

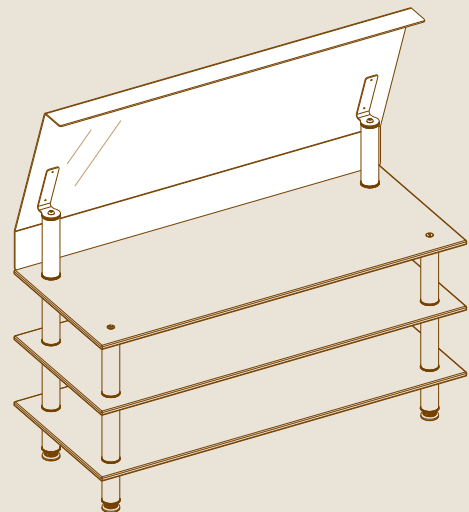

GREAT JOB, YOUR GOOD TO GO!

ATTENTION!



Clean breath guards with warm water and mild soap and rinse thoroughly with water. Dry with soft cloth to prevent water spots. You can also clean and polish with cleaners made specifically for acrylic, like Novus #1 or Brilliance.



Dry with a soft sponge to prevent water spots.

- ✗ Never use abrasive or highly alkaline cleansers.
- ✗ Never scrape with razor blades or other sharp instruments.
- ✗ Never use benzene, acetone, or carbon tetrachloride.
- ✗ Never use cleaners such as Windex or 409.