


Modular

SYSTEM


SIDE SERVING SHELF (FIT HIGH PROFILE SNEEZE GUARD)

ASSEMBLY INSTRUCTIONS

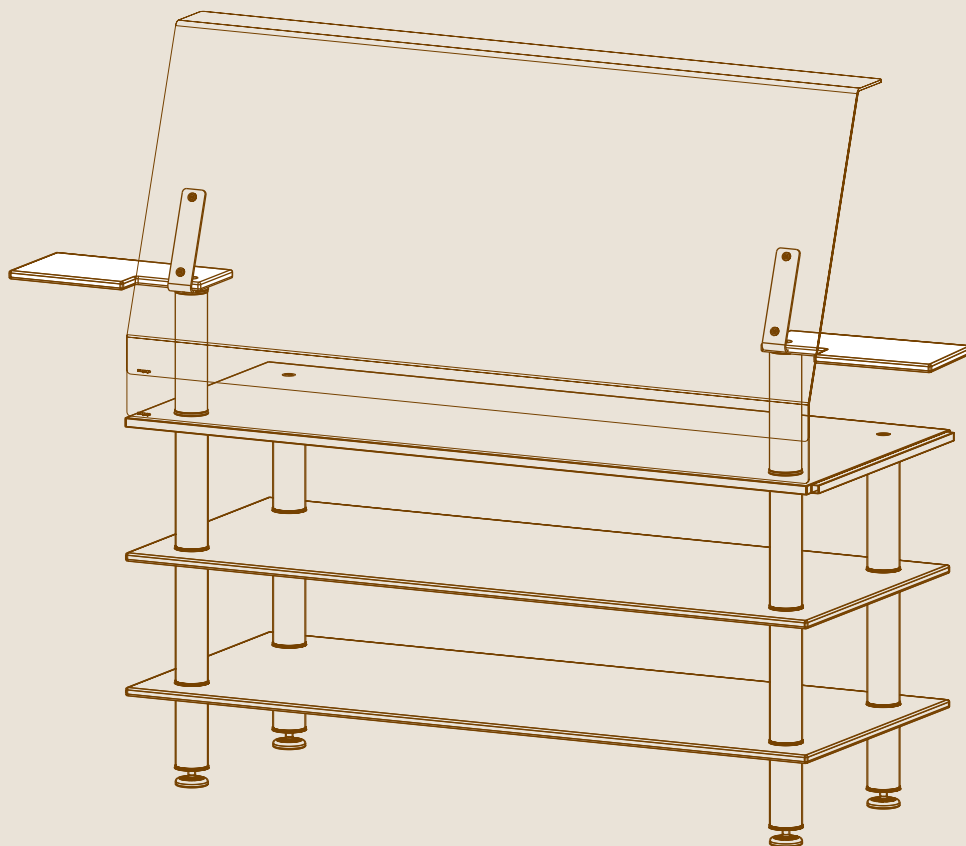


PARTS

X2

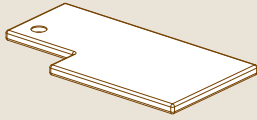

SIDE SERVING SHELF

X1



ALLEN KEY FOR M16
(EXISTING)

X2




M16 ALLEN SCREWS
(EXISTING)

ASSEMBLY

1


Remove round head screws
using the allen key.

* DO NOT UNSCREW BOTH SIDES
AT THE SAME TIME.

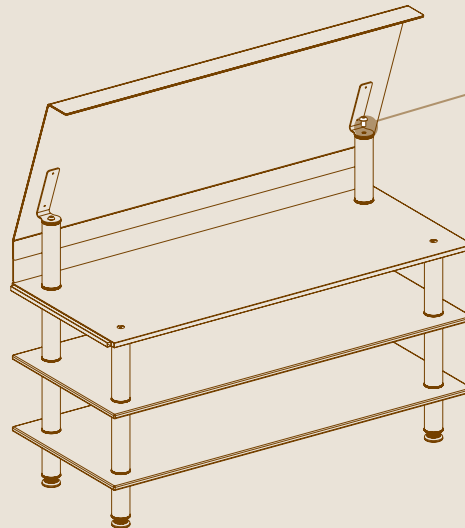


2

Place the side shelf on top of the bracket
and secure using your existing Flat Head Screws.

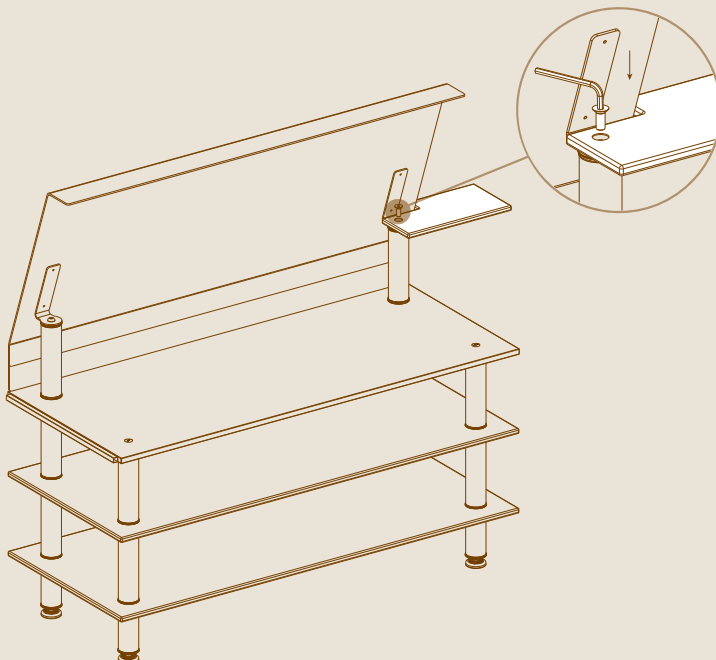


3

Repeat for the other side

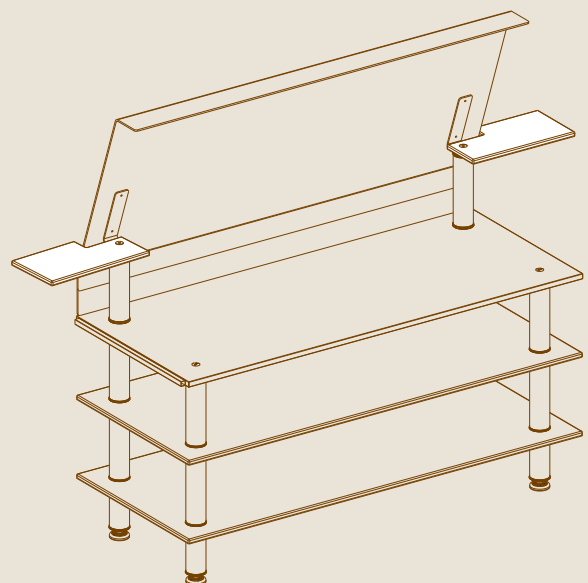


PARTS


- x2

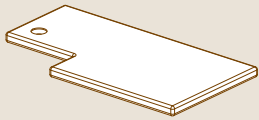

SIDE SERVING SHELF
- x1



ALLEN KEY FOR M16
(EXISTING)
- x2




M16 ALLEN SCREWS
(EXISTING)

ASSEMBLY

- 1


Remove round head screws
using the allen key.

* DO NOT UNSCREW BOTH SIDES
AT THE SAME TIME.

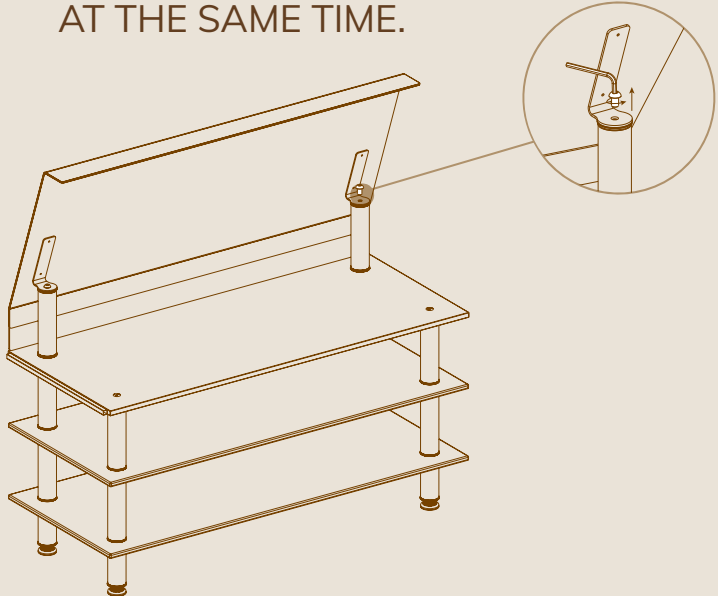


- 2

Place the side shelf on top of the bracket
and secure using your existing Flat Head Screws.

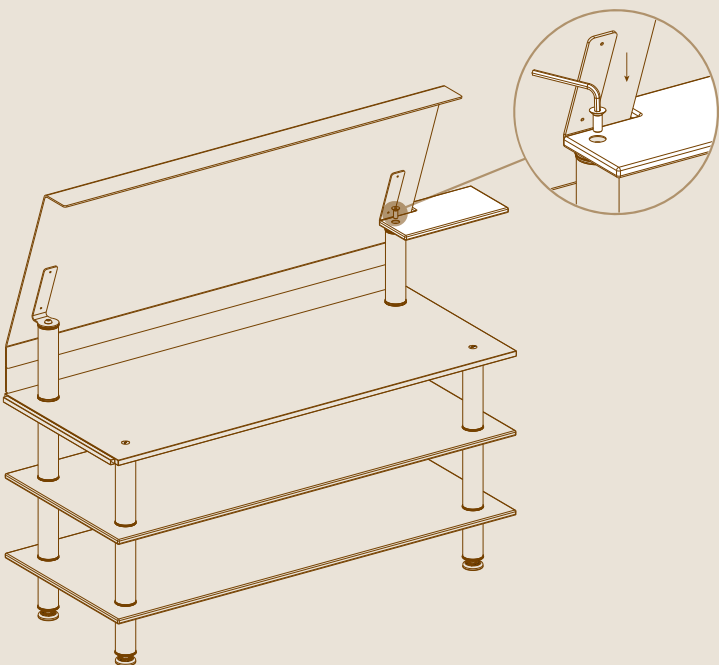

- 3

Repeat for the other side

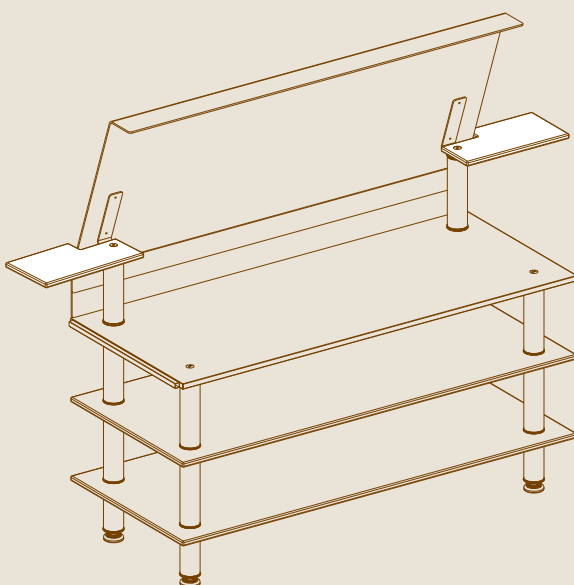



BUFFET SOLUTIONS

Modular

SYSTEM

SIDE SERVING SHELF

(FIT HIGH PROFILE SNEEZE GUARD)

ASSEMBLY INSTRUCTIONS

