







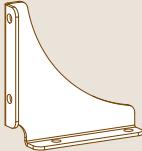

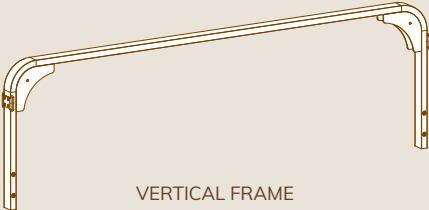


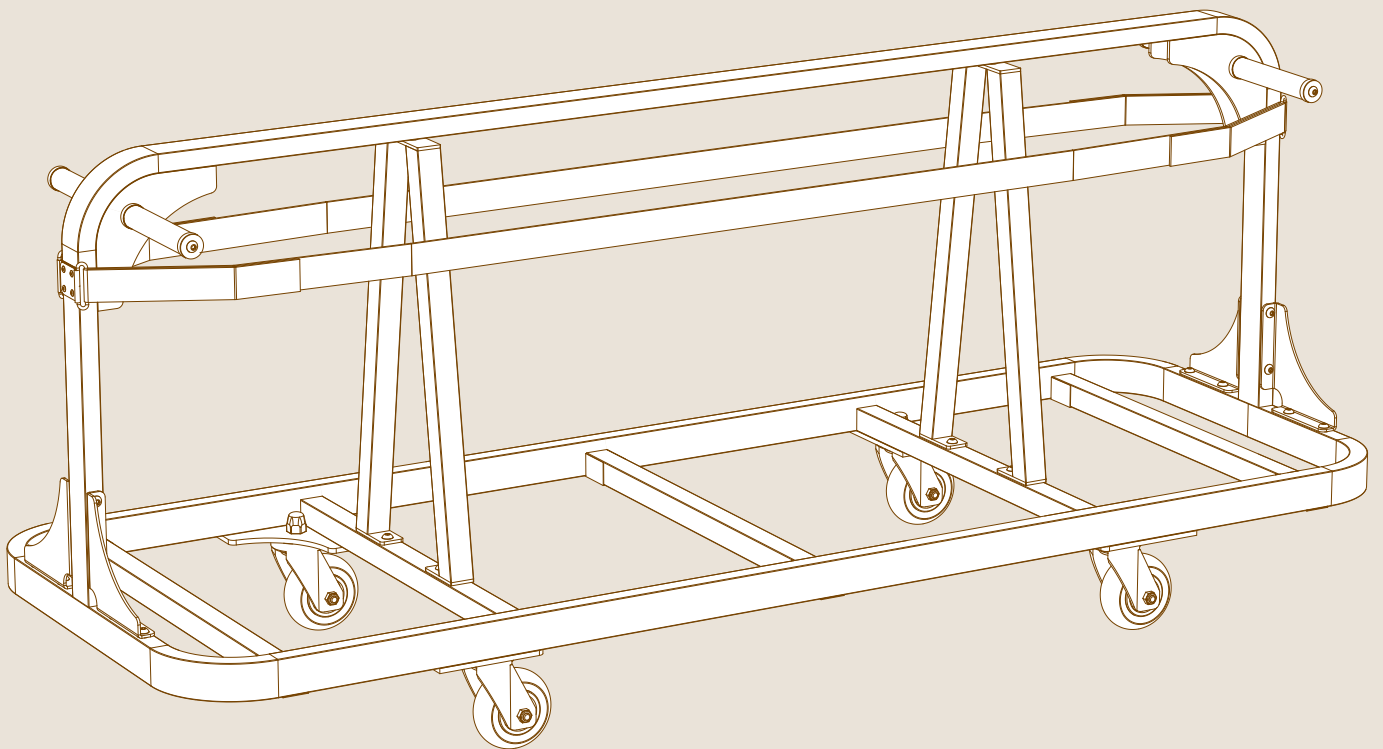



UTILITY
COLLECTION

LARGE PLATE TRANSFER AND STORAGE CART




PARTS

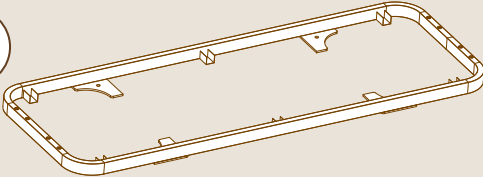
<div><div>X1</div></div> <div>ALLEN KEY FOR M10 SCREWS</div>	<div><div>X2</div></div> <div>STRAPS</div>	<div><div>X4</div></div> <div>VERTICAL SUPPORTER</div>	<div><div>X1</div></div> <div>FLAT KEY</div>
<div><div>X34</div></div> <div>ROUND CAP M10 SCREWS</div>	<div><div>X3</div></div> <div>HORIZONTAL SUPPORTER (2 HOLES)</div>	<div><div>X2</div></div> <div>HORIZONTAL SUPPORTER (4 HOLES)</div>	<div><div>X4</div></div> <div>FRAME ANGLES</div>
<div><div>X4</div></div> <div>SCREW NUTS</div>	<div><div>X1</div></div> <div>VERTICAL FRAME</div>	<div><div>X4</div></div> <div>HANDLES</div>	
<div><div>X4</div></div> <div>SCREW CAPS</div>	<div><div>X1</div></div> <div>HORIZONTAL FRAME</div>	<div><div>X4</div></div> <div>CASTERS</div>	

ASSEMBLY


1

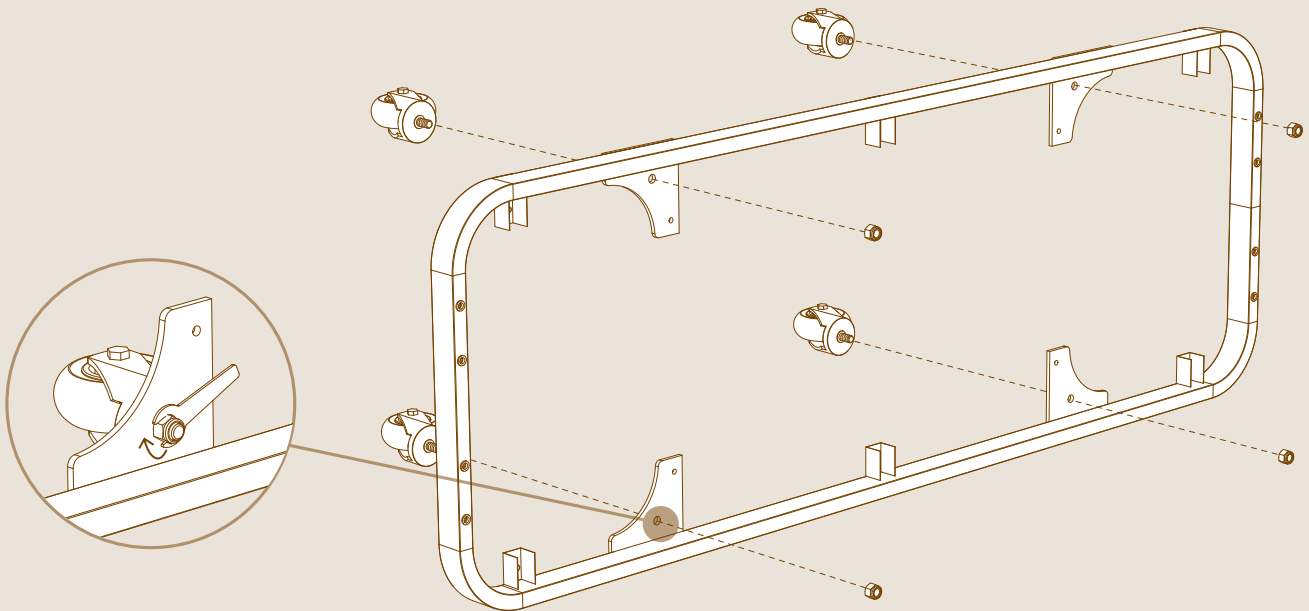


- 2 Place 2 holes Horizontal Supporters.

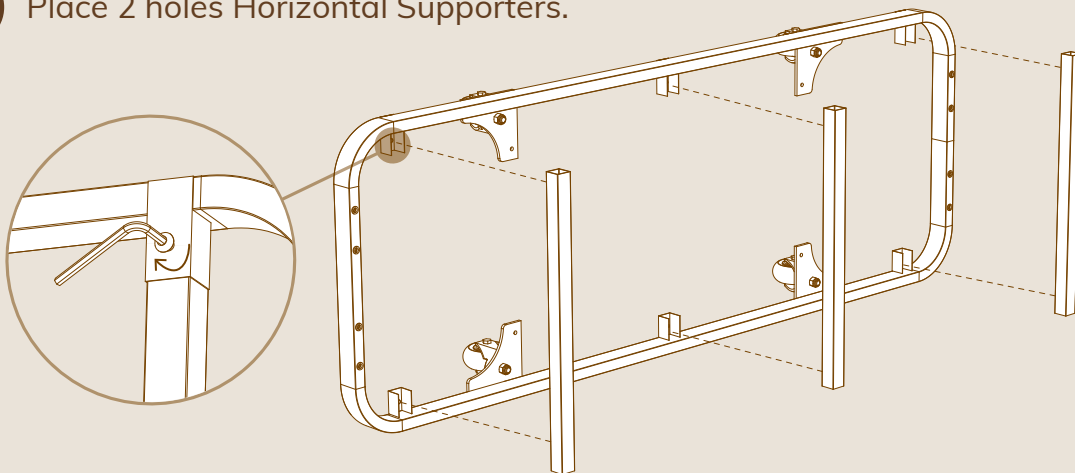


- 3 Place 4 holes Horizontal Supporters above casters.
2 middle holes should face upwords.

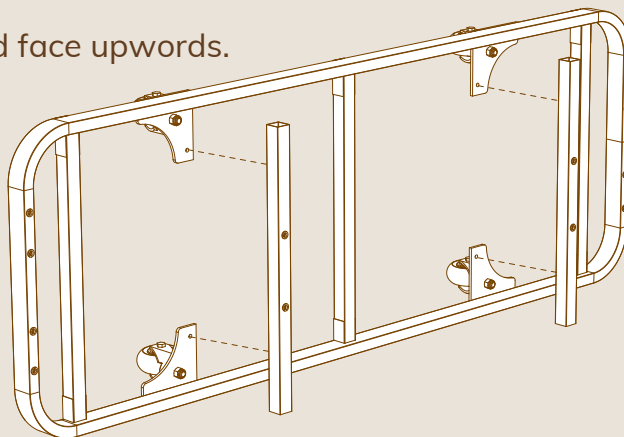

- 4 Keep frame angle screws loose.

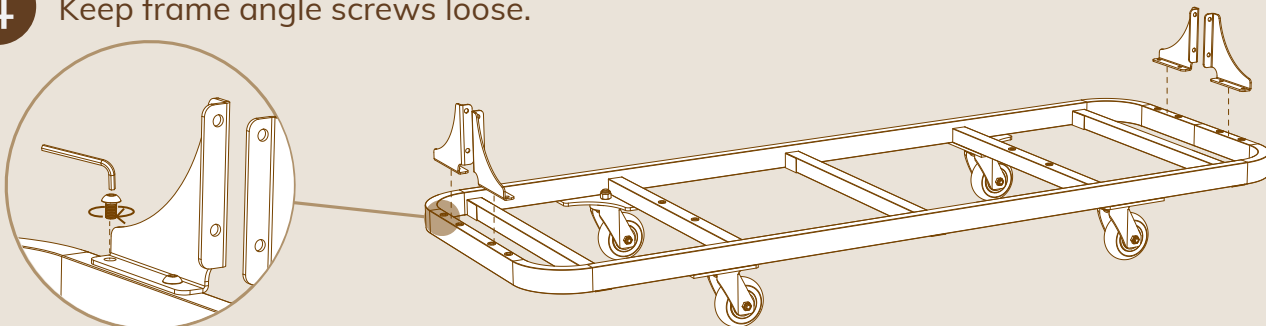


- 5 Adjust 4 frame angles to the vertical frame.

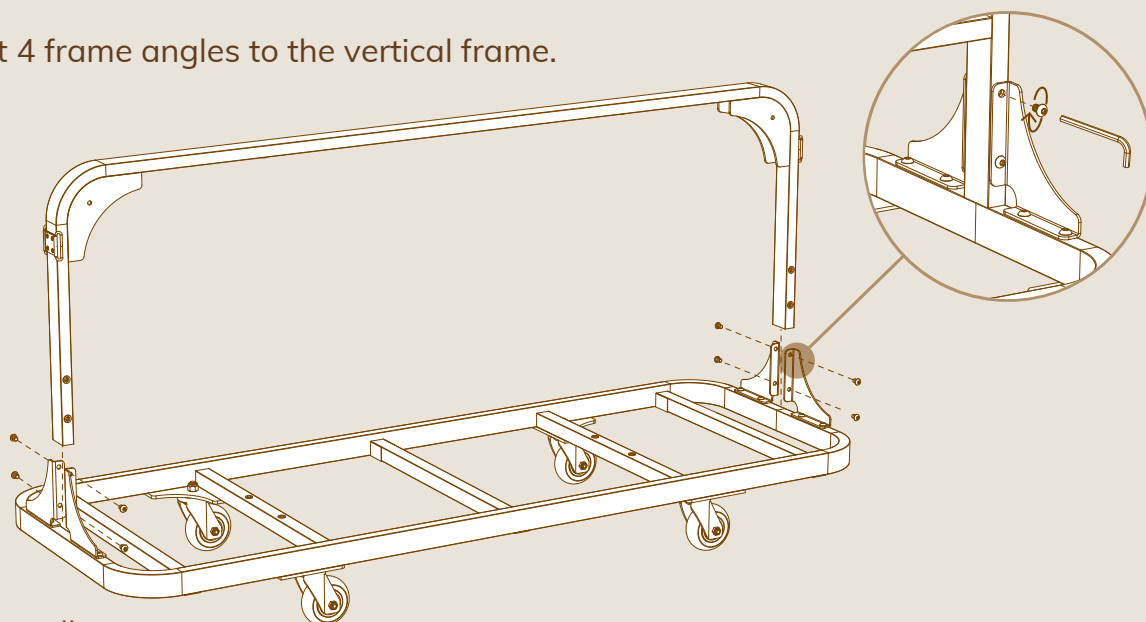


- 6 Tighten all screws.



7

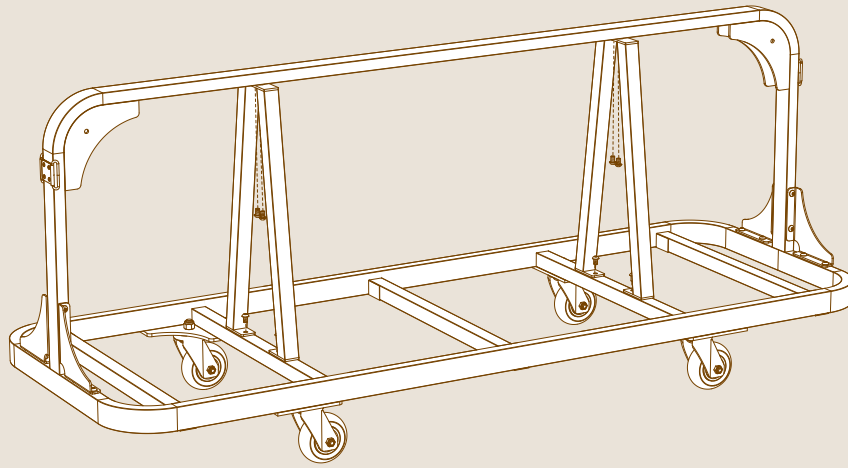


8

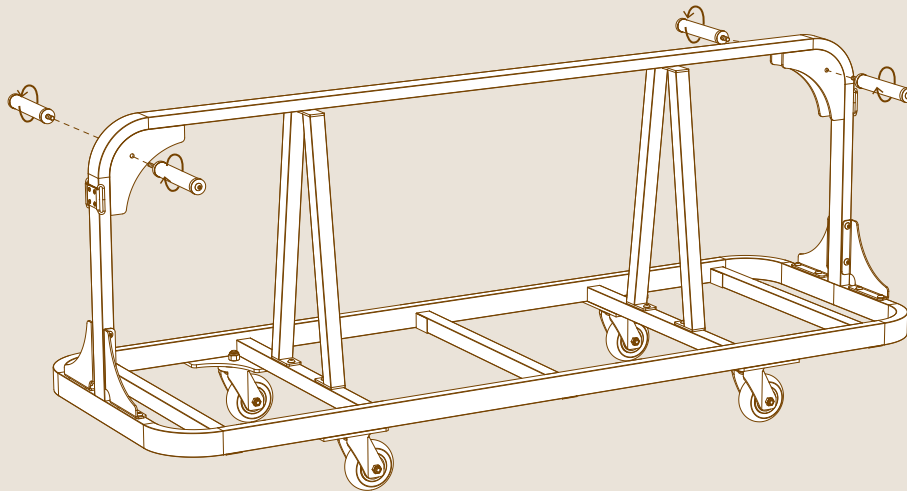

9

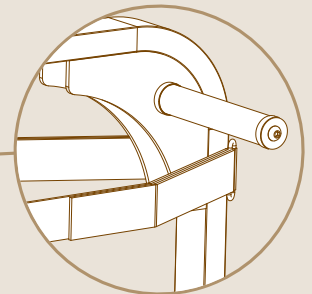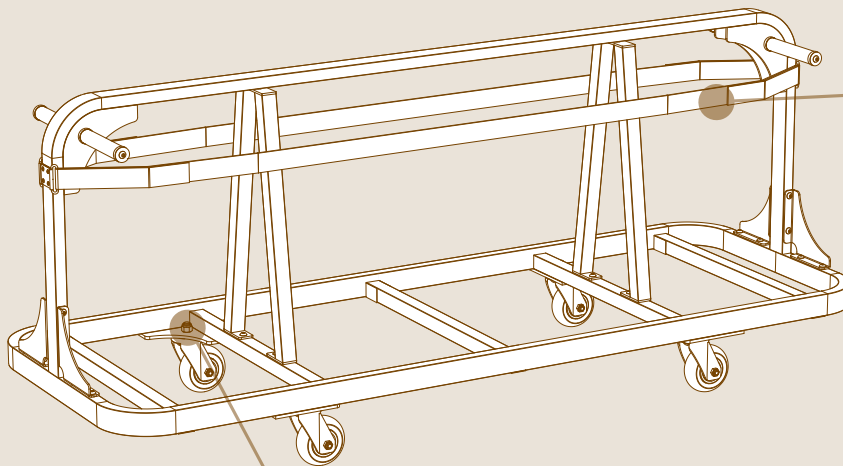

Tighten velcro on straps.

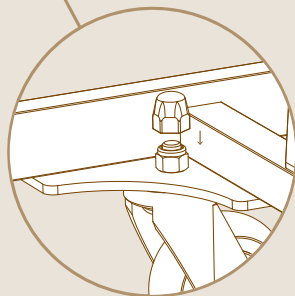

Add screw caps on
caster screws.

YOUR ALL DONE, WAY TO GO!