


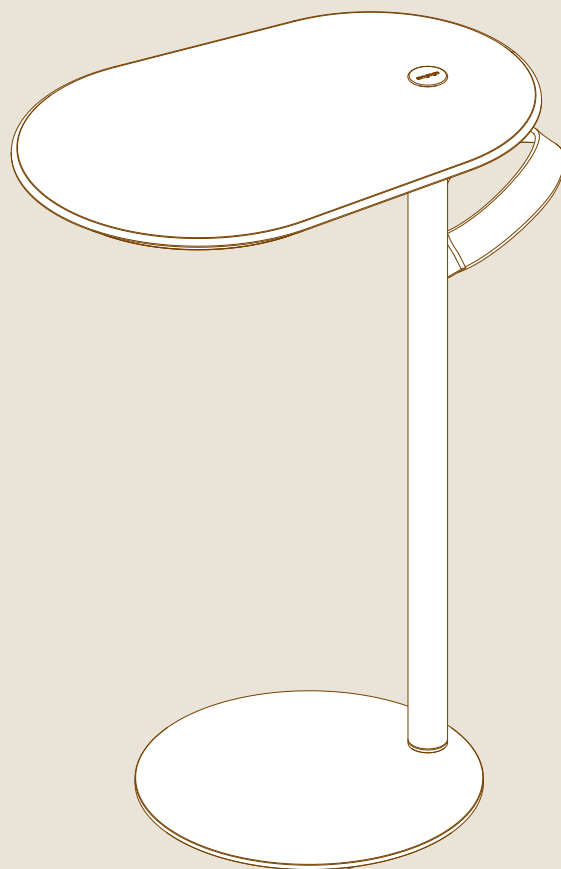


TABLE

ASSEMBLY INSTRUCTIONS



PARTS

X1




M16 CONICAL SCREW

X1



M10 CONICAL SCREW

X1

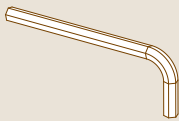

ALLEN KEY FOR
M16 SCREWS

X1




ALLEN KEY FOR
M10 SCREWS

X1



SCREW CAP

X1

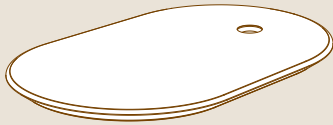

BHP TABLE TOP

X1



TABLE BASE

X1





TABLE LEG

ASSEMBLY


1

Place the table leg on the base. Insert the pin into its dedicated hole.

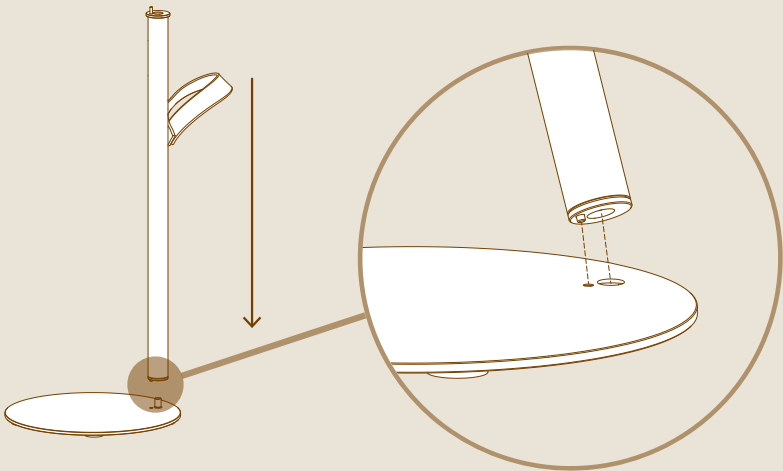


2

Tighten the M10 screw with its Allen key

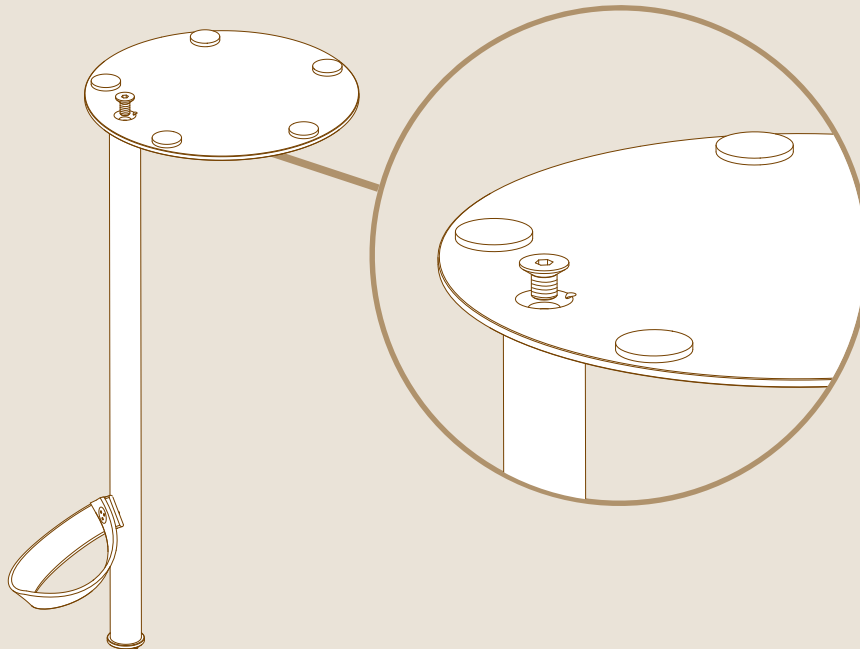


3

Place the tabletop panel on top of the leg. Insert the pin into its dedicated hole.

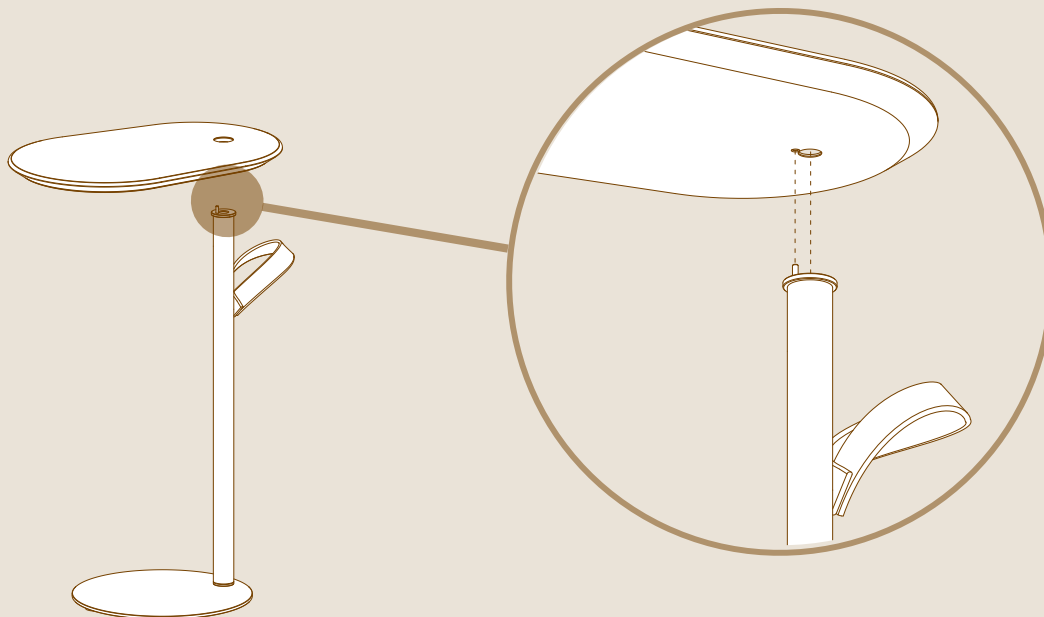



4

Tighten the M16 screw with its Allen key.

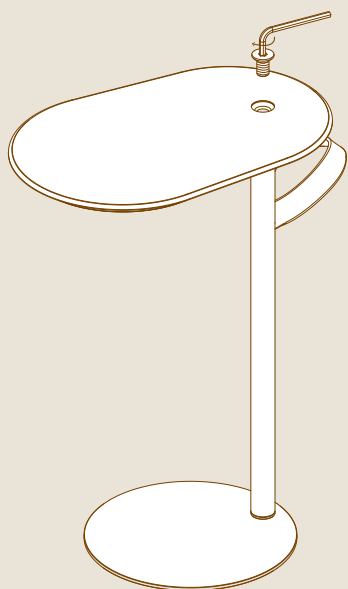

5

Put the screw cap in its right place.

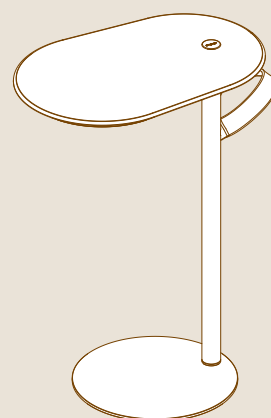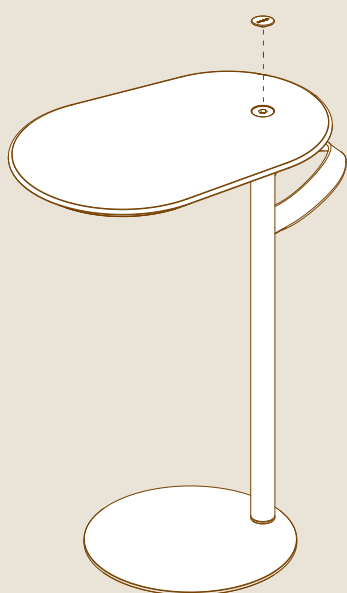

GREAT JOB, YOUR GOOD TO GO!