


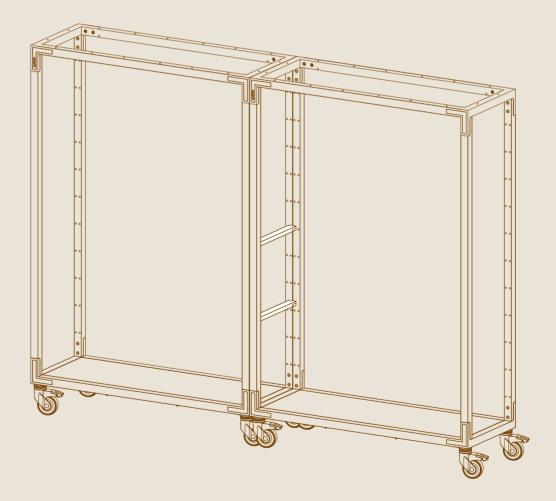

UNIT CONNECTORS


ASSEMBLY INSTRUCTIONS



VB </t

ASSEMBLY


Insert 2 pins into each of the outer holes of both units, making sure you locate them at the same height

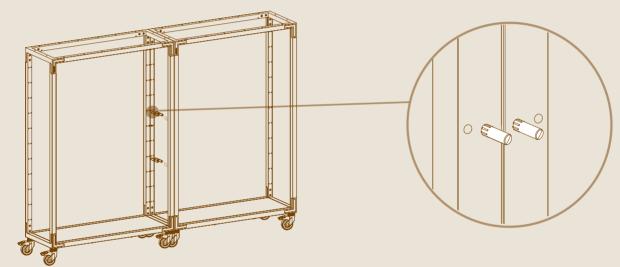

2

Place and snap the connector onto the pins.

It is recommended that both Connectors be used at different heights.

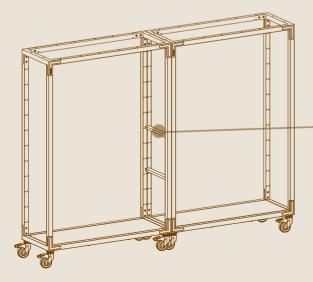



GREAT JOB, YOUR GOOD TO GO! CATALOG# S-ACA-PR-97-01