


mogogo
BUFFET SOLUTIONS

UTILITY
COLLECTION

CLIX LEG TRANSFER AND STORAGE CART

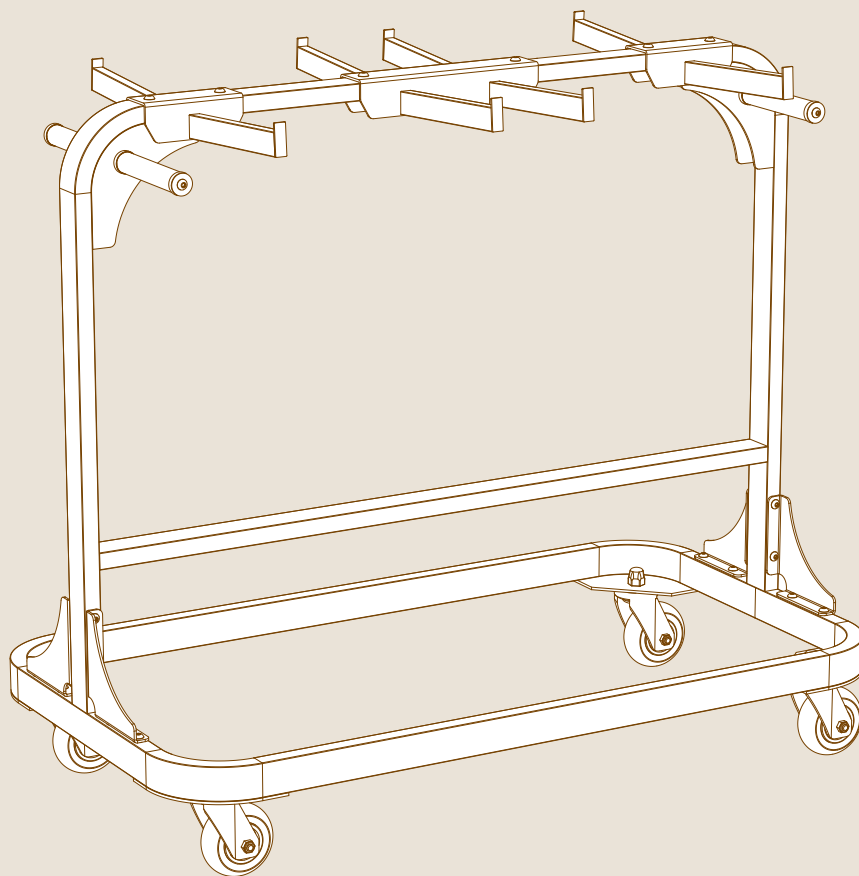

PARTS

X1



ALLEN KEY FOR
M10 SCREWS

X22



ROUND CAP M10 SCREWS

X4




SCREW NUTS

X4




SCREW CAPS

X1




DOUBLE RACK

X2




SINGLE RACK

X1




FLAT KEY

X1

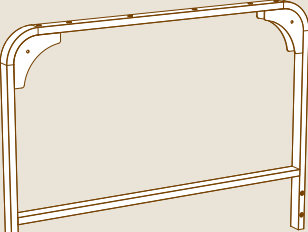


VERTICAL FRAME

X4

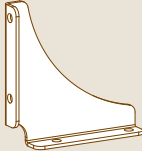


FRAME ANGLES

X1

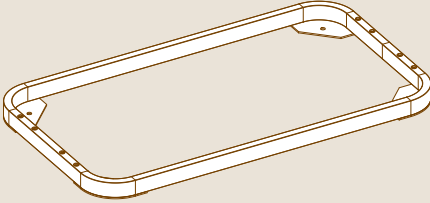


HORIZONTAL FRAME

X4



HANDLES


X4




CASTERS

ASSEMBLY


1

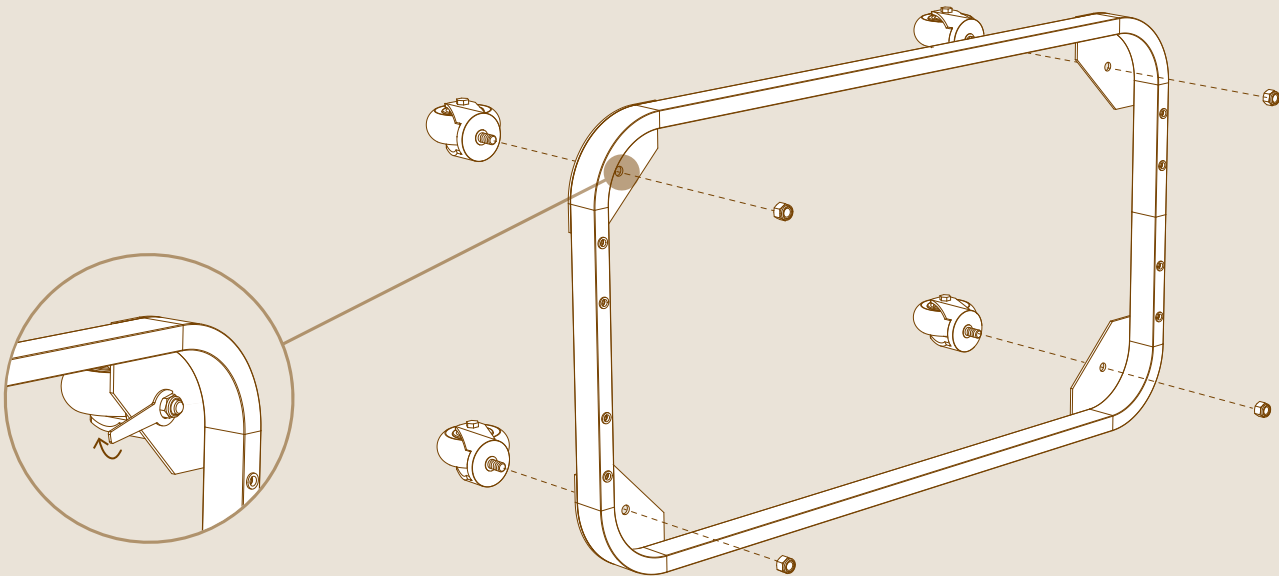

- 2 Keep frame angle screws loose.

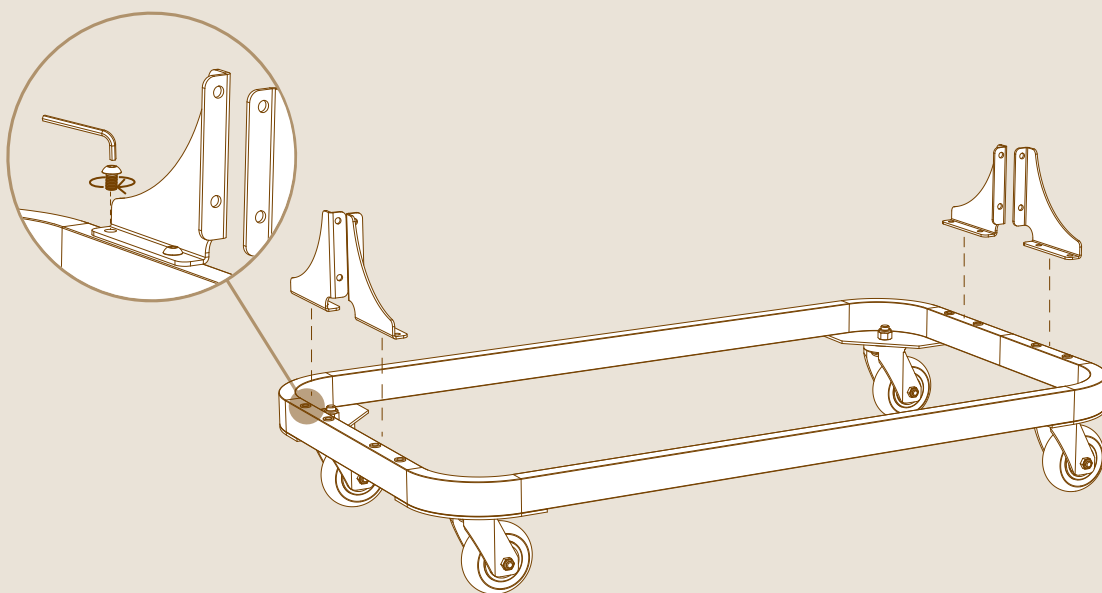


- 3 Adjust 4 frame angles to the vertical frame.

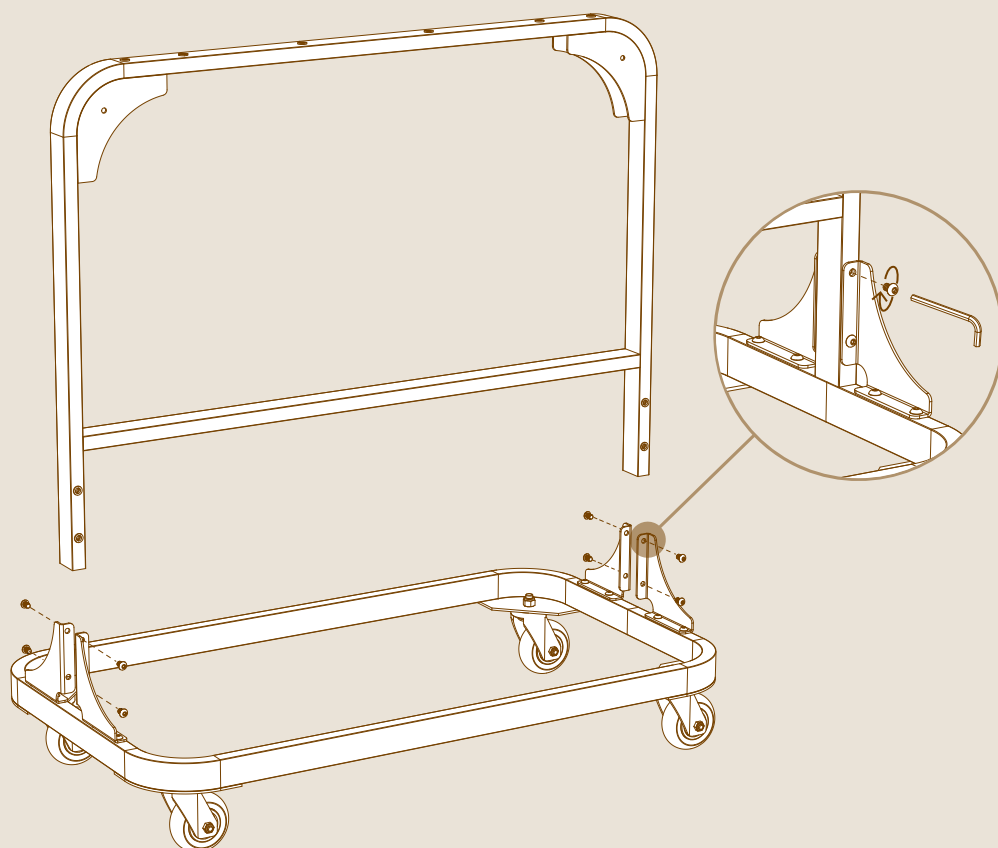


- 4 Tighten all screws.

5

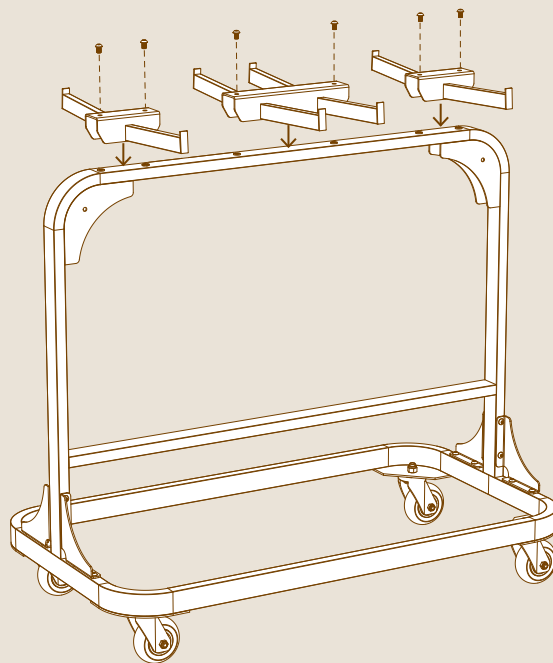


6

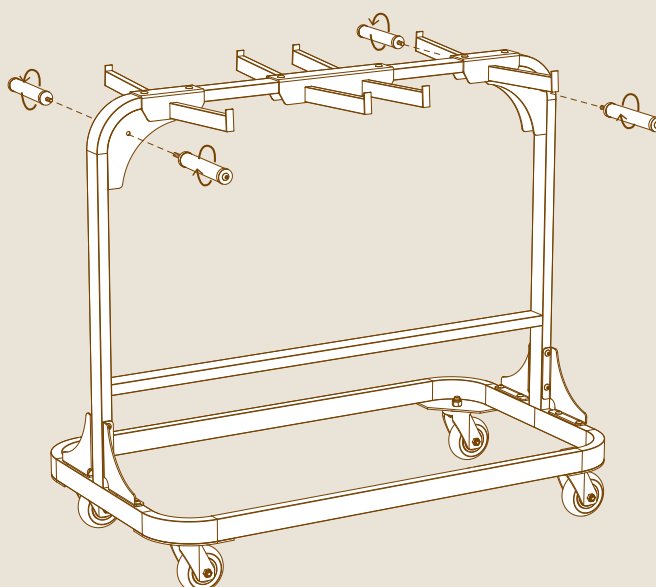

7

Add screw caps on
caster screws.

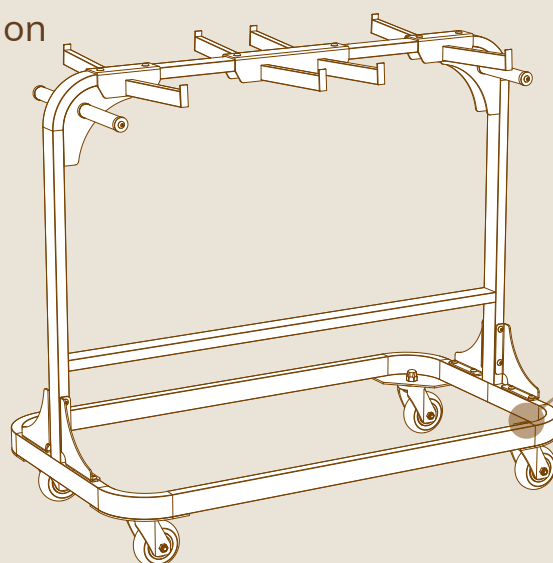

YOU'RE ALL DONE, WAY TO GO!