





mogogo
BUFFET SOLUTIONS

UTILITY
COLLECTION

LARGE PLATE TRANSFER AND STORAGE CART

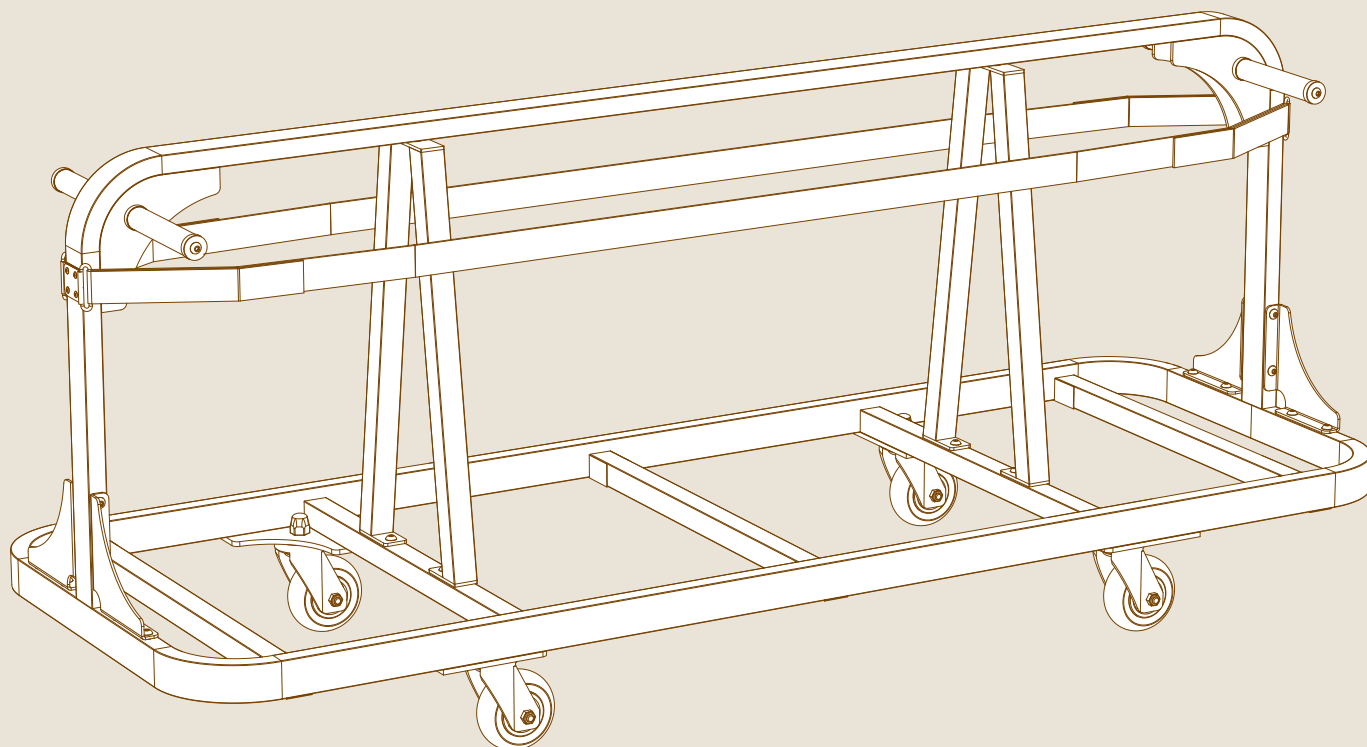


PARTS

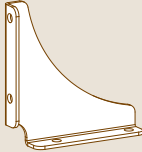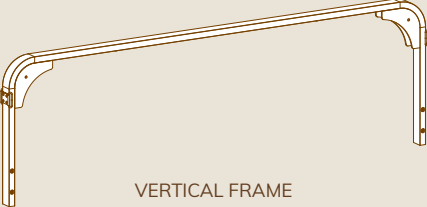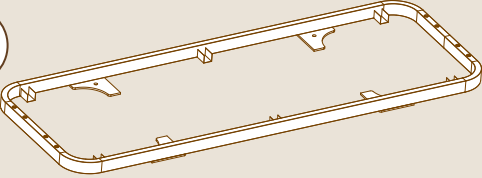
X1  ALLEN KEY FOR M10 SCREWS	X2  STRAPS	X4  VERTICAL SUPPORTER	X1  FLAT KEY
X34  ROUND CAP M10 SCREWS	X3  HORIZONTAL SUPPORTER (2 HOLES)	X2  HORIZONTAL SUPPORTER (4 HOLES)	X4  FRAME ANGLES
X4  SCREW NUTS	X1  VERTICAL FRAME	X4  HANDLES	
X4  SCREW CAPS	X1  HORIZONTAL FRAME	X4  CASTERS	

ASSEMBLY


1

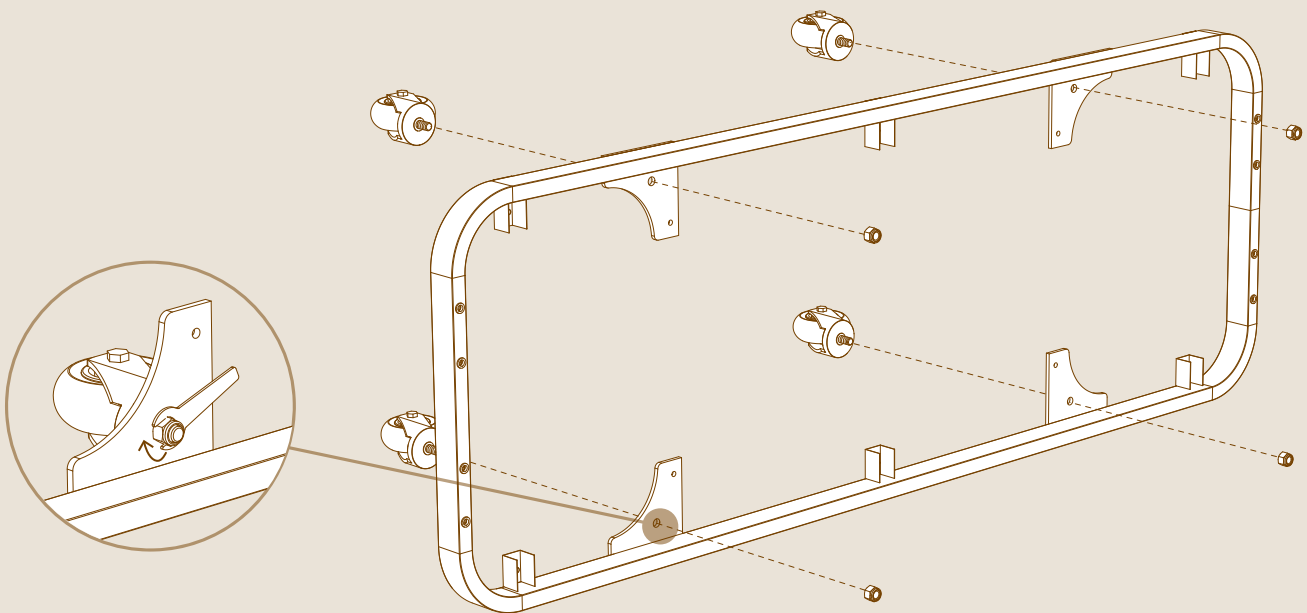


- 2 Place 2 holes Horizontal Supporters.

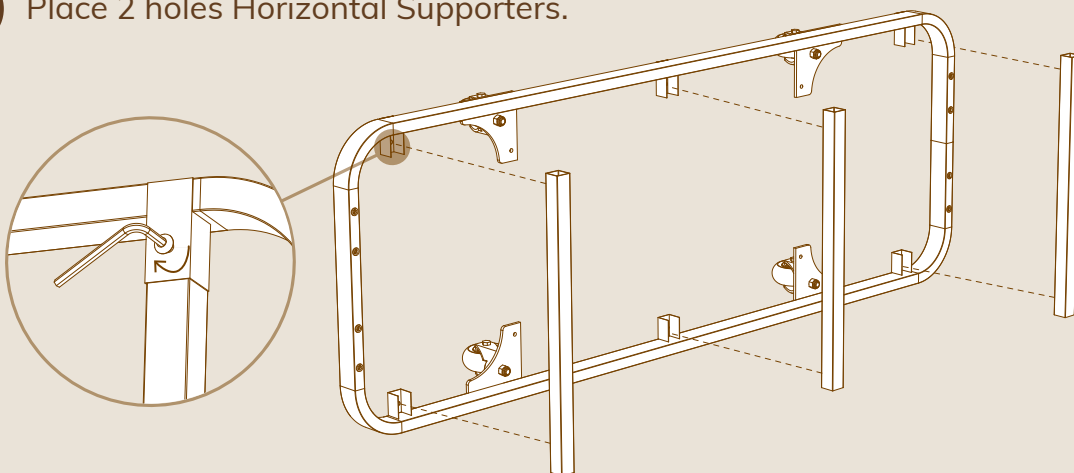


- 3 Place 4 holes Horizontal Supporters above casters.
2 middle holes should face upwords.

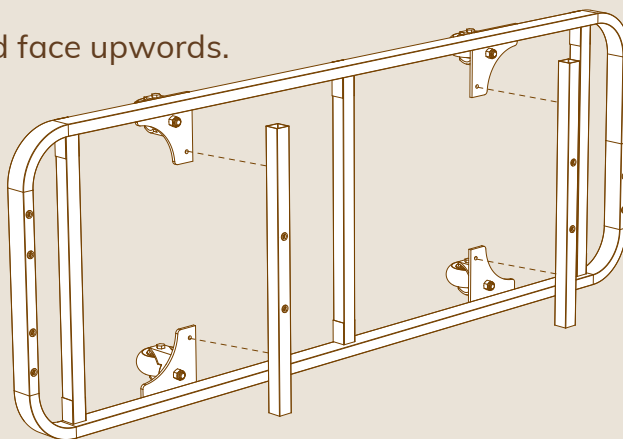

- 4 Keep frame angle screws loose.

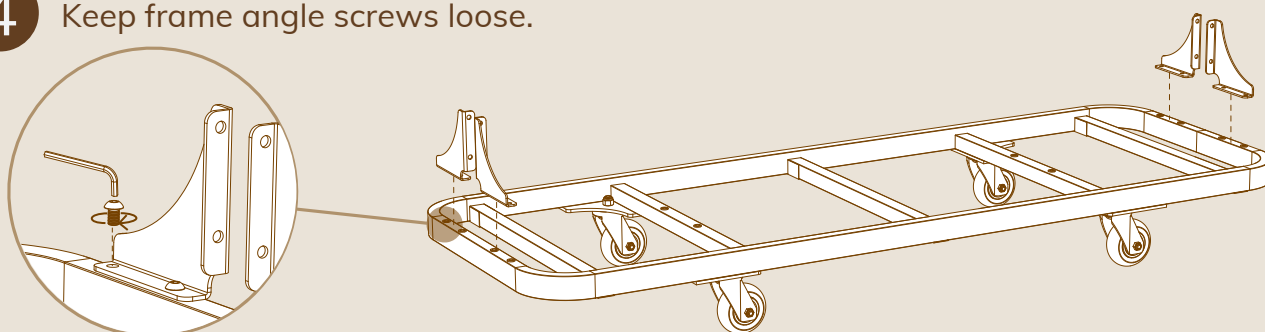


- 5 Adjust 4 frame angles to the vertical frame.

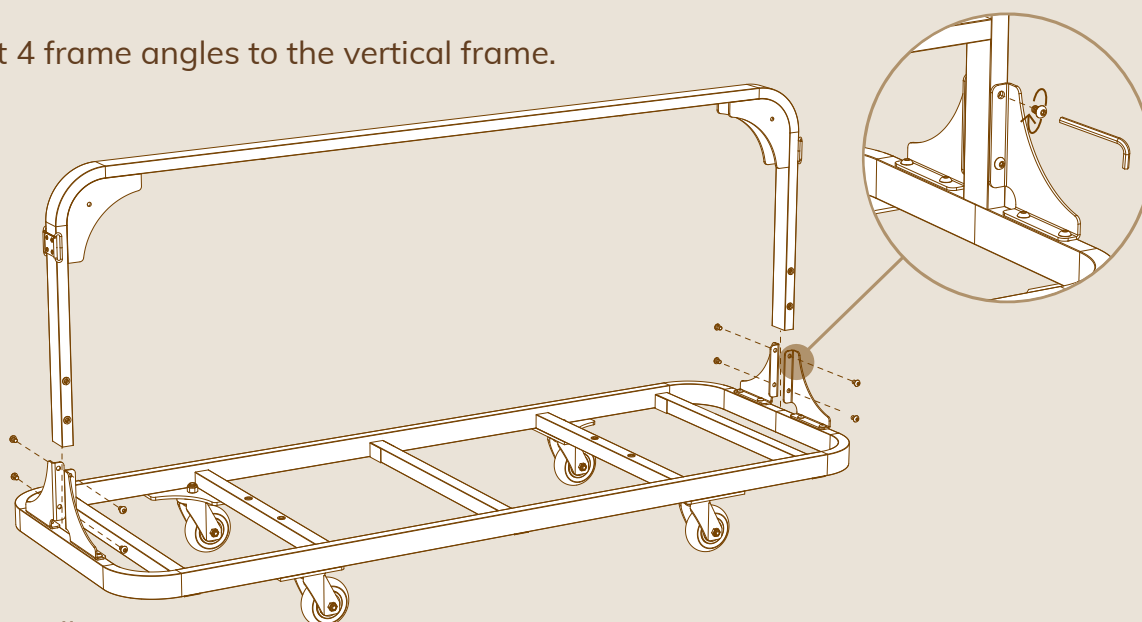


- 6 Tighten all screws.



7

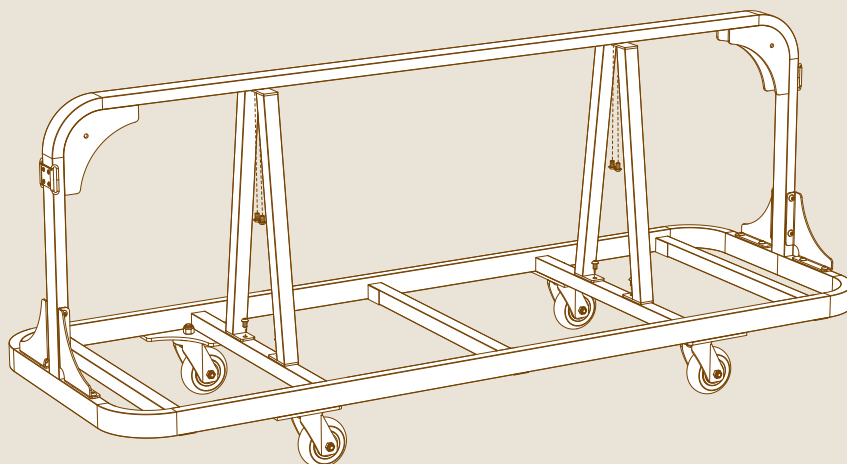


8

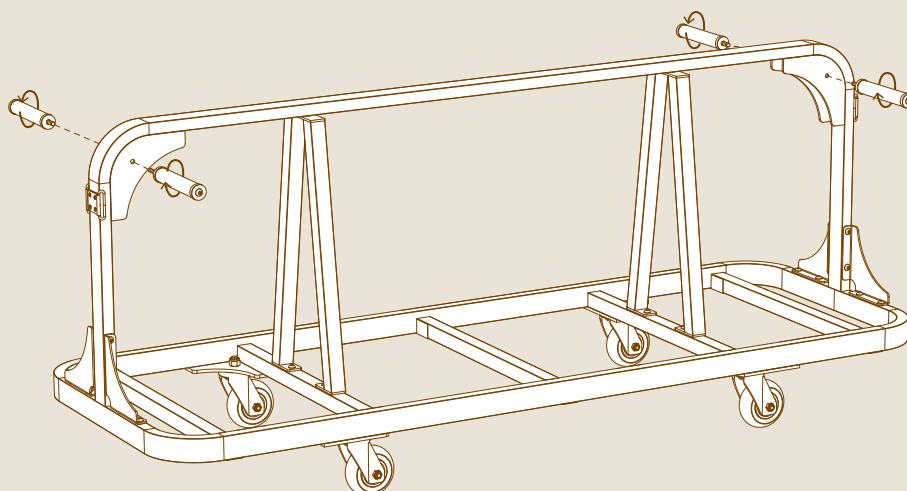

9

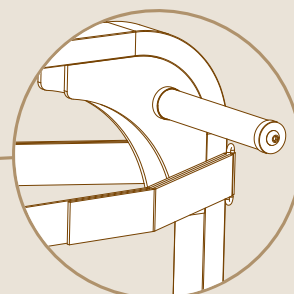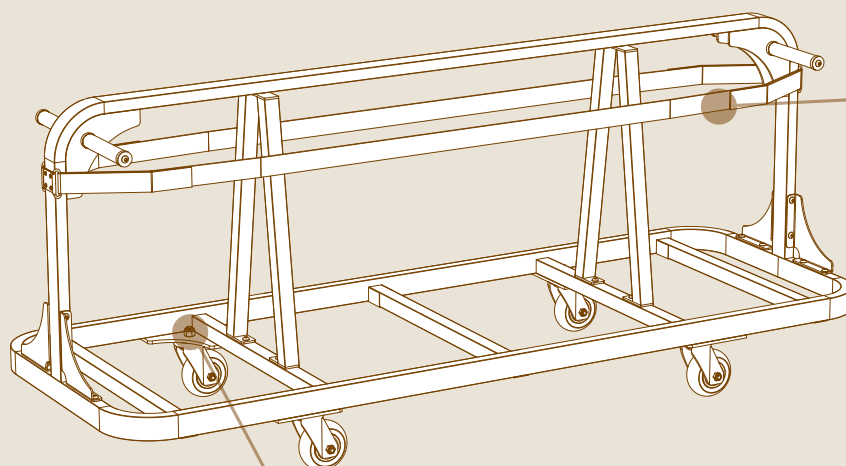

Tighten velcro on straps.

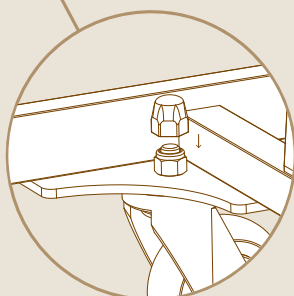

Add screw caps on
caster screws.

YOU'RE ALL DONE, WAY TO GO!