


mogogo

Rollin

SERVICE CARTS


QUICK COVER FOR SERVICE CART

ASSEMBLY INSTRUCTIONS

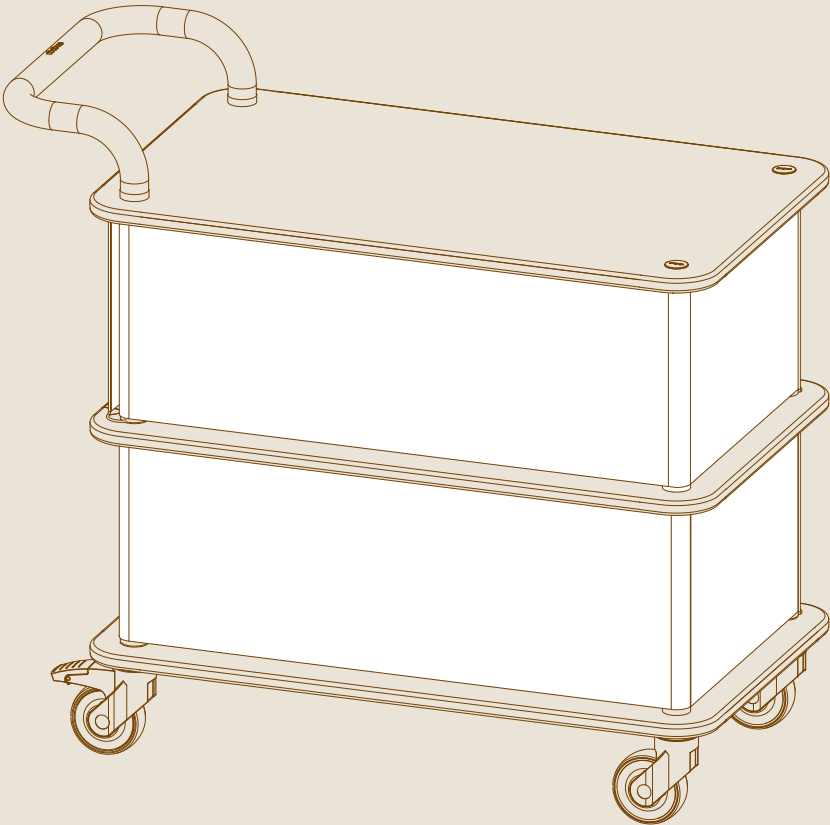

PARTS


x2

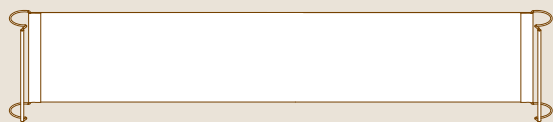


QUICK COVER FOR SERVICE CART L70" W12.6" | L178cm W32cm

ASSEMBLY

1

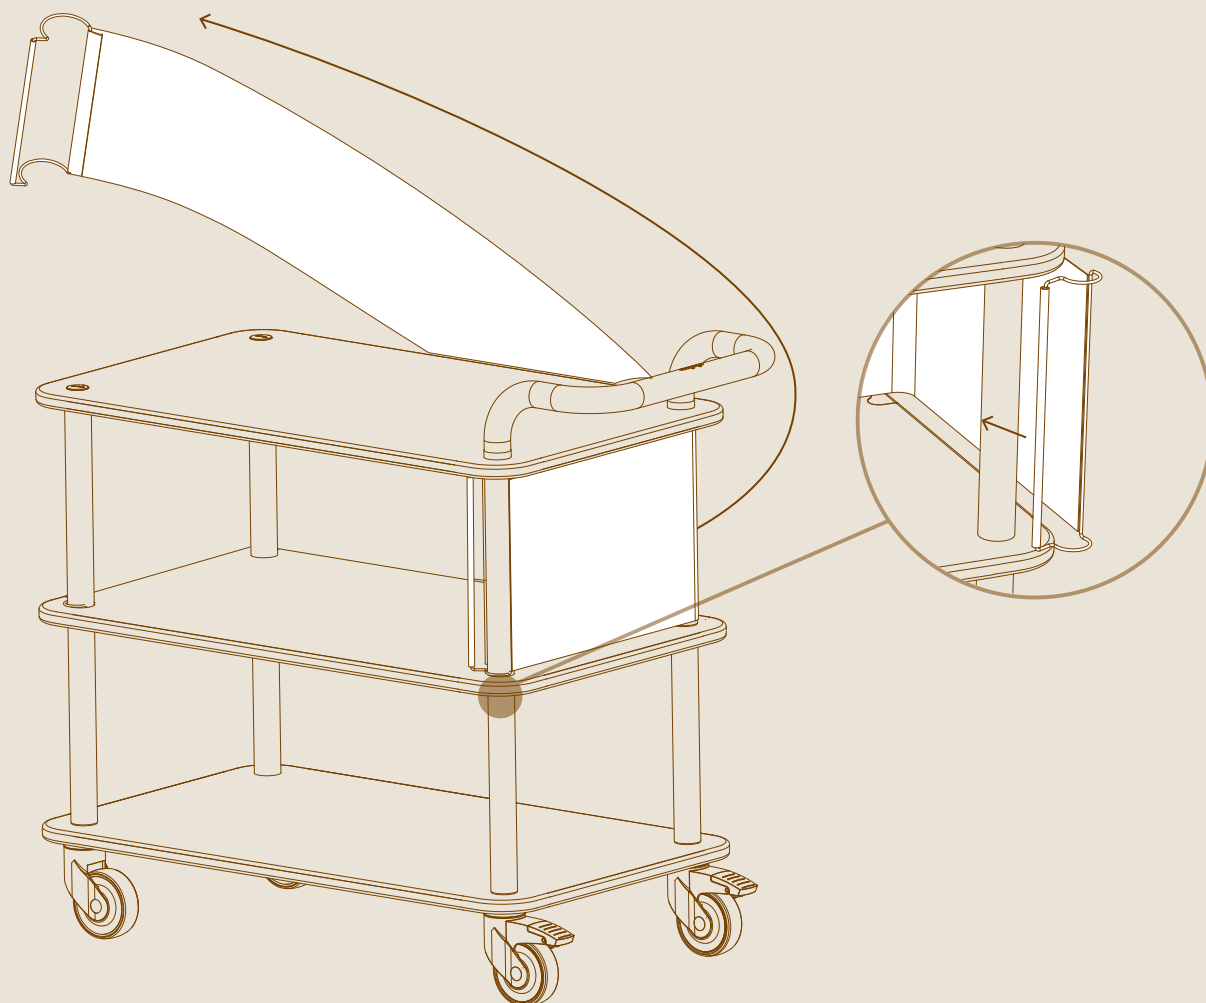


2



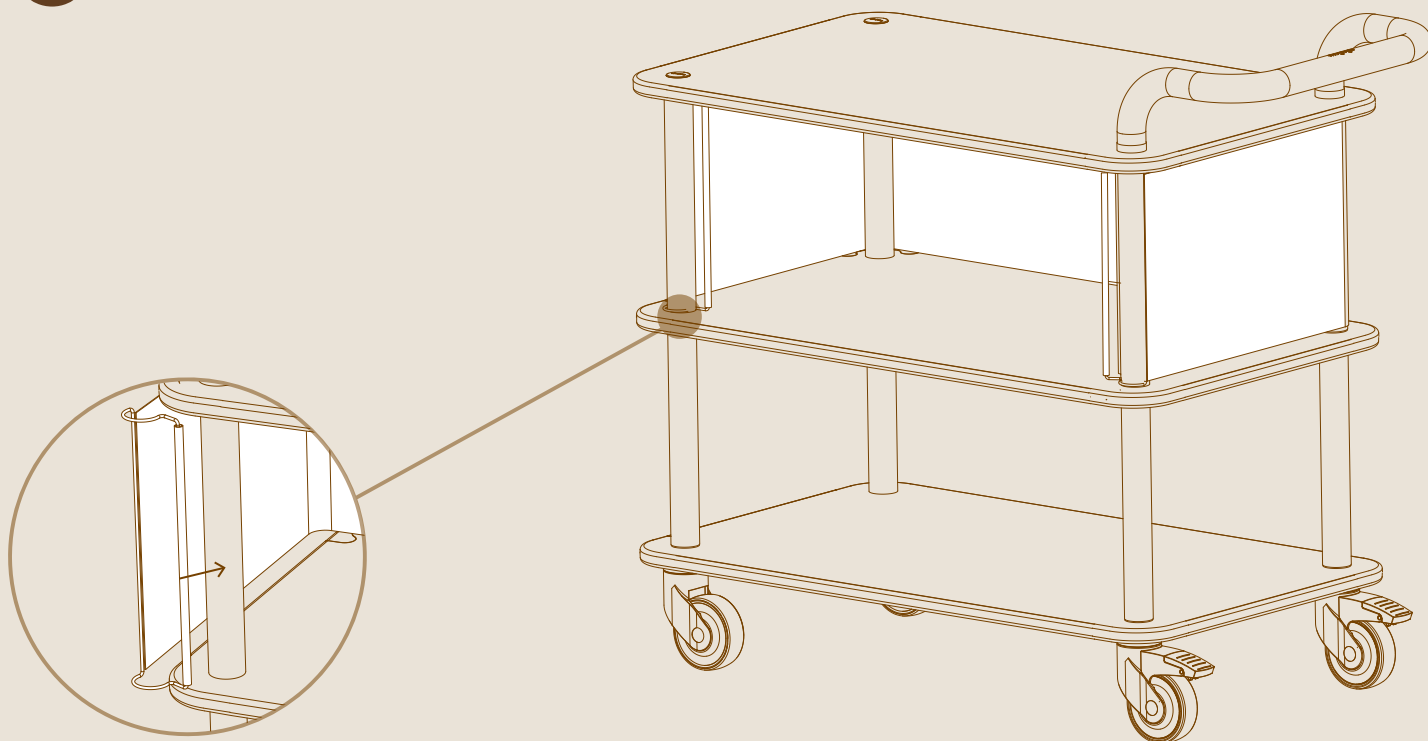


3

Evenly tighten the quick-cover using the bars on both sides.

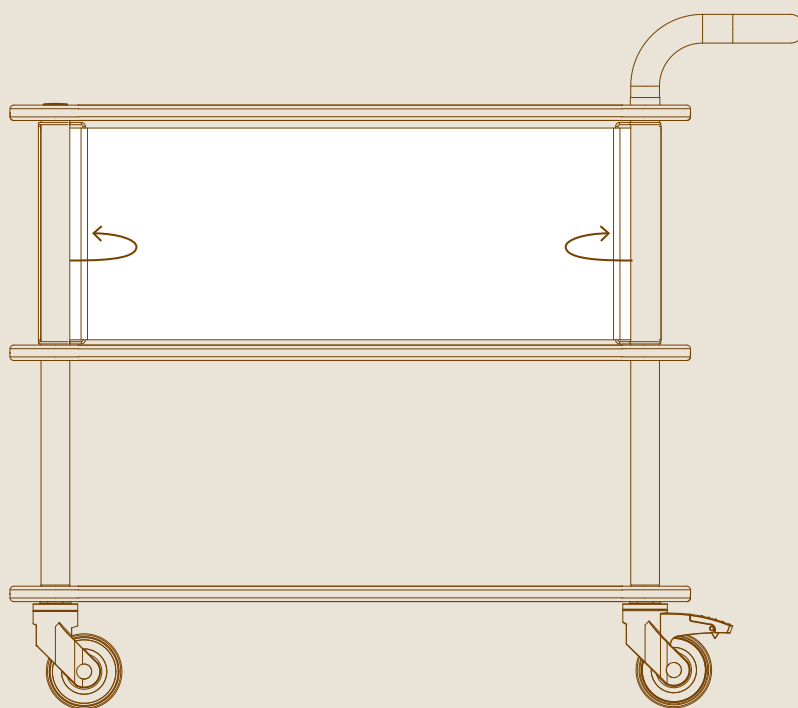

DESIGN PROPOSALS

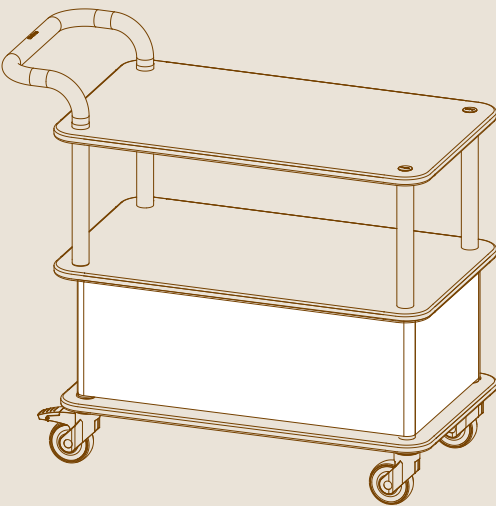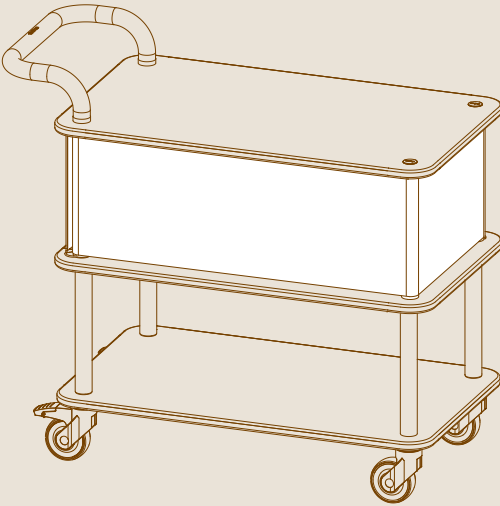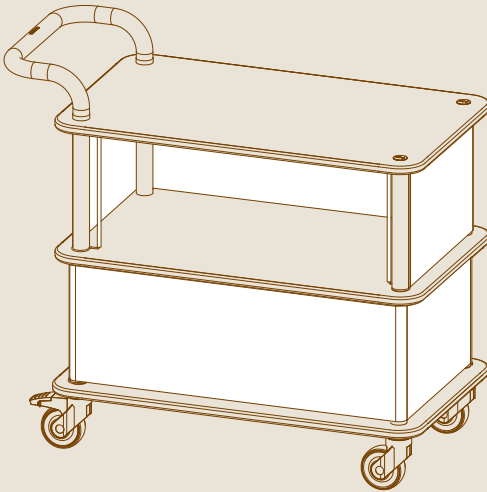

GREAT JOB, YOUR GOOD TO GO!