


mogogo







Modular
SYSTEM

TRIPLE WARMING INDUCTION

ASSEMBLY INSTRUCTIONS

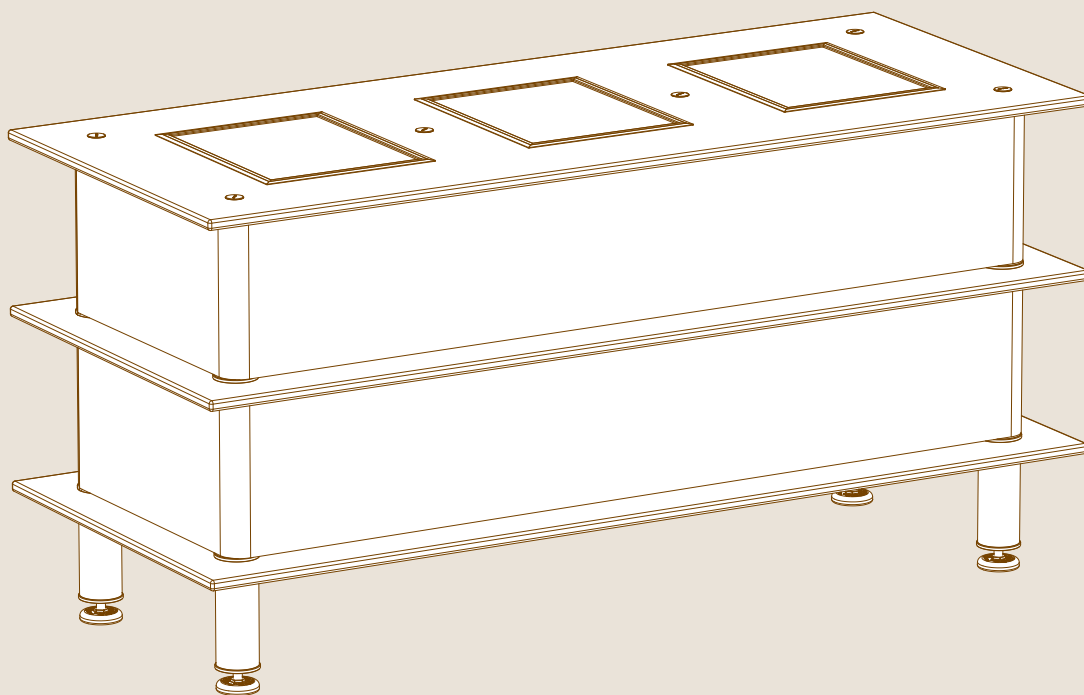


PARTS

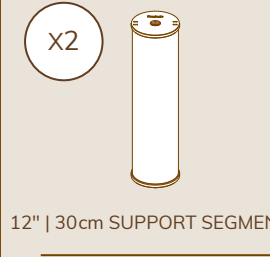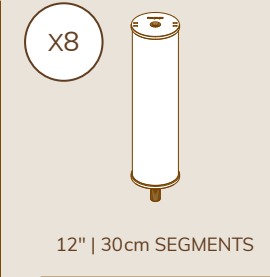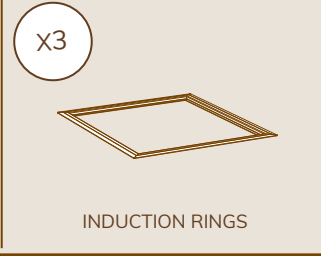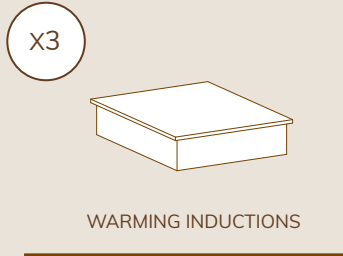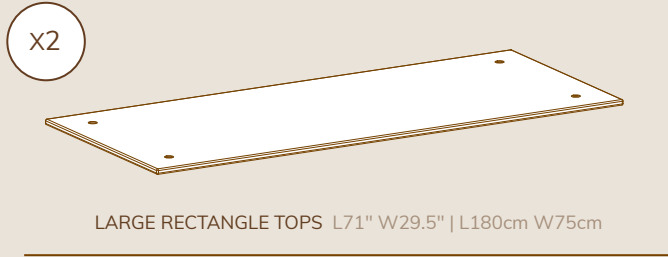
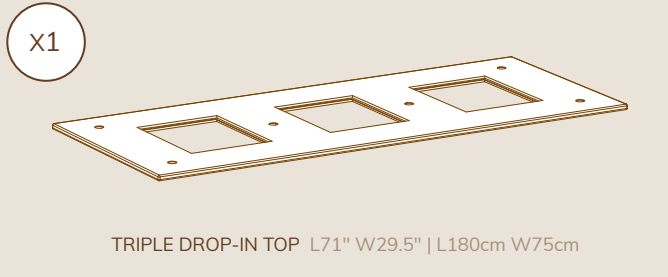


ASSEMBLY



1

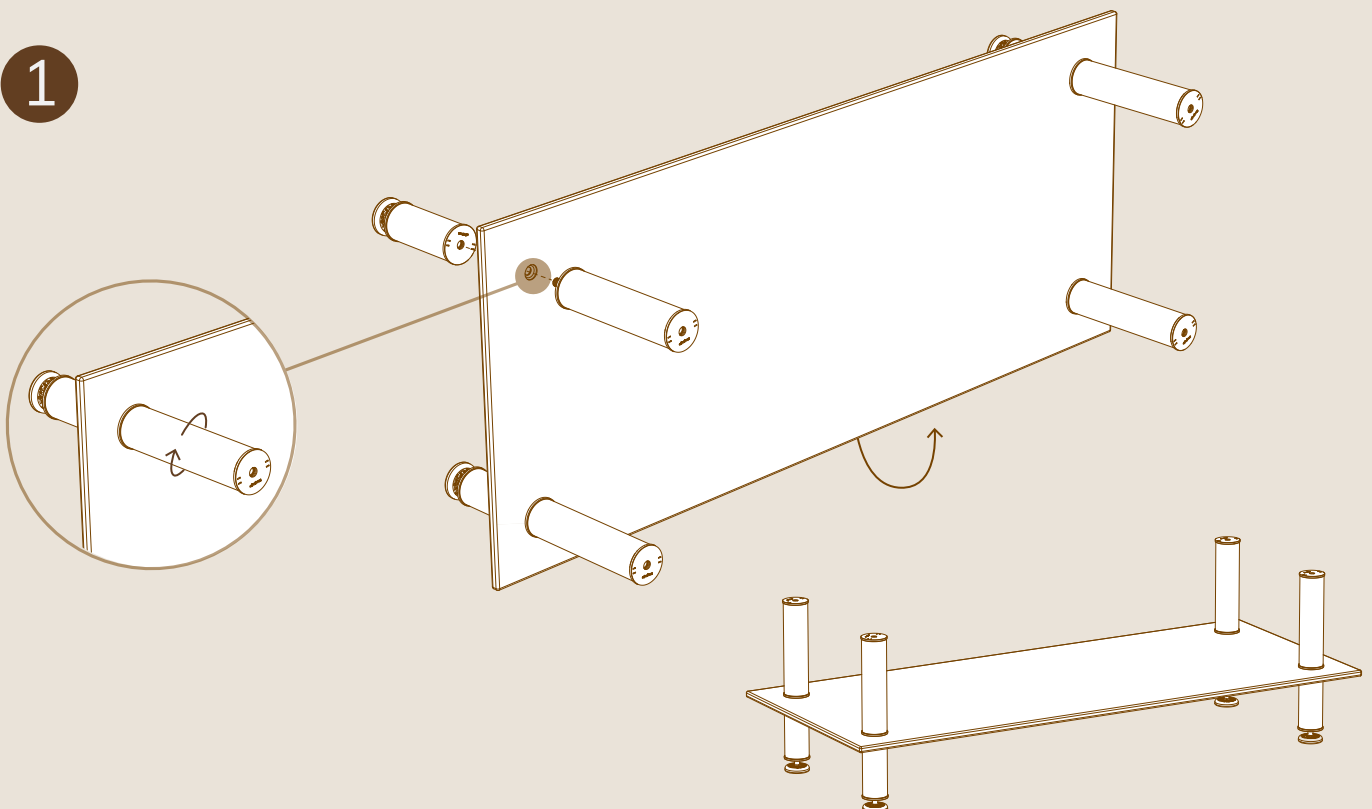


2

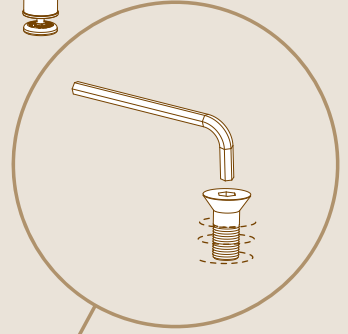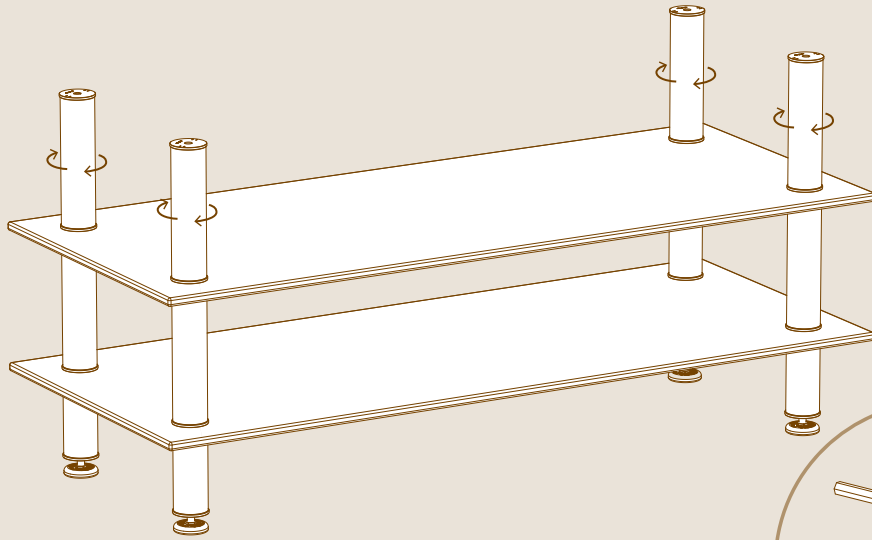


3

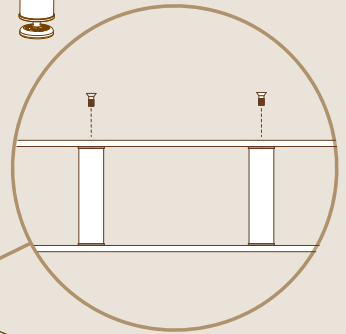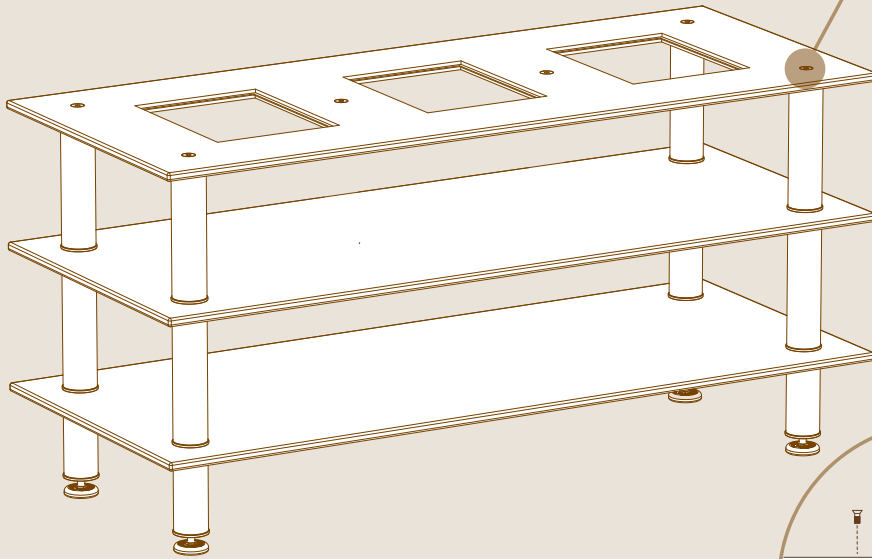


4

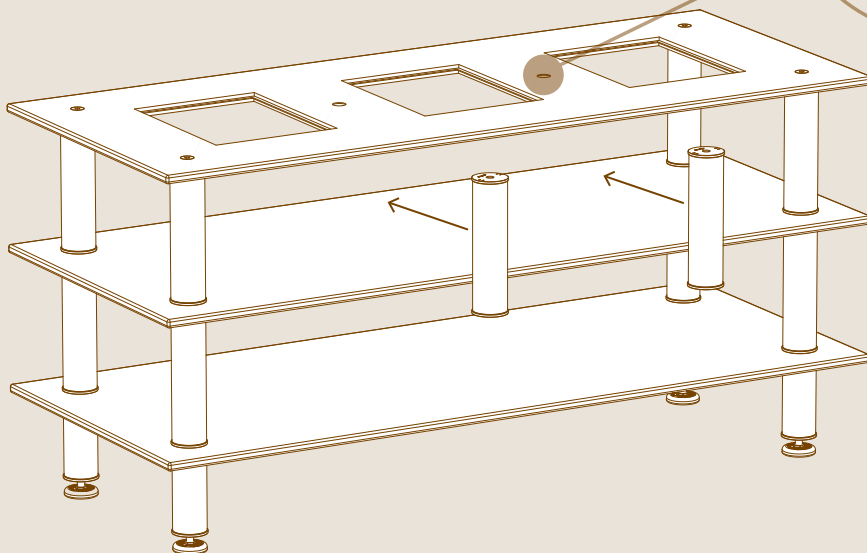

5

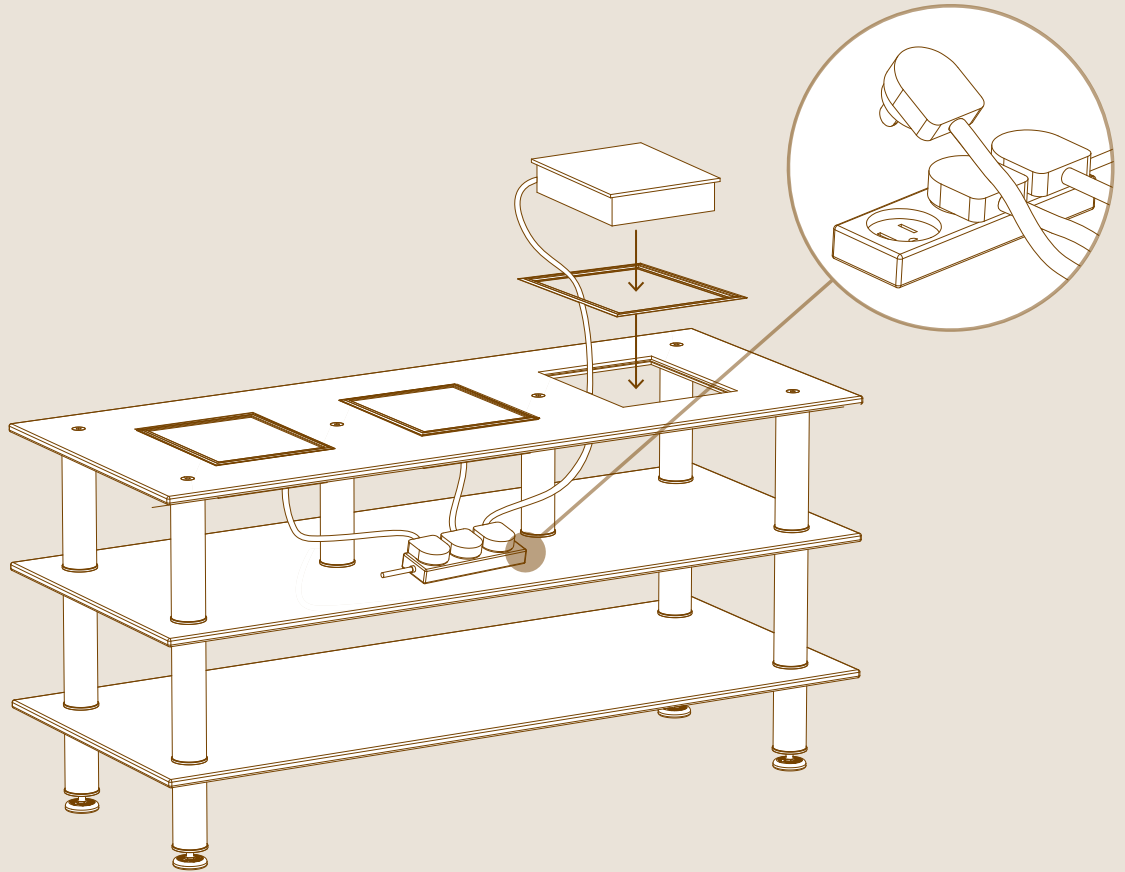

6 Add screw caps & optional quick covers.

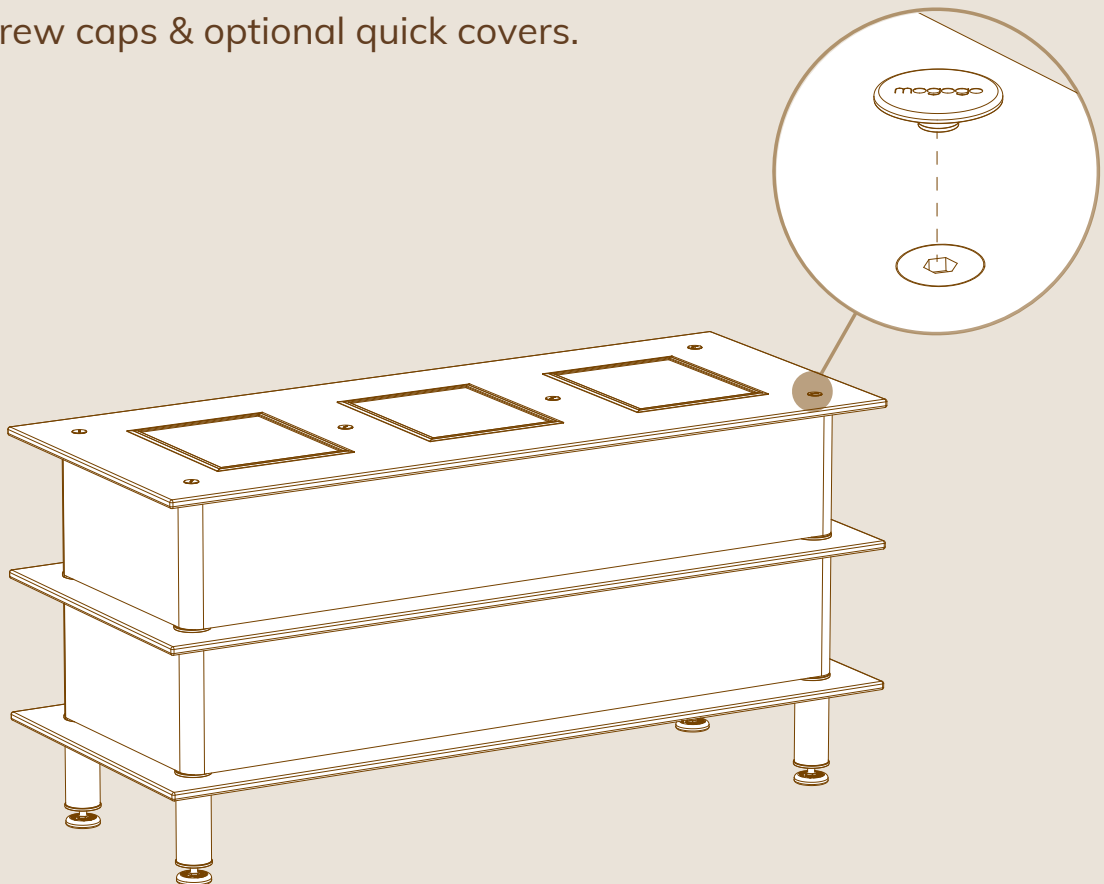

JOB WELL DONE, WAY TO GO!