




## **TABLE**ASSEMBLY INSTRUCTIONS

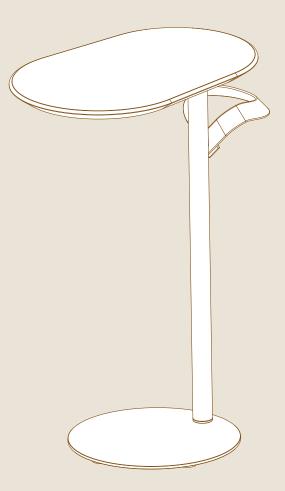


## PARTS






Place the table base on the other side of the leg. Insert the pin into its dedicated hole.

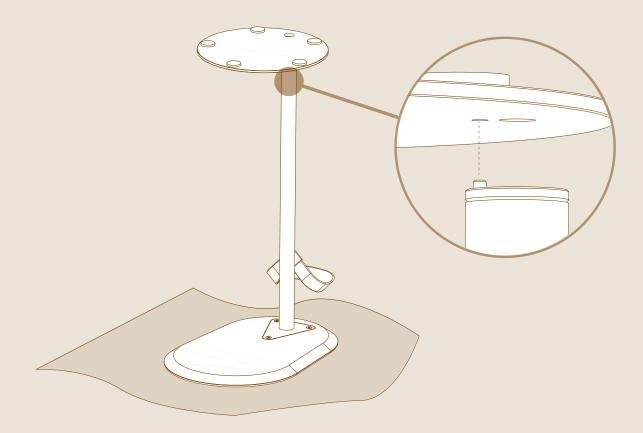




Tighten the M10 screw with its Allen key

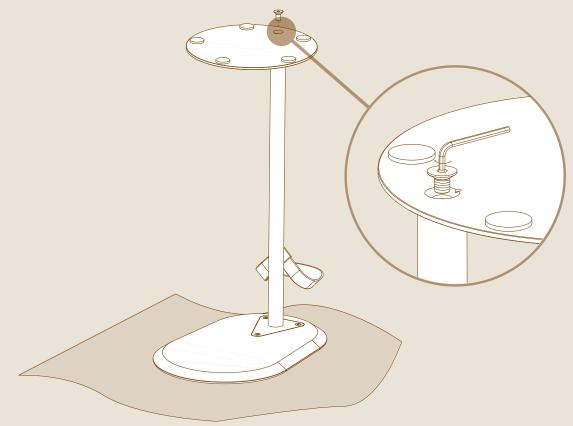



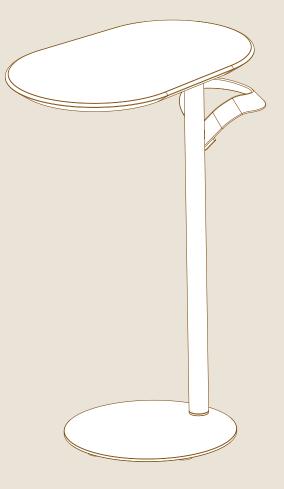

GREAT JOB, YOUR GOOD TO GO!