





# EMPTY UNIT WITH LEGS

## ASSEMBLY INSTRUCTIONS

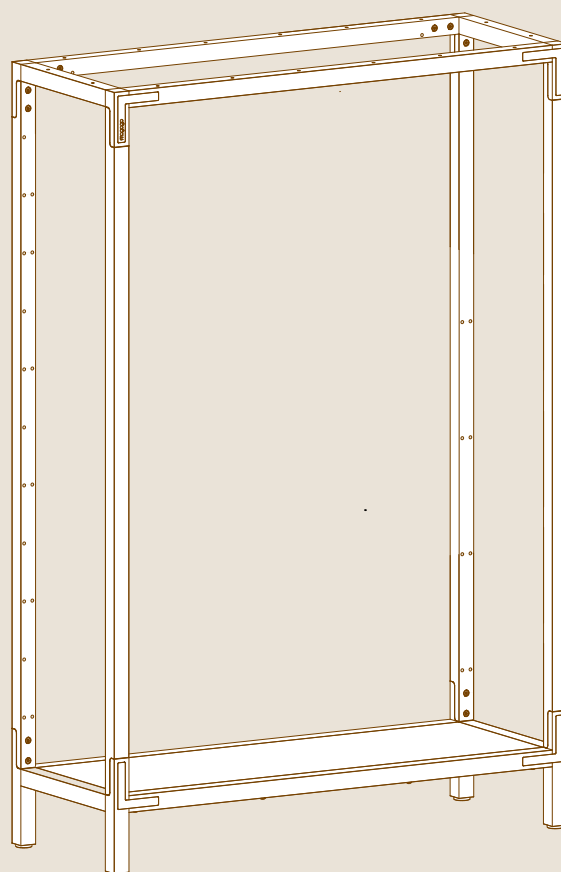


# PARTS

X16

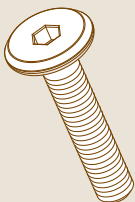


M6X30 FLAT HEAD SCREW

X1

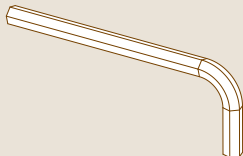


ALLEN KEY FOR  
M6 SCREWS

X1

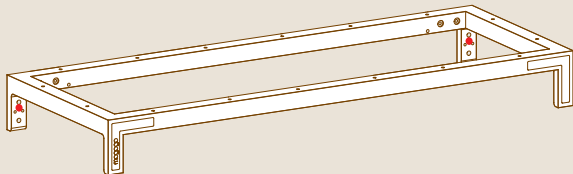


TOP FRAME

X4

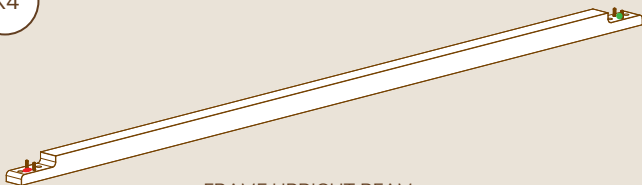

FRAME UPRIGHT BEAM

X1

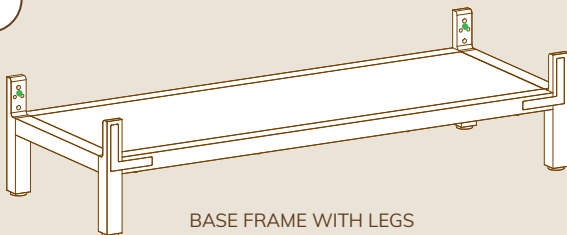


BASE FRAME WITH LEGS

# ASSEMBLY

1

Place Base and Top Frame apart from each other

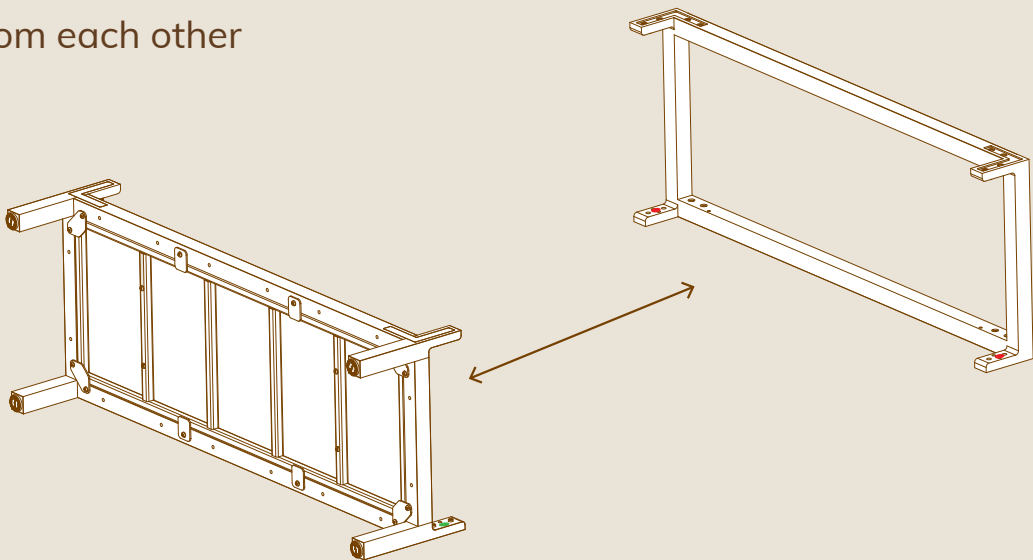


2

Assemble the frame uprights to the base frame.


Support the uprights while tightening!

**Make sure you connect each end of the beam to the right side**

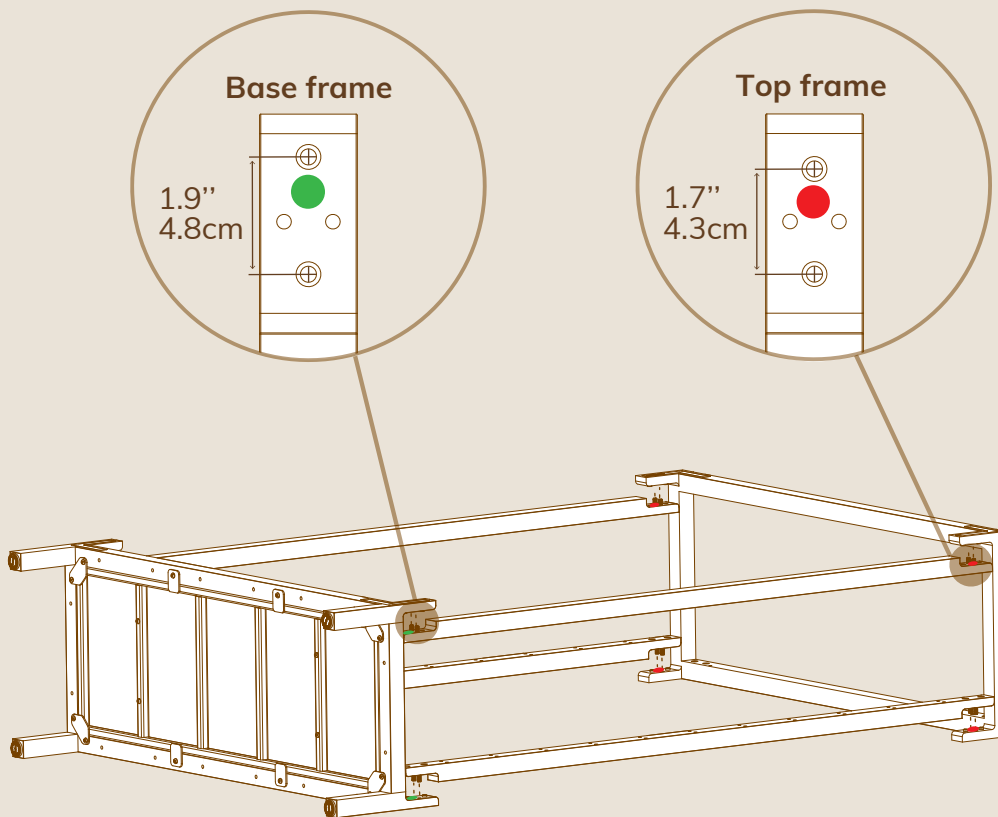


3

Tighten the frame uprights to the top frame

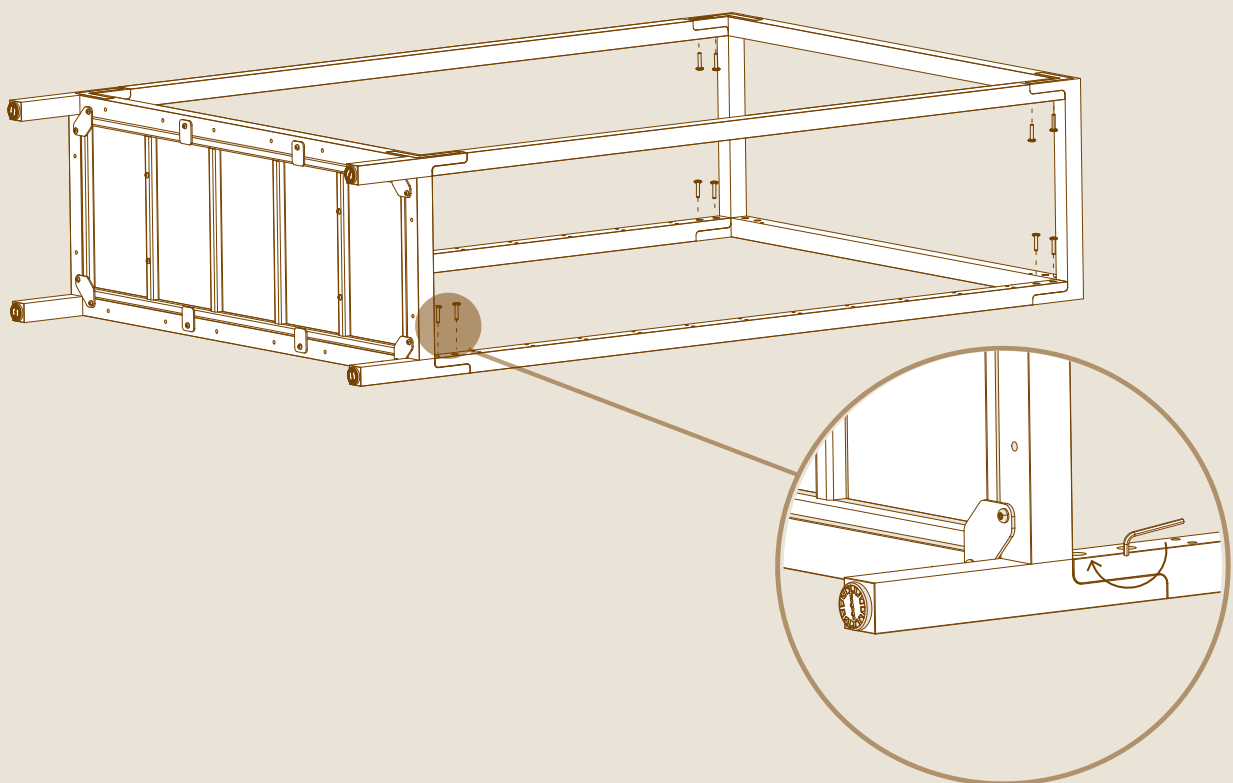

4

Set the Canvas unit upright.

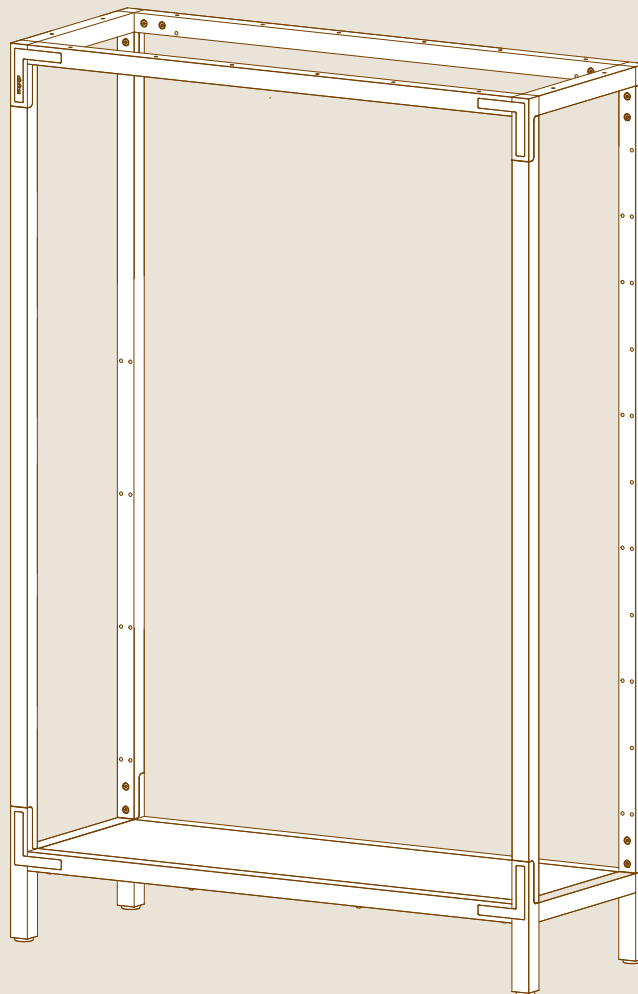

**GREAT JOB, YOUR GOOD TO GO!**