




Cantine

DISPLAY CART



SHELF FRAME

ASSEMBLY INSTRUCTIONS

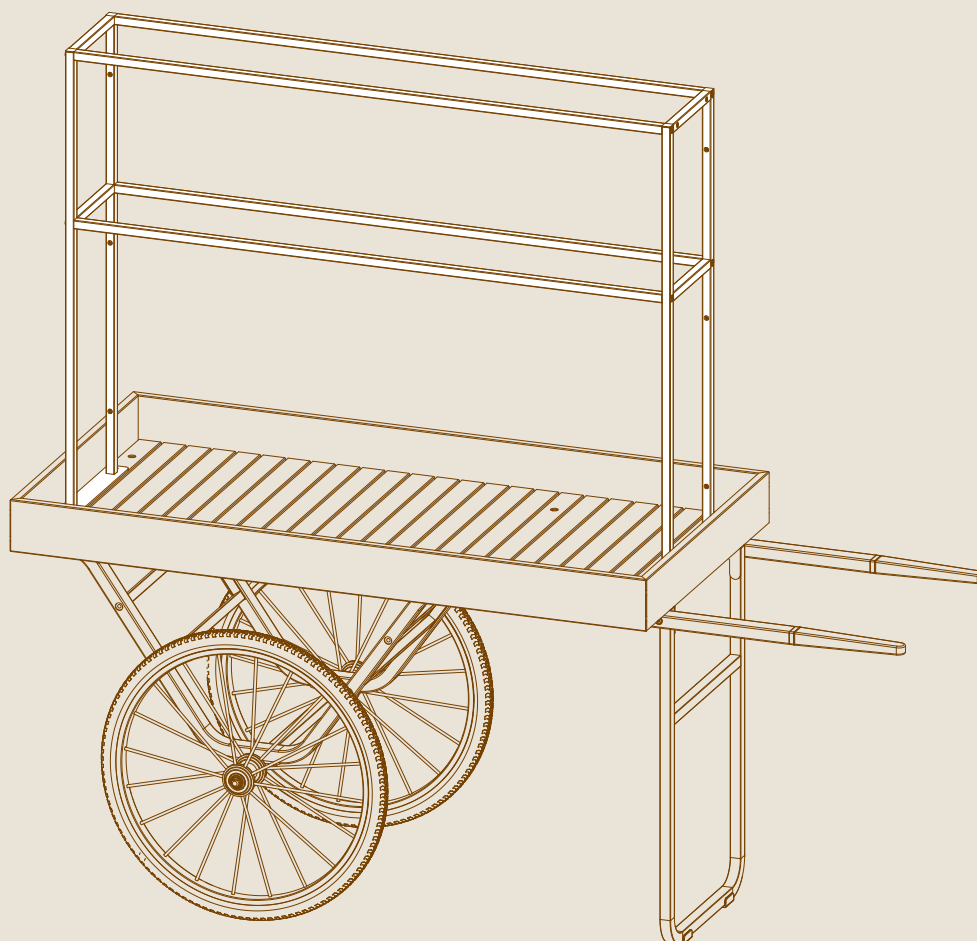

PARTS

X4



SOCKET HEAD
SCREW M6X12 | 0.4"

X8



SOCKET HEAD
SCREW M6-1X30 | 1.2"

X1




SCREWDRIVER BIT
FOR M6 SCREWS

X1




ALLEN KEY FOR
M6 SCREWS

X2

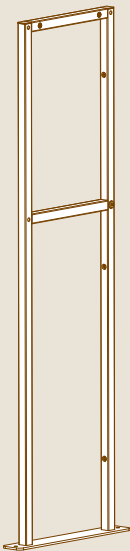

SIDE FRAME

X4

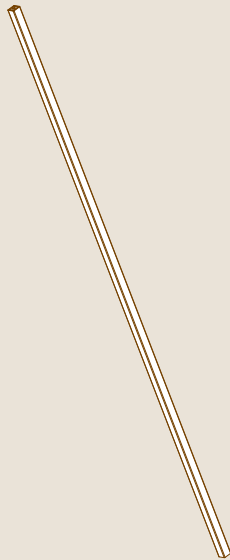

BORDER BAR

ASSEMBLY

- 1

Place both of the side frames in front of each other.


Attach the border bars to side frames as shown

and screw using allen key.


X8



SOCKET HEAD
SCREW M6-1X30

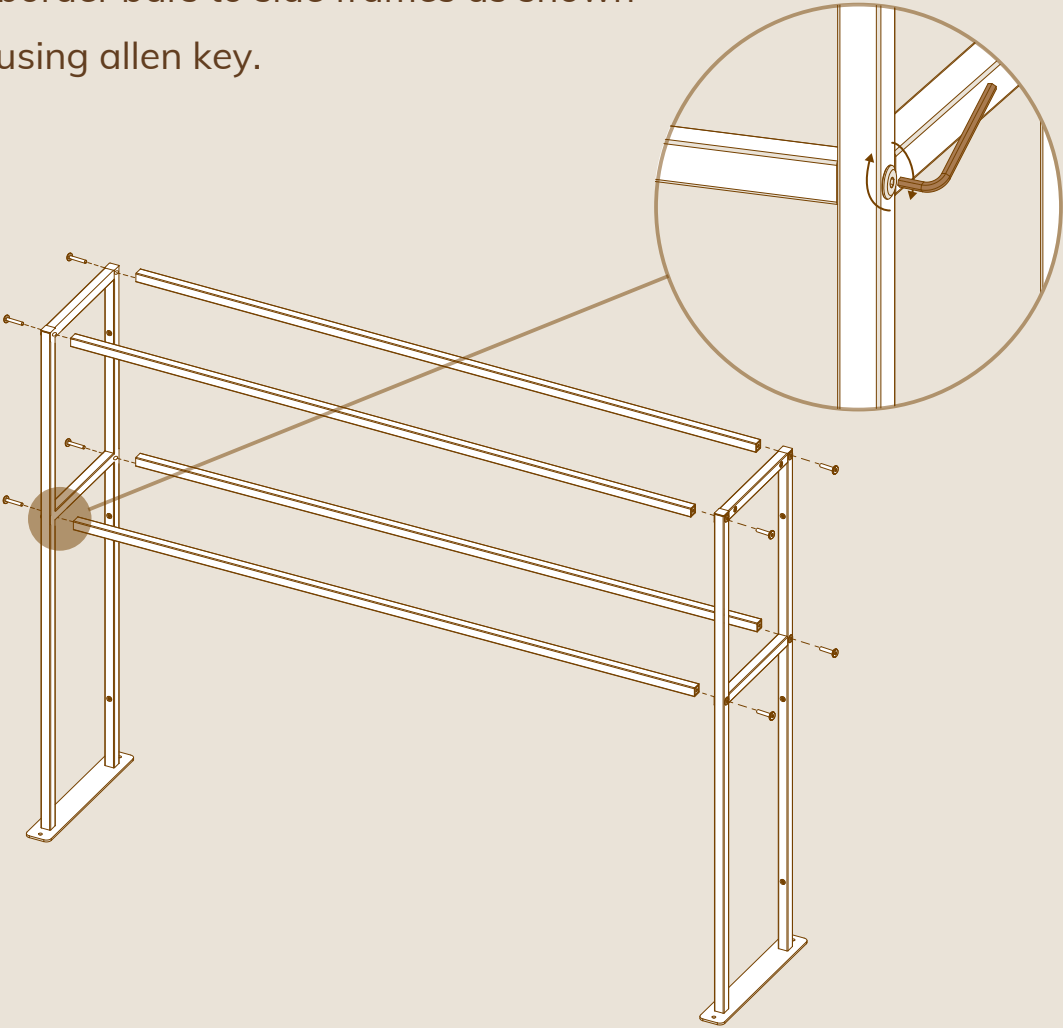


- 2** Remove the 4 existing screws (LOW SOCKET HEAD SCREW M6X12 | 0.4") and use them to attach the shelf frame.

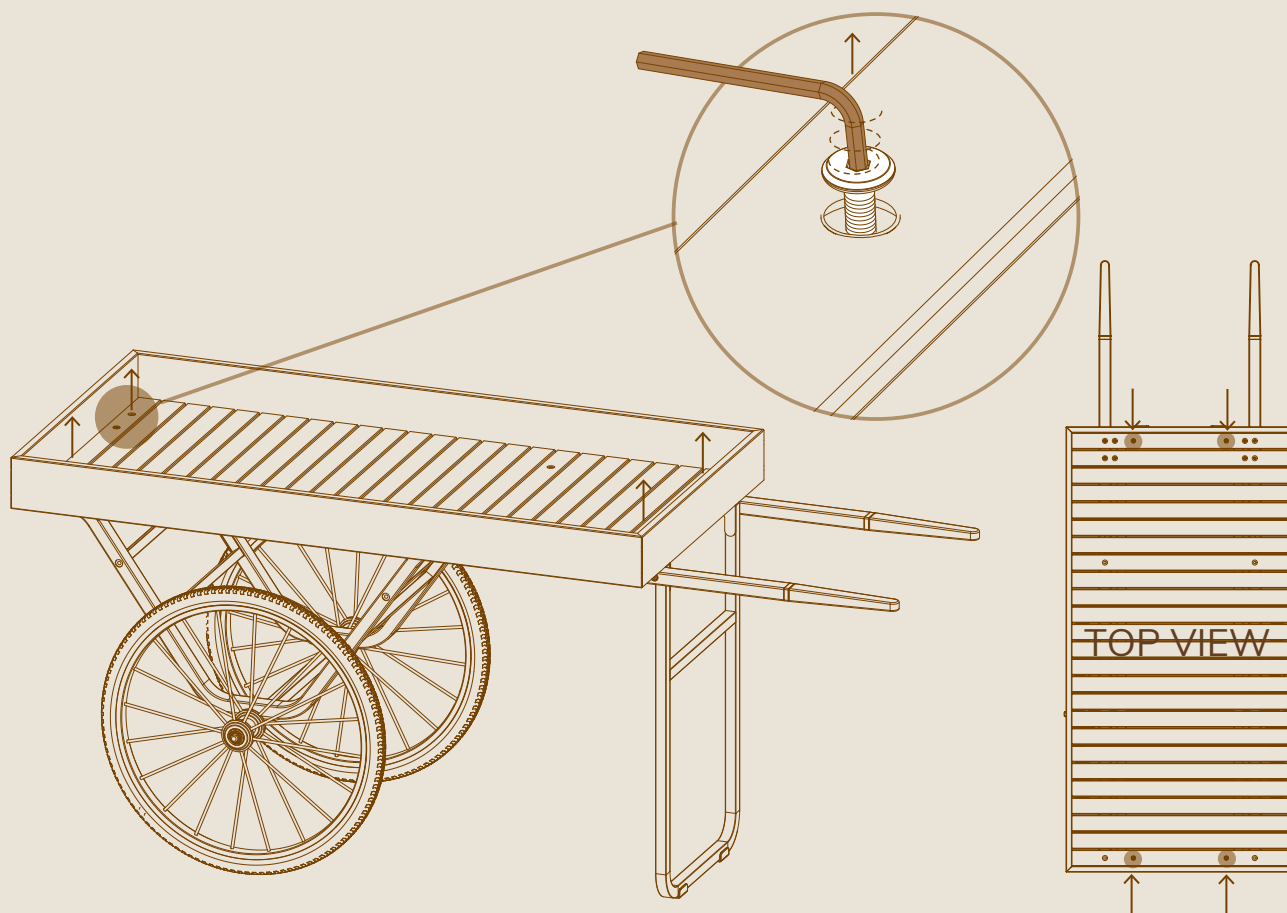


- 3** Place the shelving unit in the cart where the screws were. Use the screws from stage 2 and tighten the shelving unit to the box



SOCKET HEAD
SCREW M6X12 | 0.4"

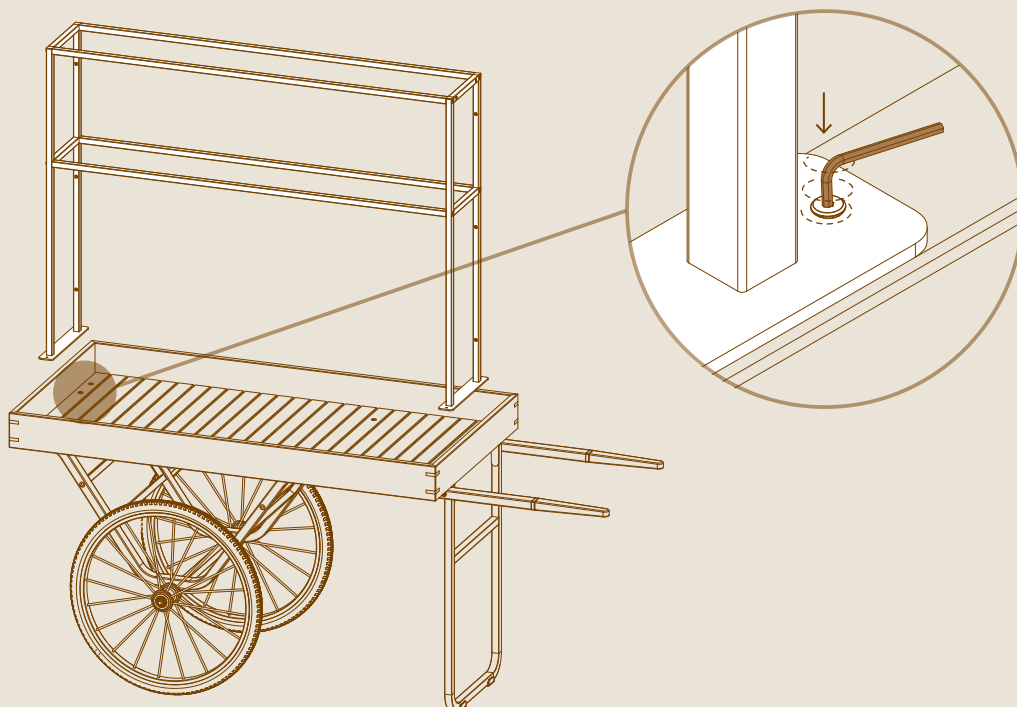

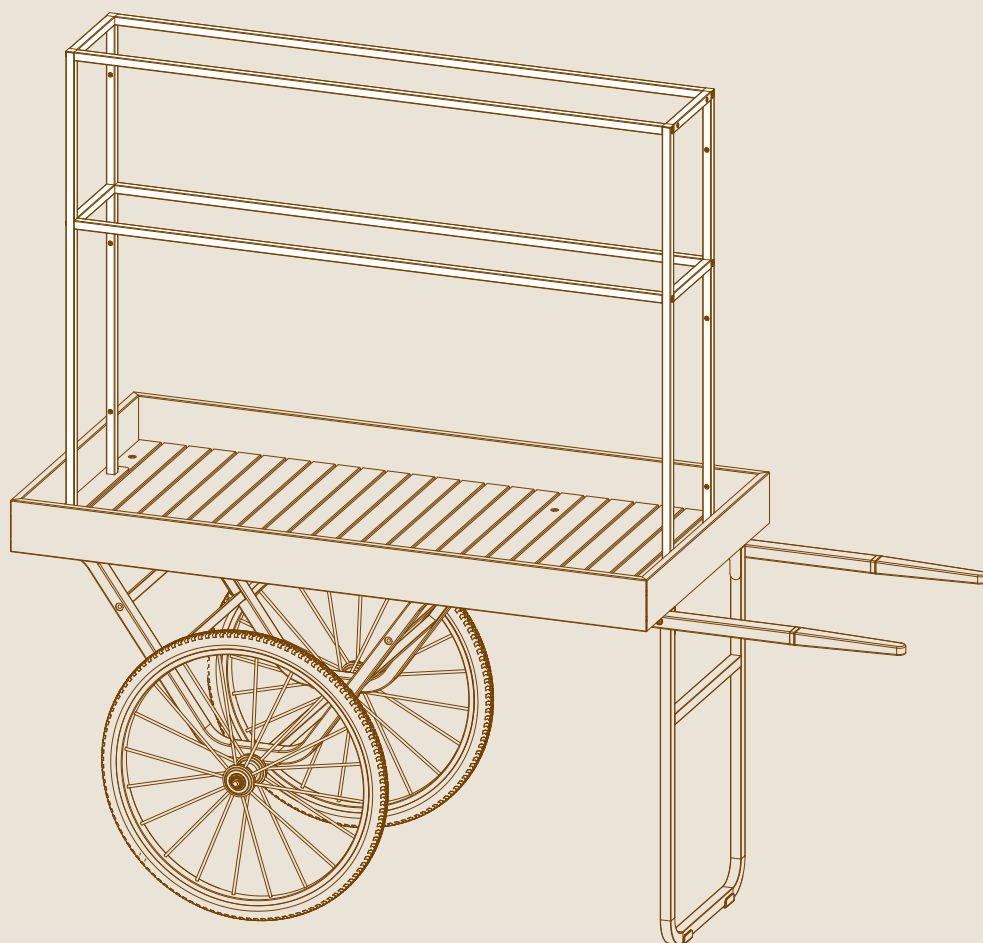

USE THE METAL PINS TO ATTACH SHELVES

