

mogogo

OVAL
SUN UMBRELLA
ASSEMBLY INSTRUCTIONS



PARTS

x1



SUN UMBRELLA

x1




ALLEN KEY FOR
M8 SCREWS

x1



SUN UMBRELLA ADAPTOR

x1




SUN UMBRELLA BASE

ASSEMBLY


1

Remove the front cover before installing the umbrella adaptors.

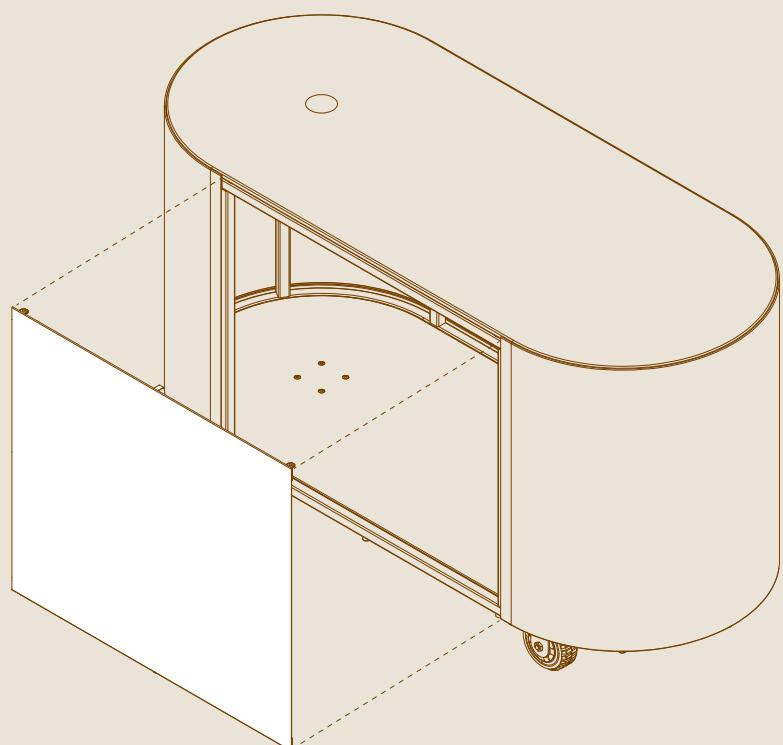


2

Remove the hole cap from your countertop.

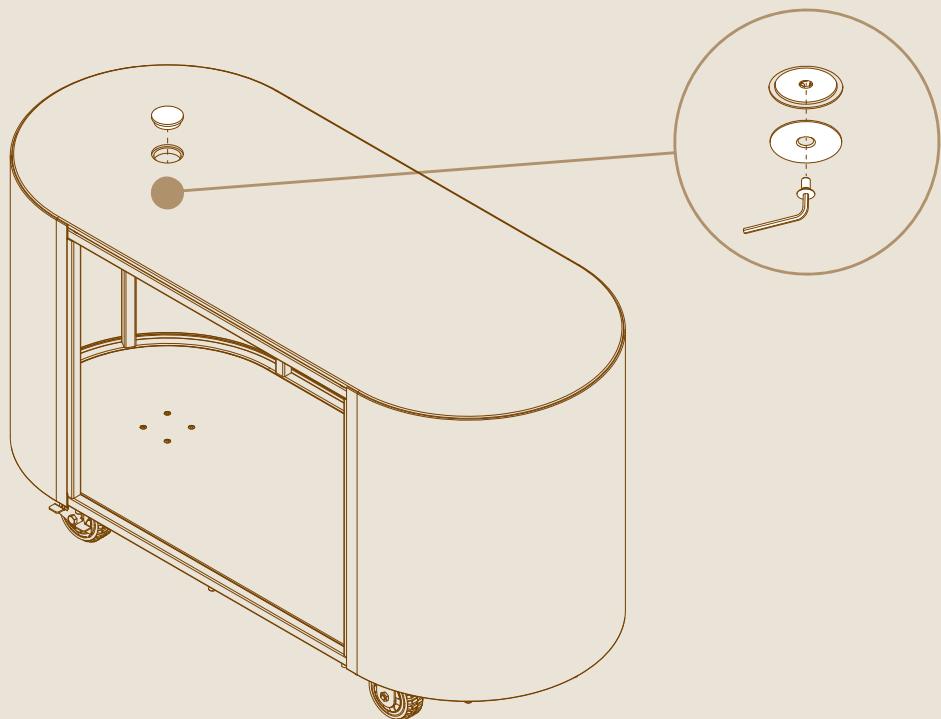

3

Remove the four screws from the cart base panel and use them to screw the umbrella base in place. Insert the rubber adapter into the hole.

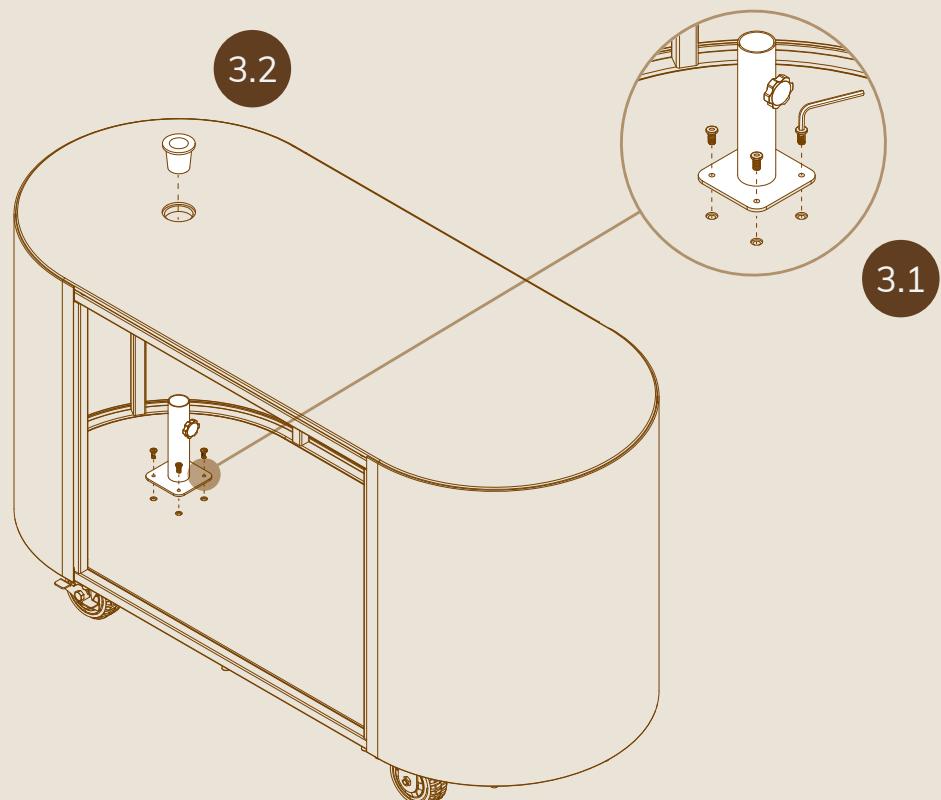

5

Insert the sun umbrella through the adaptor into the base.



GREAT JOB, YOU'RE GOOD TO GO!