


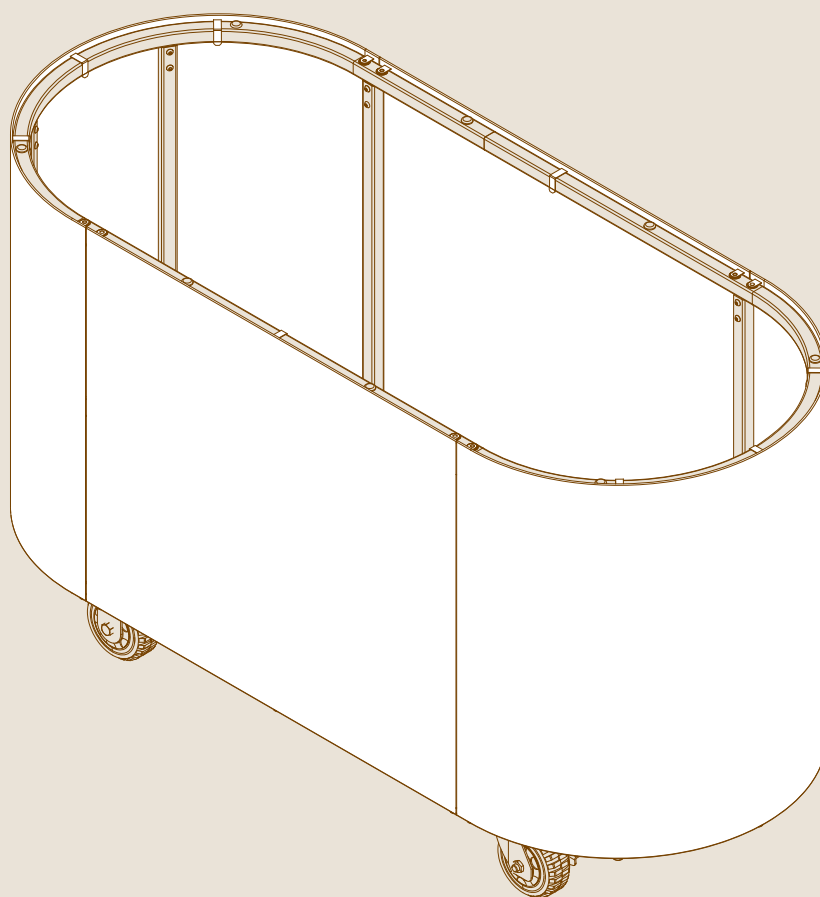


OVAL CART COVERS

ASSEMBLY INSTRUCTIONS




PARTS

x2

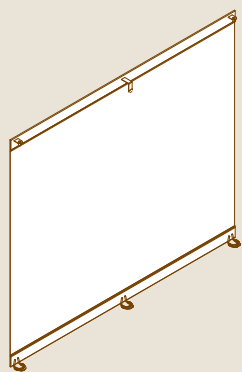

FLAT COVER

x2

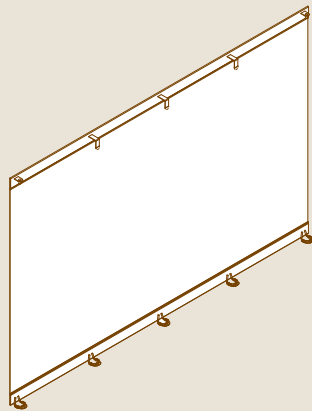


CURVED COVER


ASSEMBLY

1

Make sure that the placement pins are aligned to the **outer** holes of each side.

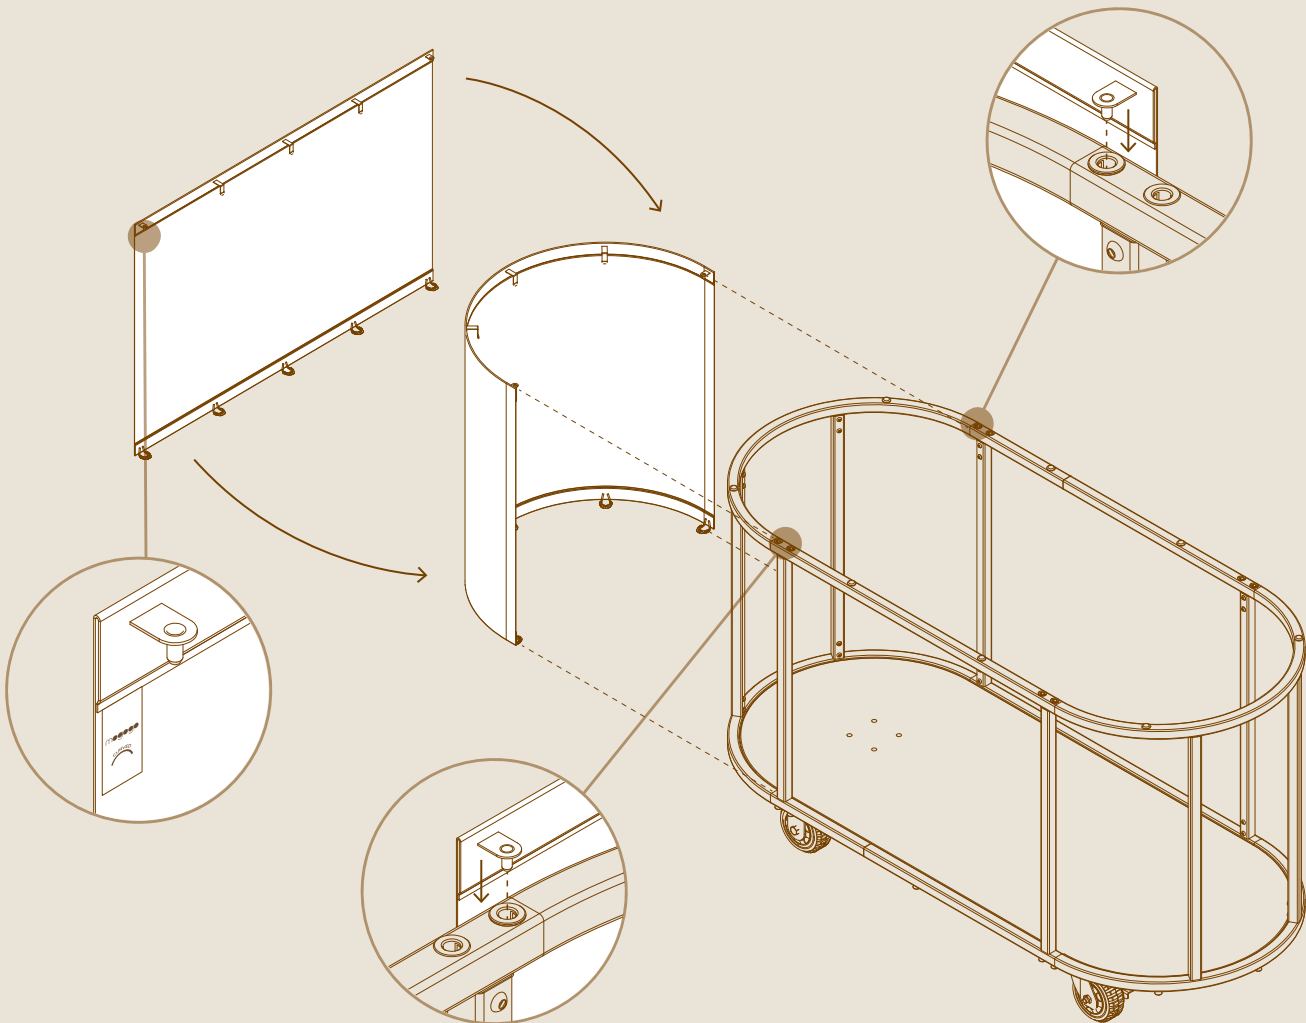


- 2 Use the elastic loop to secure the bottom of the cover in place.

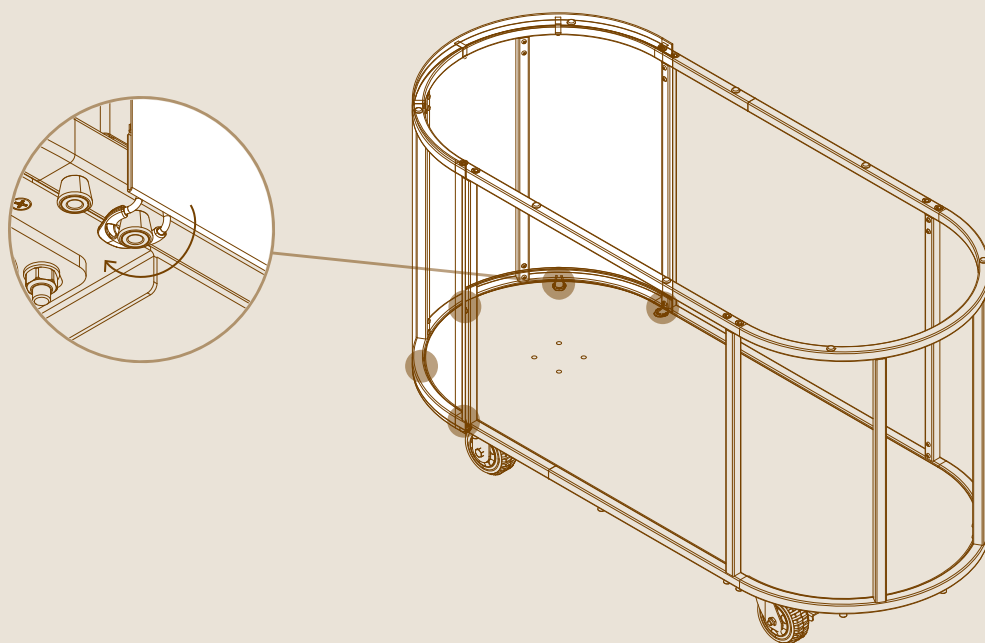


Repeat steps 3 and 4 for the second curved cover.

- 3 Make sure that the placement pins are aligned to the **inner** holes of each side.

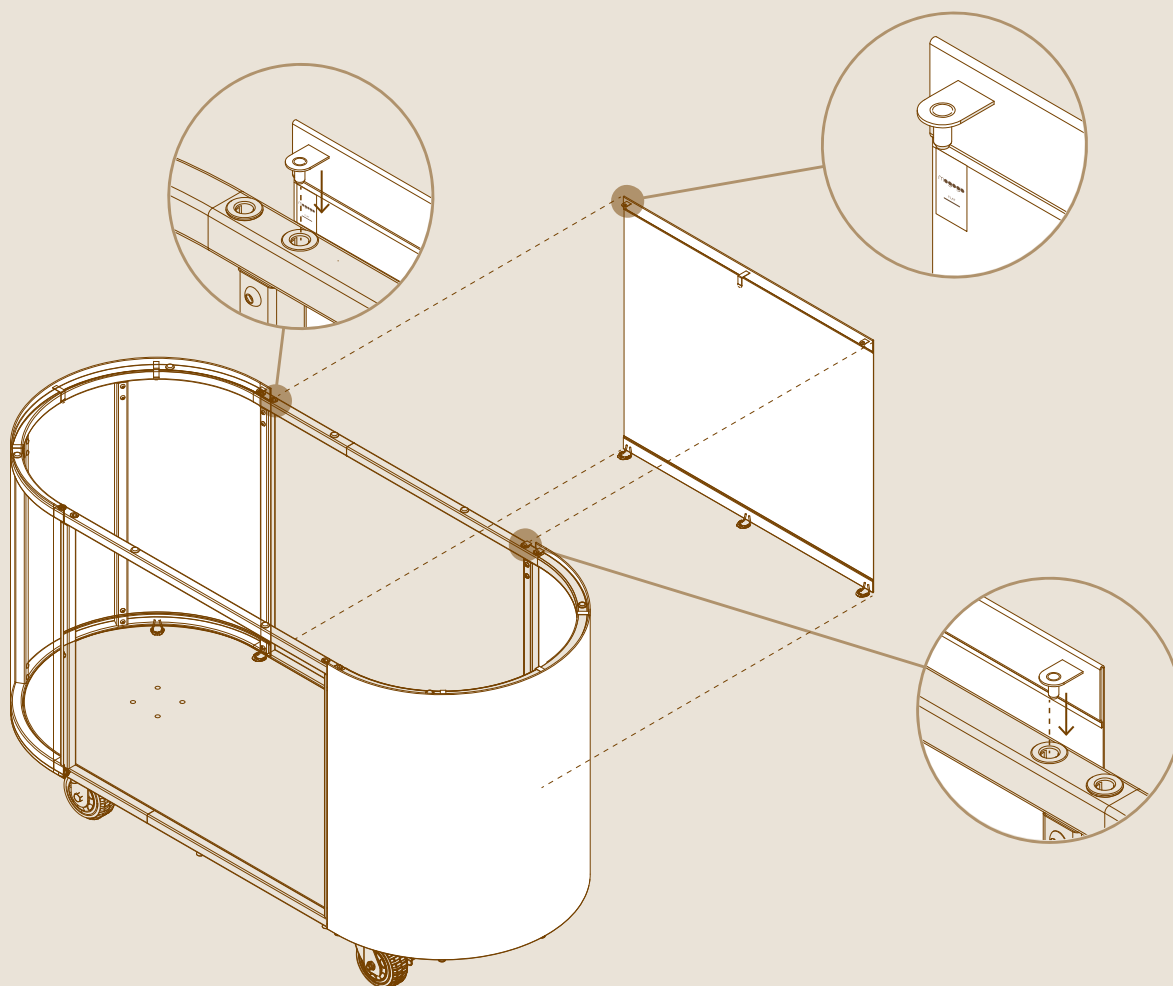


- 5** Use the elastic loop to secure the bottom of the cover in place.

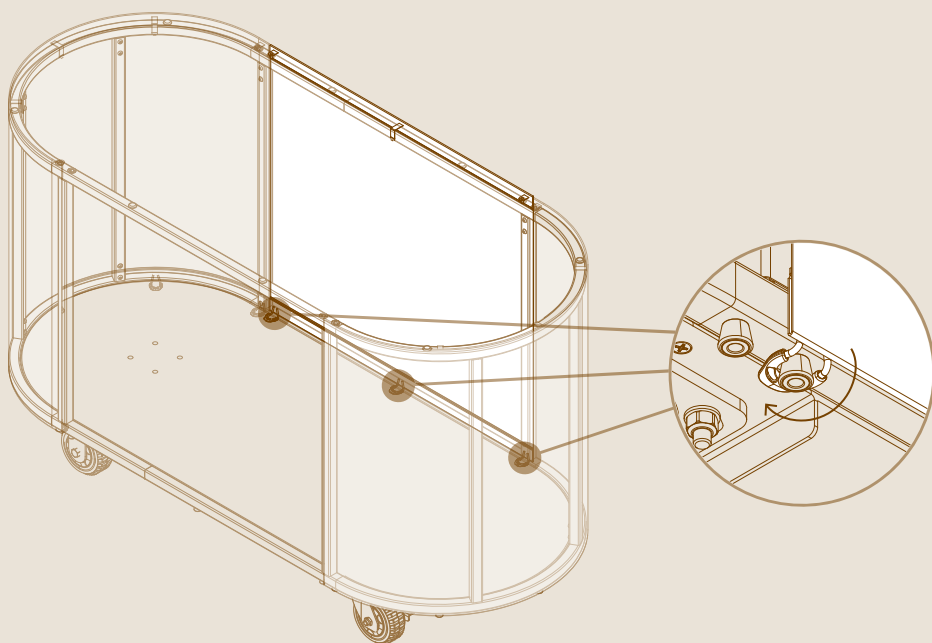

Repeat steps 1 and 2 for the second flat cover.

6

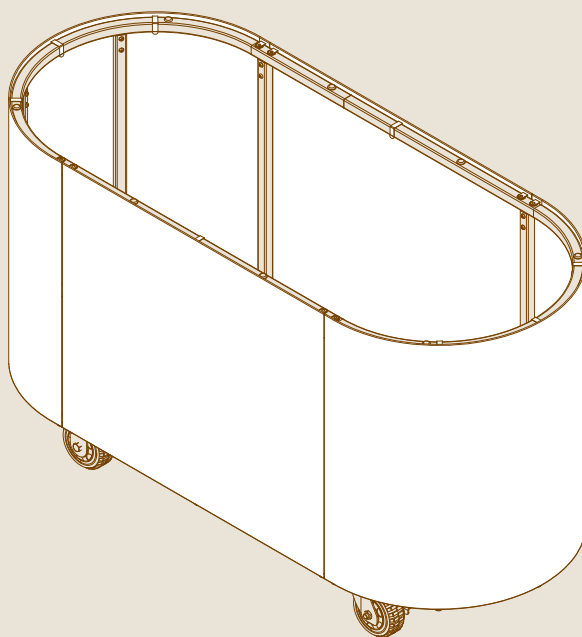

GREAT JOB, YOU'RE GOOD TO GO!